

[Manuals.plus](#) /

› [Tefal](#) /

› TEFAL Express Toaster Instruction Manual

Tefal TT365027

TEFAL Express Toaster Instruction Manual

Model: TT365027

1. SETUP

Before first use, please read these instructions carefully and keep them for future reference.

1.1 Unpacking

Carefully remove the toaster and all packaging materials from the box. Ensure all components are present and undamaged. Dispose of packaging responsibly.

1.2 Placement

Place the toaster on a stable, flat, heat-resistant surface, away from walls, curtains, and other flammable materials. Ensure there is adequate ventilation around the appliance.



Image: The Tefal Express Toaster, showcasing its sleek black and stainless steel design with two wide slots and a bun warmer rack.

1.3 First Use

Before toasting bread for consumption, operate the toaster for one or two cycles at the highest browning setting without any bread inside. This will burn off any manufacturing residues and eliminate initial odors. Ensure the area is well-ventilated during this process.

2. OPERATING INSTRUCTIONS

2.1 Loading Bread

Insert one or two slices of bread into the toasting slots. The slots are designed to accommodate various bread thicknesses.

2.2 Adjusting Browning Control

Rotate the browning control dial located on the front of the toaster to select your desired level of toast. Settings range from 1 (lightest) to 7 (darkest).



Image: A close-up view of the browning control dial on the toaster, clearly showing settings from 1 to 7.

2.3 Starting the Toasting Cycle

Press the carriage lever down until it locks into place. The toasting cycle will begin automatically. The lever will pop up when the toasting cycle is complete.



Image: A hand demonstrating how to lower the carriage lever on the Tefal Express Toaster to start the toasting process.

2.4 Cancel Function

To stop the toasting cycle at any time, press the 'Stop' button located on the side of the toaster. The carriage lever will immediately pop up.

2.5 Defrost Function

For toasting frozen bread, insert the bread and then press the 'Defrost' button (snowflake icon) after lowering the carriage lever. This function automatically adjusts the toasting time for frozen items.

2.6 Reheat Function

To warm up previously toasted bread without further browning, insert the bread and then press the 'Reheat' button (wavy lines icon) after lowering the carriage lever.



Image: A close-up of the toaster's control panel, highlighting the dedicated defrost (snowflake) and reheat (wavy lines) buttons.

2.7 Using the Bun Warmer Accessory

The integrated bun warmer rack can be used to warm croissants, rolls, or pastries. Simply lift the rack into position above the toasting slots. Place the items on the rack and select a low browning setting. Do not place items directly into the toasting slots when using the bun warmer.



Image: The Tefal Express Toaster with its bun warmer rack extended, holding two buns for warming.

3. MAINTENANCE

3.1 Cleaning the Exterior

Always unplug the toaster from the power outlet and allow it to cool completely before cleaning. Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may scratch the stainless steel finish.

3.2 Emptying the Crumb Tray

The crumb tray is located at the bottom of the toaster. Pull it out to remove accumulated crumbs. Empty the tray regularly to prevent crumb buildup and reduce fire risk. Wipe the tray clean with a damp cloth and ensure it is dry before reinserting it into the toaster.



Image: The toaster's removable crumb tray, partially pulled out, showing accumulated crumbs for easy disposal.

3.3 Storage

When not in use, ensure the toaster is unplugged and cool. Store it in a dry place, away from direct sunlight and moisture.

4. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet not working; circuit breaker tripped.	Ensure the toaster is securely plugged into a working power outlet. Check your household circuit breaker.
Bread is stuck in the slots.	Bread slice too large or unevenly cut.	Unplug the toaster and allow it to cool. Carefully remove the bread using non-metallic tongs. Do not use metal utensils.
Uneven toasting.	Inconsistent bread thickness; crumb buildup.	Ensure bread slices are of uniform thickness. Empty the crumb tray regularly.
Smoke coming from toaster.	Crumb buildup; food stuck inside; incorrect browning setting.	Immediately press the 'Stop' button and unplug. Allow to cool, then empty crumb tray and check for any lodged food particles. Reduce browning setting if necessary.

Safety Warning: Never insert metal objects into the toaster slots. Always unplug the toaster before attempting to remove stuck bread.

5. SPECIFICATIONS

Brand: Tefal
Model Number: TT365027
Power/Wattage: 850 Watts

Voltage: 240 Volts

Material: Stainless Steel

Number of Slices: 2

Product Dimensions (L x W x H): 20.2 x 19.9 x 21.4 cm

Item Weight: 2.02 Kilograms

Special Features: Cancel Function, Defrost Function, Reheat Function, Bun Warmer Accessory

6. WARRANTY AND SUPPORT

This TEFAL Express Toaster (Model TT365027) comes with a **2 Years Warranty** from the date of purchase. This warranty covers manufacturing defects under normal household use.

For warranty claims, technical support, or any questions regarding your product, please contact your retailer or the official Tefal customer service in your region. Please retain your proof of purchase for warranty validation.

For more information, you may visit the official Tefal website or refer to the contact details provided in your purchase documentation.

© 2025 Tefal. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07MW9DJP3>

More documents and user manuals: <https://manuals.plus/>