



[Manuals.plus](#) /

› [Publipunto](#) /

› Delicook Programmable Food Processor HOR025MET User Manual

Publipunto HOR025MET

Delicook Programmable Food Processor HOR025MET User Manual

Model: HOR025MET | Brand: Publipunto

[Introduction](#)

[Safety](#)

[Components](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. INTRODUCTION

The Delicook programmable food processor, model HOR025MET, is designed to simplify your cooking experience. This versatile appliance allows you to prepare a wide variety of meals with its 14 pre-set menus and convenient 24-hour programming function. Simply add your ingredients, select the desired cooking program and time, and the Delicook will handle the rest, delivering traditional flavors and textures with minimal effort.

Key features include a 5-liter non-stick pot, an illuminated LED display, and a durable lacquered stainless steel casing. This manual provides essential information for safe operation, setup, maintenance, and troubleshooting to ensure optimal performance of your Delicook food processor.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions carefully before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or the main unit in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.

- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use the appliance for other than intended use.

3. PRODUCT COMPONENTS

Your Delicook food processor comes with several components designed for various cooking tasks. Familiarize yourself with each part before initial use.



Figure 3.1: Delicook Food Processor and Accessories. This image displays the main unit, the removable non-stick inner pot, a metal steaming rack, a plastic measuring cup, and two plastic serving ladles. These are the standard accessories included with the appliance.

1. **Main Unit:** The primary appliance housing the heating element, control panel, and LED display.
2. **Non-Stick Inner Pot:** A 5-liter capacity pot with a golden non-stick coating and a honeycomb textured bottom for optimal heat distribution and flavor preservation.
3. **Steaming Rack:** A metal rack used for steaming food items.
4. **Measuring Cup:** For accurate measurement of ingredients.
5. **Serving Ladles:** Two plastic ladles for serving food.
6. **Power Cord:** Detachable power cord for connecting the appliance to an electrical outlet.

4. SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and accessories from the box.
2. **Initial Cleaning:** Before first use, wash the inner pot, steaming rack, measuring cup, and ladles with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the Delicook food processor on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure there is adequate ventilation around the appliance.
4. **Insert Inner Pot:** Place the clean, dry non-stick inner pot into the main unit, ensuring it sits correctly and is level.
5. **Connect Power:** Plug the power cord into the appliance, then into a grounded 220V electrical outlet. The LED display will illuminate, indicating the appliance is ready for use.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Overview



Figure 5.1: Delicook Control Panel. This image shows the front of the Delicook food processor, highlighting the central LED display and the surrounding buttons for various cooking functions and settings.

The control panel features an illuminated LED display and various buttons for selecting cooking functions, adjusting time, and setting programming options.

- **LED Display:** Shows cooking time, temperature, and program status.
- **MENU Button:** Cycles through the 14 available cooking programs.
- **TEMP Button:** Adjusts cooking temperature (where applicable).
- **HORA (Hour) / MIN (Minute) Buttons:** Used to set cooking time or delay start time.

- **PROG (Program) Button:** Activates the 24-hour delay start function.
- **CANCEL Button:** Stops the current program or clears settings.
- **START Button:** Initiates the selected cooking program.

5.2 Cooking Programs (14 Menus)

The Delicook offers 14 distinct cooking programs to cater to a wide range of recipes:

- **Stews (Guisos):** For slow-cooked dishes and casseroles.
- **Soups (Sopas):** Ideal for various soup preparations.
- **Rice (Arroz):** Perfect for cooking different types of rice.
- **Pasta (Pasta):** For boiling pasta to perfection.
- **Steamed (Vapor):** For healthy steaming of vegetables, fish, etc.
- **Reheat (Recalentar):** Maintains food quality, texture, and taste without altering them.
- **Simmer (Mijoter):** For gentle, long-duration cooking.
- **Baked (Horno):** Functions like a traditional oven, reaching up to 180 degrees Celsius.
- **Fried (Fritos):** For frying various foods.
- **Grilled (Plancha):** For grilling meats and vegetables.
- **Desserts (Postres):** Specific settings for sweet preparations.
- **Yogurt (Yogurt):** For making homemade yogurt.
- **Sterilizing (Esterilizar):** For sterilizing food items.
- **Slow Cook (Fuego Lento):** Emulates traditional slow-cooking methods that require extended time.



Figure 5.2: Culinary Versatility. This image visually represents the wide range of dishes that can be prepared using the Delicook food processor, from soups and stews to pasta, rice, and baked goods.

5.3 General Cooking Procedure

1. **Prepare Ingredients:** Measure and prepare all necessary ingredients according to your recipe.
2. **Add Ingredients:** Place the prepared ingredients into the non-stick inner pot. Ensure the pot is properly seated in the main unit.
3. **Select Menu:** Press the **MENU** button repeatedly until the desired cooking program is selected. The corresponding indicator light will illuminate.
4. **Adjust Time/Temperature:** Use the **HORA** and **MIN** buttons to set the cooking time. For certain programs, you may also adjust the temperature using the **TEMP** button.
5. **Start Cooking:** Press the **START** button to begin the cooking process. The LED display will show the remaining cooking time.
6. **Keep Warm Function:** Once cooking is complete, the appliance will automatically switch to a "Keep Warm" mode, maintaining the food at approximately 60 degrees Celsius until you are ready to serve.

5.4 24-Hour Programmable Delay Start

The Delicook allows you to program a delayed start for your cooking, up to 24 hours in advance. This feature is ideal for having meals ready at a specific time.

1. **Prepare and Load:** Add all ingredients to the inner pot.
2. **Select Menu:** Choose your desired cooking program using the **MENU** button.
3. **Set Cooking Time:** Adjust the cooking duration using the **HORA** and **MIN** buttons.
4. **Activate Program Delay:** Press the **PROG** button. The display will show a default delay time.
5. **Set Delay Time:** Use the **HORA** and **MIN** buttons to set the desired delay time (the number of hours until cooking should *start*). For example, if it's 8 AM and you want to eat at 2 PM (14:00), you would set a 6-hour delay.
6. **Confirm:** Press the **START** button. The appliance will count down the delay time, then automatically begin cooking.

Note: When using the delay start function, ensure that ingredients are suitable for sitting at room temperature for the programmed duration to prevent spoilage.

6. CLEANING AND MAINTENANCE

Regular cleaning and proper maintenance will extend the life of your Delicook food processor and ensure optimal performance.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Inner Pot:** The non-stick inner pot is dishwasher safe for easy cleaning. Alternatively, wash it with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely before storing or next use.
3. **Accessories:** The steaming rack, measuring cup, and ladles are also dishwasher safe or can be hand-washed with warm, soapy water.
4. **Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the main unit in water or any other liquid.
5. **Storage:** Ensure all parts are clean and dry before storing. Store the appliance in a cool, dry place.

7. TROUBLESHOOTING GUIDE

If you encounter any issues with your Delicook food processor, refer to the following table for common problems and their solutions.

Problem	Possible Cause	Solution
Appliance does not power on.	Not plugged in; power outlet malfunction; damaged cord.	Ensure the power cord is securely plugged into both the appliance and a working electrical outlet. Test the outlet with another device. If the cord is damaged, contact customer support.
Food is not cooking properly.	Incorrect program selected; insufficient cooking time; lid not properly closed.	Verify that the correct cooking program and time have been selected. Ensure the lid is securely closed. Adjust cooking time if necessary.

Problem	Possible Cause	Solution
Delay start function not working.	Incorrect delay time set; START button not pressed after setting delay.	Double-check the programmed delay time. Ensure you press the START button after setting the delay to activate the countdown.
Food sticks to the inner pot.	Insufficient oil/liquid; high heat for too long; damaged non-stick coating.	Ensure adequate oil or liquid is used for cooking. Avoid using metal utensils that can scratch the non-stick coating. If coating is severely damaged, consider replacing the pot.

If the problem persists after trying these solutions, please contact customer support.

8. PRODUCT SPECIFICATIONS

Model Number	HOR025MET
Brand	Publipunto
Capacity	5 Liters
Power	900 Watts
Voltage	220 Volts
Material	Stainless Steel, Plastic
Dimensions (L x W x H)	31 x 26 x 26 cm
Weight	3.37 Kilograms
Automatic Shut-off	Yes
Number of Cooking Programs	14
Dishwasher Safe Parts	Inner pot, accessories

9. WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty against defects in materials and workmanship. The specific terms and duration of the warranty may vary by region and retailer. Please retain your proof of purchase for warranty claims.

For technical support, warranty service, or to inquire about replacement parts, please contact the retailer where you purchased the product or refer to the contact information provided by Publipunto in your product packaging.

Note: Information regarding spare parts availability is currently unavailable. Please contact customer support for further assistance.

