

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [BLACK+DECKER](#) /
- › [BLACK+DECKER 7-Inch Portable Turbo Fan User Manual](#)

BLACK+DECKER BFTU107

BLACK+DECKER 7-Inch Portable Turbo Fan User Manual

Model: BFTU107
Brand: BLACK+DECKER

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your BLACK+DECKER 7-Inch Portable Turbo Fan, Model BFTU107. Please read this manual thoroughly before use and retain it for future reference.

The BLACK+DECKER 7-inch turbo fan is designed for personal cooling and increased airflow in various indoor settings such as bedrooms, offices, or garages. Its compact and lightweight design allows for easy portability and placement on desktops, tables, or counters.



The BLACK+DECKER 7-Inch Portable Turbo Fan is designed for efficient personal cooling.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the fan is placed on a stable, flat surface to prevent tipping.
- Do not insert fingers or foreign objects into the grille while the fan is operating.
- Unplug the fan from the power outlet before cleaning or performing any maintenance.
- Do not operate the fan with a damaged cord or plug.
- Keep the power cord away from heated surfaces.
- This fan is intended for indoor use only. Do not use outdoors or in wet locations.
- Do not attempt to repair or disassemble the fan yourself. Refer all servicing to qualified service personnel.

WHAT'S INCLUDED

- 1 x BLACK+DECKER 7-Inch Portable Turbo Fan (Model BFTU107)
- 1 x User Manual (this document)

SETUP

1. Remove the fan and all packaging materials from the box.
2. Place the fan on a stable, flat surface where you desire airflow.
3. Ensure the fan is positioned away from curtains or other objects that could be drawn into the fan blades.
4. Plug the 6 ft. power cord into a standard electrical outlet (NEMA 1-15 or NEMA 5-15 plug).

Easy-to-Use

No assembly is required



The BLACK+DECKER 7-Inch Portable Turbo Fan requires no assembly and is ready for use right out of the box.

OPERATING INSTRUCTIONS

Your BLACK+DECKER Turbo Fan features a simple control knob for easy operation.

Power On/Off and Speed Selection:

1. Locate the control knob on the back of the fan.
2. Turn the knob clockwise to select your desired speed setting:
 - **1-Low:** For gentle air circulation.
 - **2-Medium:** For moderate airflow.
 - **3-High:** For maximum cooling and air movement.
3. To turn the fan off, turn the knob counter-clockwise to the "OFF" position.

Adjusting Airflow Direction:

The fan head features an adjustable 90° tilt angle, allowing you to direct the airflow precisely where needed.

1. Gently hold the fan body and tilt the fan head up or down to achieve the desired angle.
2. The fan will remain in the set position.

3 Speed Settings

Easy to use Dial



1-Low



2-Medium



3-High



The fan features a simple dial for selecting between Low, Medium, and High speeds.

90° Tilt Angle

Easy-to-Use



The fan head can be tilted up to 90 degrees to direct airflow.

MAINTENANCE

Regular cleaning will help maintain the performance and longevity of your fan.

- Always unplug the fan before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the fan.

- Do not use abrasive cleaners or solvents, as they may damage the fan's finish.
- For cleaning the fan blades, use a vacuum cleaner with a brush attachment or a soft, dry cloth to remove dust from the grilles.
- Ensure the fan is completely dry before plugging it back in.
- The fan is designed for easy cleaning; the care instructions specify "Hand Wash" for general cleaning.

TROUBLESHOOTING

If your fan is not operating as expected, please check the following common issues before contacting support:

Problem	Possible Cause	Solution
Fan does not turn on.	Not plugged in; power outlet not working; control knob not set to a speed.	Ensure the power cord is securely plugged into a working outlet. Turn the control knob to a speed setting (1, 2, or 3).
Weak airflow.	Fan set to low speed; grilles are dusty.	Increase the speed setting using the control knob. Clean the fan grilles and blades as per the Maintenance section.
Unusual noise.	Fan not on a stable surface; foreign object in fan.	Place the fan on a stable, flat surface. Unplug the fan and carefully check for any obstructions in the blades or grilles.

SPECIFICATIONS

Feature	Detail
Brand	BLACK+DECKER
Model Name	7-Inch Portable Turbo Fan
Model Number	BFTU107
Color	Black
Product Dimensions (D x W x H)	6.1"D x 10.7"W x 10.9"H
Item Weight	3 Pounds
Power Source	Corded Electric
Wattage	21 watts
Voltage	5V
Number of Blades	3
Blade Length / Diameter	7 Inches

Feature	Detail
Control Method	Rotary Knob
Number of Power Levels	3
Special Features	Portable, Adjustable Tilt (90°)
Indoor/Outdoor Usage	Indoor



Detailed dimensions of the fan for easy placement.

WARRANTY

Your BLACK+DECKER 7-Inch Portable Turbo Fan is covered by a **1-year limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

For detailed warranty terms and conditions, please refer to the official user manual or contact BLACK+DECKER customer support.

SUPPORT

For further assistance, product information, or to download the official user manual in PDF format, please visit the BLACK+DECKER website or refer to the link below:

[Download Official User Manual \(PDF\)](#)