

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Disney](#) /

› [Disney Junior Hot Dog Dance Break Mickey Mouse Interactive Plush Toy Instruction Manual](#)

## Disney 30061

# Disney Junior Hot Dog Dance Break Mickey Mouse Interactive Plush Toy Instruction Manual

Model: 30061

## INTRODUCTION

---

Welcome to the world of Disney Junior's Hot Dog Dance Break Mickey Mouse! This interactive plush toy is designed to bring joy and engagement through songs, dances, and fun games. Please read this manual carefully to ensure proper setup and operation, providing a safe and enjoyable experience.



Image: The Hot Dog Dance Break Mickey Mouse plush toy, featuring a blue shirt with a colorful Mickey silhouette, red shorts, and blue shoes. His ears light up with colorful patterns.

## SAFETY INFORMATION

- **Age Recommendation:** Suitable for children aged 36 months to 10 years.
- **Battery Safety:** Use only the specified battery type (4 x AA). Do not mix old and new batteries, or different types of batteries. Insert batteries with correct polarity. Remove exhausted batteries promptly.
- **Supervision:** Adult supervision is recommended during play, especially during initial setup and battery changes.

- **Choking Hazard:** This product may contain small pieces. Keep away from very young children if any parts become loose.
- **Cleaning:** Refer to the maintenance section for proper cleaning instructions. Do not immerse in water.

## SETUP

### 1. Battery Installation

1. Locate the battery compartment on the bottom of Mickey's feet.
2. Using a Phillips head screwdriver, open the battery compartment cover.
3. Insert 4 x AA batteries, ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.



Image: The base of Mickey's feet, where the battery compartment is located. The on/off switch is visible.

### 2. Power On/Off

After installing batteries, locate the ON/OFF switch on the bottom of Mickey's foot (near the battery compartment). Slide the switch to the "ON" position to activate the toy.

## OPERATING INSTRUCTIONS

Mickey Mouse features multiple interactive modes. To switch between modes, press the "Try Me" button located on Mickey's left hand.





Image: Mickey's left hand, showing the "Try Me" button for activating different play modes.

### **1. Hot Dog Song & Dance Mode**

Press Mickey's left hand once to activate the Hot Dog Song & Dance mode. Mickey will sing a new remix version of the "Hot Dog Song" and perform fun dance movements. His ears will light up to the beat. To stop the song and dance, press his left hand again.

Your browser does not support the video tag.

Video: Official product video demonstrating the Hot Dog Dance Break Mickey in action, showcasing its dancing and light-up features.

### **2. Red Light, Green Light Game**

Press Mickey's left hand a second time to enter the Red Light, Green Light game mode. Mickey will play music and dance. When his ears flash red, the music stops, and players must freeze in place. When his ears flash green, the music resumes, and players can move again. Follow Mickey's instructions for a fun game.

### **3. Color Detective Game**

Press Mickey's left hand a third time to activate the Color Detective game. Mickey will give clues about a color he is thinking of. Listen carefully and try to guess the color. His ears will light up with various colors during this game.



Image: Mickey Mouse's ears displaying vibrant light patterns, a key feature during interactive play modes.

## MAINTENANCE

### Cleaning Instructions

- Wipe the surface of the plush toy with a damp cloth and mild soap.
- Do not submerge Mickey Mouse in water, as this can damage the electronic components.
- Allow the toy to air dry completely before storing or further play.

## Battery Replacement

When the toy's sounds become distorted or movements slow down, it's time to replace the batteries. Follow the battery installation steps in the "Setup" section.

## TROUBLESHOOTING

Problem	Solution
Mickey is not responding.	<ol style="list-style-type: none"><li>1. Ensure the ON/OFF switch is in the "ON" position.</li><li>2. Check if the batteries are correctly installed and not depleted. Replace if necessary.</li><li>3. Press the "Try Me" button firmly on his left hand.</li></ol>
Lights on ears are not working.	<ol style="list-style-type: none"><li>1. Check battery levels and replace if low.</li><li>2. Ensure the toy is in an active mode (song or game).</li></ol>
Sound is distorted or too low.	<ol style="list-style-type: none"><li>1. Replace the batteries with fresh ones.</li></ol>

## SPECIFICATIONS

- **Model Number:** 30061
- **Product Dimensions:** 14.25 x 6.75 x 16 inches
- **Item Weight:** 1.83 pounds
- **Recommended Age:** 36 months - 10 years
- **Batteries:** 4 x AA batteries (included)
- **Manufacturer:** Just Play

## WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official Just Play website. Keep your purchase receipt as proof of purchase.