



Manuals.plus /

› Home Master /

› Home Master HM-760 10 Liter Electric Pressure Pot User Manual

Home Master HM-760

Home Master HM-760 10 Liter Electric Pressure Pot User Manual

Model: HM-760 | Brand: Home Master

1. INTRODUCTION

Thank you for choosing the Home Master HM-760 10 Liter Electric Pressure Pot. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read all instructions carefully before use and retain this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: Failure to follow these safety instructions may result in fire, electric shock, serious injury, or property damage.

- Always ensure the lid is properly closed and locked before operating.
- Do not fill the pot beyond the MAX fill line to prevent overflow and pressure buildup.
- Keep hands and face clear of the steam release valve during operation and when releasing pressure.
- Do not immerse the main unit in water or other liquids. Clean with a damp cloth only.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Use only genuine Home Master replacement parts and accessories.

3. PRODUCT OVERVIEW

The Home Master HM-760 is a versatile 10-liter electric pressure pot designed for efficient cooking. It features a user-friendly control panel with a digital display and various preset functions.



An image showing the Home Master HM-760 10 Liter Electric Pressure Pot. The front features a digital display and various function buttons for cooking different food types, along with time adjustment controls. The display shows '8.8:8.8', indicating its digital nature, and buttons for 'Clock settings', 'Time for all', 'Time for more', and 'Comprehensive hand' (likely referring to manual or specific cooking functions) are visible.

Components:

- Main Unit with Heating Element
- Removable Inner Pot (10 Liter capacity)
- Lid with Sealing Ring and Pressure Release Valve
- Control Panel with Digital Display
- Power Cord

4. SETUP AND FIRST USE

4.1 Unpacking

1. Remove all packaging materials and promotional labels.
2. Check that all components are present and undamaged.

4.2 Initial Cleaning

1. Wash the inner pot, lid, and sealing ring with warm, soapy water. Rinse thoroughly and dry completely.
2. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.

4.3 Placement

Place the pressure pot on a stable, level, heat-resistant surface, away from heat sources and flammable materials. Ensure adequate ventilation around the appliance.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation

1. **Add Ingredients:** Place the desired ingredients and liquid into the inner pot. Ensure the liquid level is above the minimum fill line and below the maximum fill line.
2. **Close Lid:** Place the lid on the pot, aligning the arrow on the lid with the arrow on the base. Rotate the lid clockwise until it locks into place. Ensure the pressure release valve is in the 'Sealing' position.
3. **Select Program:** Plug in the power cord. The digital display will illuminate. Use the control panel buttons to select your desired cooking program (e.g., Rice, Soup, Meat, etc.).
4. **Adjust Time (if necessary):** If the selected program allows, use the '+' and '-' buttons to adjust the cooking time.
5. **Start Cooking:** The pot will automatically begin preheating and building pressure. Once pressure is reached, the cooking timer will start counting down.
6. **Pressure Release:** Once cooking is complete, the pot will beep. You can choose to:
 - **Natural Release:** Allow the pressure to dissipate naturally. This is recommended for foamy foods or large cuts of meat.
 - **Quick Release:** Carefully turn the pressure release valve to the 'Venting' position. Keep hands and face away from the steam.
7. **Open Lid:** Once the float valve drops, indicating all pressure has been released, rotate the lid counter-clockwise and lift it carefully away from your face.

5.2 Keep Warm Function

After cooking, the appliance may automatically switch to a 'Keep Warm' mode. Refer to the control panel for specific indicators and how to cancel this function if not desired.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Home Master Electric Pressure Pot.

6.1 Cleaning

1. **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Inner Pot:** The inner pot is dishwasher safe. Alternatively, wash with warm, soapy water and a non-abrasive sponge.
3. **Lid:** Remove the sealing ring and wash the lid, sealing ring, and steam release valve with warm, soapy water. Ensure all food particles are removed. The sealing ring should be reinstalled correctly after cleaning.

4. **Main Unit:** Wipe the exterior of the main unit with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Never immerse the main unit in water.

6.2 Storage

Ensure all parts are clean and dry before storing. Store the pressure pot in a cool, dry place. You may place the lid upside down on the inner pot to prevent the sealing ring from compressing permanently.

7. TROUBLESHOOTING

If you encounter issues with your pressure pot, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Pot not building pressure	Lid not properly closed; Sealing ring not installed correctly; Pressure release valve in 'Venting' position.	Ensure lid is locked; Check sealing ring placement; Turn valve to 'Sealing' position.
Steam leaking from lid	Sealing ring dirty or damaged; Food debris on lid rim.	Clean or replace sealing ring; Clean lid rim thoroughly.
Food not cooking properly	Insufficient liquid; Incorrect cooking time/program selected.	Add more liquid; Adjust cooking time or select appropriate program.
Display shows error code	Specific internal issue.	Refer to specific error code in a more detailed manual (if available) or contact customer support.

If the problem persists after attempting these solutions, please contact Home Master customer support.

8. SPECIFICATIONS

- **Brand:** Home Master
- **Model Number:** HM-760
- **Capacity:** 10 Liters
- **Material:** Mixed (Inner pot likely stainless steel/non-stick, exterior mixed)
- **Color:** Multi Color
- **Item Weight:** 8.2 Kilograms
- **Package Dimensions:** 39 x 38.5 x 37.5 cm
- **Control Method:** Touch
- **Operation Mode:** Automatic
- **Dishwasher Safe:** Yes (Inner Pot and Lid components, not main unit)

9. WARRANTY AND SUPPORT

Home Master products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Home Master

website. For technical support or service inquiries, please contact Home Master customer service through their official channels.