

wanjiale 4-Button Remote Control Transmitter

wanjiale 4-Button Remote Control Transmitter

USER MANUAL

1. Introduction

This manual provides essential instructions for the proper setup, operation, and maintenance of your wanjiale 4-Button Remote Control Transmitter. This device is designed to work with compatible remote switches, offering convenient wireless control. Please read this manual thoroughly before using the product to ensure safe and efficient operation.

2. Safety Information

- Keep the device away from water and excessive moisture.
- Do not attempt to disassemble or modify the transmitter. This may void the warranty and cause damage.
- Ensure the correct battery type and polarity are used during installation.
- Dispose of used batteries according to local regulations.
- This device is intended for use with compatible remote switches only.

3. Product Overview

The wanjiale 4-Button Remote Control Transmitter is a compact, ergonomic device designed for long-range wireless control. It features four distinct buttons for controlling various functions of a compatible remote switch.



Image: The wanjiale 4-Button Remote Control Transmitter. This white remote features an extendable antenna at the top and four gray oval buttons labeled 'A', 'B', 'C', and 'D' arranged vertically on its face. Below the buttons, the text 'DIGITAL REMOTE CONTROLLER' is visible. An indicator light is located above the buttons.

The transmitter includes:

- Four control buttons (A, B, C, D)
- An indicator light (typically illuminates during transmission)
- An extendable antenna for enhanced range
- Battery compartment (located on the back)

4. Setup

4.1 Battery Installation

1. Locate the battery compartment cover on the back of the transmitter.
2. Slide or gently pry open the cover.
3. Insert one DC12V 23A battery, ensuring correct polarity (+ and - terminals match the markings inside the compartment).

4. Replace the battery compartment cover securely.

4.2 Pairing with a Receiver

This transmitter is designed to work with a compatible remote switch receiver. The pairing process typically involves the following general steps. Refer to your receiver's specific instruction manual for detailed pairing procedures:

1. Ensure the receiver is powered on and in pairing mode (often indicated by an LED).
2. Press and hold the designated pairing button on the receiver (if applicable).
3. While the receiver is in pairing mode, press one of the buttons (e.g., 'A') on the transmitter.
4. The receiver's indicator light should change or flash to confirm successful pairing.
5. Repeat for other buttons if individual pairing is required for each function, or test the paired button.

5. Operating Instructions

Once the transmitter is paired with your remote switch receiver, operation is straightforward:

- **Press a Button:** Press any of the four buttons (A, B, C, or D) to activate the corresponding function on your paired remote switch.
- **Indicator Light:** The indicator light on the transmitter will briefly illuminate when a button is pressed, confirming that a signal is being sent.
- **Range:** For optimal performance, ensure the transmitter is within the specified operating range of the receiver and avoid major obstructions.

6. Maintenance

6.1 Cleaning

Wipe the transmitter with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these can damage the casing.

6.2 Battery Replacement

If the transmitter's indicator light becomes dim or fails to illuminate, or if the range decreases significantly, it may be time to replace the battery. Follow the battery installation steps in Section 4.1.

7. Troubleshooting

Problem	Possible Cause	Solution
Transmitter not responding	Dead or low battery Not paired with receiver Out of range	Replace battery Re-pair with receiver (refer to Section 4.2) Move closer to receiver
Short operating range	Low battery Obstructions Interference	Replace battery Reduce obstructions between transmitter and receiver Avoid sources of radio interference

Problem	Possible Cause	Solution
Indicator light not illuminating	Dead battery Internal fault	Replace battery Contact customer support if battery replacement does not resolve the issue

8. Specifications

Feature	Detail
Brand	wanjiale
Model Name	4-Button Remote Control Transmitter
Internal Model Number	b0cbca99-acbc-4888-b597-5f074c578ee1
Working Voltage	DC12V
Battery Type	23A (DC12V)
Working Frequency	433.92MHz
Dimensions (approx.)	91mm x 39.5mm x 15mm
Material	Plastic
Special Feature	Ergonomic design

9. Warranty and Support

For warranty information or technical support, please refer to the documentation provided with your purchase or contact your retailer. Keep your proof of purchase for any warranty claims.