

Daewoo DCP-2269

Daewoo Rechargeable Hair Clipper DCP-2269

User Manual

[Charging](#) [Operation](#) [Safety Instructions](#) [Maintenance](#) [Product Overview](#) [Troubleshooting](#) [Setup & Specifications](#) [Warranty](#)

1. SAFETY INSTRUCTIONS

Please read these safety instructions carefully before using the Daewoo Rechargeable Hair Clipper DCP-2269. Keep this manual for future reference.

- This appliance is intended for household use only.
- Do not immerse the appliance in water or other liquids.
- Keep the appliance away from children.
- Do not use the appliance if the blades are damaged or broken, as this may cause injury.
- Ensure the charging adapter and cord are not damaged before use.
- Only use the provided charging adapter and base.
- Unplug the appliance from the power outlet before cleaning.
- Do not attempt to repair the appliance yourself. Contact qualified service personnel for repairs.
- This appliance contains a built-in rechargeable battery. Do not expose it to excessive heat or dispose of it in fire.

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your Daewoo Rechargeable Hair Clipper.







Figure 2.1: Back of the hair clipper, displaying the model number DCP-2269, rating, and serial number.



Figure 2.2: Included accessories: charging adapter, charging base, comb attachment, cleaning brush, and lubricating oil.

Package Contents:

- Daewoo Rechargeable Hair Clipper (Model: DCP-2269)
- Charging Adapter
- Charging Base
- Comb Attachment (adjustable for 3-15mm cutting length)
- Cleaning Brush
- Lubricating Oil

3. SETUP AND CHARGING

3.1 Initial Setup

1. Unpack all components from the box.
2. Inspect the clipper and accessories for any damage.
3. Before first use, ensure the clipper is fully charged.

3.2 Charging the Clipper

The clipper features a built-in Ni-MH rechargeable battery.

1. Connect the charging adapter to the charging base.
2. Plug the charging adapter into a standard electrical outlet (100-240V ~ 50/60Hz).
3. Place the hair clipper onto the charging base.
4. The power indicator light will illuminate, indicating that the clipper is charging.

5. Allow approximately 8 hours for a full charge.
6. Once fully charged, disconnect the adapter from the power outlet.

Note: Do not overcharge the battery. Avoid leaving the clipper on the charging base for extended periods after it is fully charged.

4. OPERATING INSTRUCTIONS

4.1 Attaching and Adjusting the Comb

1. Ensure the clipper is turned off.
2. Align the comb attachment with the clipper blades and slide it on until it clicks into place.
3. Adjust the desired cutting length by sliding the comb up or down. The comb offers a range of 3-15mm.
4. To remove the comb, gently push it upwards and slide it off.

4.2 Hair Clipping

This clipper is designed for dry operation.

1. Ensure hair is clean and dry before clipping.
2. Turn on the clipper using the power switch. The power indicator will show it is working.
3. Start clipping from the nape of the neck, moving upwards against the direction of hair growth.
4. Use smooth, even strokes.
5. For thinning hair, use the thinning out function if available on your comb attachment.
6. Regularly clear accumulated hair from the blades during use to maintain optimal performance.
7. After use, turn off the clipper.

4.3 Using the Side Edge Trimmer

The clipper includes a side edge trimmer for precise detailing.

1. Remove any comb attachment.
2. Carefully use the exposed blades for precise trimming around the edges of your hairline, sideburns, or beard.
3. Exercise caution to avoid skin irritation.

5. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your hair clipper.

5.1 Cleaning the Blades

1. Ensure the clipper is turned off and unplugged from the charging base.
2. The stainless steel blades are detachable for easy cleaning. Gently push the blades to detach them from the clipper body.
3. Use the provided cleaning brush to remove any hair clippings from the blades and the clipper head.
4. Do not rinse the clipper body under water. The blades can be carefully wiped with a damp cloth, but ensure they are completely dry before reattaching.
5. Reattach the blades by aligning them and pushing until they click into place.

5.2 Lubricating the Blades

Regular lubrication helps maintain blade sharpness and smooth operation.

1. After cleaning, apply a small drop of the provided lubricating oil to the teeth of the blades.
2. Turn on the clipper for a few seconds to distribute the oil evenly.
3. Wipe off any excess oil with a soft cloth.

Recommendation: Lubricate blades after every few uses, or if you notice reduced cutting performance.

5.3 Storage

Store the clipper in a dry, cool place, away from direct sunlight and out of reach of children.

6. TROUBLESHOOTING

If you encounter issues with your hair clipper, refer to the following table:

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is depleted.	Charge the clipper for 8 hours.
Clipper runs slowly or pulls hair.	Blades are dirty or not lubricated.	Clean the blades and apply lubricating oil.
Clipper is not charging.	Charging adapter or base is not properly connected.	Ensure all connections are secure and the power outlet is functional.
Comb attachment does not stay on.	Comb is not properly aligned or damaged.	Realign the comb until it clicks. If damaged, replace the comb.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

Brand	Daewoo Electronics
Model Number	DCP-2269
Power Source	Built-in Ni-MH Rechargeable Battery
Blade Material	Stainless Steel
Special Features	Rechargeable, Portable, Detachable Blades, Powerful Rotary Motor
Target Audience	Men
Operation Method	Dry
Adjustable Speeds	1
Charging Time	Approx. 8 hours
Input Voltage	100-240V ~ 50/60Hz
UPC	4895155636152

ASIN	B07MX2PSPS
------	------------

8. WARRANTY AND SUPPORT

The product box indicates a **2-year warranty**. For warranty claims or technical support, please retain your proof of purchase and contact your retailer or the official Daewoo customer service in your region.

For more information, you may visit the manufacturer's website:www.daewoo-products.com (as seen on product packaging).

© 2026 Daewoo. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question