

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Daewoo](#) /

› [Daewoo DRM-2030 Roti Maker User Manual](#)

Daewoo DRM-2030

Daewoo DRM-2030 Roti Maker User Manual

Model: DRM-2030



INTRODUCTION

The Daewoo DRM-2030 Roti Maker is designed to simplify the process of making traditional flatbreads such as rotis and chapatis. Featuring a durable non-stick coating and automatic temperature control, this appliance ensures consistent results and easy cleaning. Please read this manual thoroughly before operating the device to ensure safe and efficient use.

IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the Roti Maker is placed on a stable, heat-resistant surface.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse the cord, plugs, or the appliance in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended use.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Daewoo DRM-2030 Roti Maker:

- **Lifting Handle:** For opening and closing the Roti Maker safely.

- **Operating Level:** The main body of the appliance.
- **Indication Housing and Indication Lamp:** Lights that indicate power status and readiness.
- **Non-Stick Heater Plate:** The cooking surface with a durable non-stick coating.
- **Heating Coil:** Integrated within the heater plate for even cooking.
- **SS Bottom Cover:** Stainless steel base for stability and protection.
- **Cord Wrap:** For convenient storage of the power cord.



Image: The Daewoo DRM-2030 Roti Maker in its closed position, showcasing its stainless steel body and black handle. This view highlights the compact design of the appliance.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove the Roti Maker from its packaging. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Wipe the non-stick cooking plates with a damp cloth or sponge. Do not use abrasive cleaners or immerse the unit in water. Dry thoroughly.
3. **Placement:** Place the Roti Maker on a flat, stable, and heat-resistant surface, away from flammable materials. Ensure adequate ventilation around the appliance.
4. **Power Connection:** Plug the power cord into a standard 220-240V ~ 50/60 Hz electrical outlet. The "Power On" indicator lamp will illuminate.
5. **Preheating:** Close the lid and allow the Roti Maker to preheat for approximately 5-7 minutes. The "Ready" indicator lamp will illuminate when the desired temperature is reached. During first use, a slight odor or smoke may be observed; this is normal and will dissipate.

OPERATING INSTRUCTIONS

Follow these steps to make perfect rotis or chapatis:

- Prepare Dough:** Ensure your roti or chapati dough is prepared according to your recipe. Form small, uniform balls of dough.
- Preheat:** Ensure the Roti Maker is preheated and the "Ready" indicator lamp is illuminated.
- Place Dough:** Open the lid using the lifting handle. Place one dough ball in the center of the lower non-stick heating plate.
- Press:** Gently close the upper heating plate onto the dough ball using the lifting handle. Apply light, even pressure for a few seconds to flatten the dough into a round shape. Do not press too hard or for too long, as this can affect the texture.
- Cook:** Allow the roti to cook for approximately 30-60 seconds on one side. The automatic temperature control will maintain the optimal cooking heat.
- Flip (Optional):** For a more evenly cooked roti, you may gently lift the lid and flip the roti using a non-metallic spatula. Close the lid and cook for another 30-60 seconds.
- Puffing:** The Roti Maker is designed to help rotis puff. If the roti does not puff immediately, you can gently press the top plate down for a second or two to encourage puffing.
- Remove:** Once cooked to your preference, carefully open the lid and remove the roti using a non-metallic spatula. Place it in a serving dish or insulated container to keep warm.
- Repeat:** Close the lid to maintain heat and repeat the process for the remaining dough balls.



PREMIUM





DAEWOO

Roti Maker

DRM-2030

- Power: 1200W
- Rolls and cooks chapatis / rotis in less than a minute
- Durable non-stick coated inner plates – easy to clean
- Easy to press handle
- Automatic temperature control
- Power On & Ready Light Indicator
- Cord Wrap – Easy to store
- 220-240V ~ 50/60 Hz





Made in China صنع في الصين

4 895155 647998



  

0033

POSCO Daewoo Corporation
165, Convensia-daero, Yeonsu-gu, Incheon, 406-840, Korea
www.daewoo-products.com

www.daewoo-products.com

Image: The Daewoo DRM-2030 Roti Maker box, illustrating key features such as 1200W power, non-stick plates, automatic temperature control, and indicator lights. Cooked rotis are shown on the packaging.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your Roti Maker.

- Unplug and Cool:** Always unplug the Roti Maker from the power outlet and allow it to cool completely before cleaning.
- Clean Cooking Plates:** Wipe the non-stick cooking plates with a soft, damp cloth or sponge. For stubborn residue, use a small amount of mild dish soap, then wipe clean with a damp cloth. Do not use abrasive pads, metal utensils, or harsh chemicals, as these can damage the non-stick coating.
- Clean Exterior:** Wipe the exterior of the appliance with a soft, damp cloth.
- Storage:** Once clean and dry, wrap the power cord around the cord wrap feature. Store the Roti Maker in a dry place.
- Do Not Immerse:** Never immerse the Roti Maker, its cord, or plug in water or any other liquid.

TROUBLESHOOTING

Refer to the table below for common issues and their solutions:

Problem	Possible Cause	Solution
Roti Maker does not heat up.	Not plugged in; power outlet malfunction; appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support.
Roti does not puff.	Dough consistency incorrect; not enough pressure applied; Roti Maker not fully preheated.	Adjust dough consistency (ensure it's soft and pliable). Apply gentle, even pressure when pressing. Ensure the "Ready" light is on before placing dough.
Roti sticks to the plates.	Non-stick coating damaged; plates not clean; dough too sticky.	Ensure plates are clean before use. Lightly grease plates with a small amount of oil if necessary (though generally not needed for non-stick). Adjust dough consistency.
Smoke or odor during first use.	Protective coatings burning off.	This is normal for initial use and will dissipate. Ensure good ventilation. If smoke persists after initial use, unplug and contact support.

SPECIFICATIONS

- Brand:** Daewoo
- Model Number:** DRM-2030
- Power:** 1200W (as indicated on packaging)
- Voltage:** 220-240V ~ 50/60 Hz
- Material:** Stainless Steel (body)
- Special Features:** Non-Stick Coating, Automatic Temperature Control, Power On & Ready Light Indicator, Cord Wrap
- Product Dimensions:** Approximately 30 x 30 x 25 cm
- Item Weight:** Approximately 1.58 kg
- Certification:** GSO Certified (0033-3)

- **UPC:** 4895155647998

WARRANTY AND SUPPORT

The Daewoo DRM-2030 Roti Maker comes with a **2-year warranty** from the date of purchase, covering manufacturing defects. Please retain your proof of purchase for warranty claims.

For technical support, service, or warranty inquiries, please contact your local Daewoo customer service or the retailer from whom the product was purchased. Refer to the product packaging or Daewoo's official website for specific contact details in your region.

© 2023 Daewoo. All rights reserved.