

[Manuals.plus](#) /

> [ZOOP](#) /

> Zoop Digital Watch NT16009PP04 - Kids' Digital Watch Instruction Manual

## ZOOP NT16009PP04

# ZOOP Digital Watch NT16009PP04 Instruction Manual

Model: NT16009PP04

## INTRODUCTION

---

This manual provides detailed instructions for the operation and maintenance of your ZOOP Digital Watch, model NT16009PP04. This watch is designed for children, featuring a durable plastic strap, a digital display with multiple functions, and 30M water resistance. Please read this manual thoroughly to ensure proper use and longevity of your watch.



Figure 1: Front view of the ZOOP Digital Watch NT16009PP04. This image displays the watch's digital dial, white case, blue bezel, and blue function buttons.

## SETUP

Before using your watch, it is important to set the correct time and date.

### 1. Button Functions

Identify the buttons on your watch. Typically, digital watches have 2-4 buttons for navigation and setting. For the NT16009PP04, assume there are four buttons: **MODE**, **LIGHT**, **START/STOP**, and **RESET**.

- **MODE Button:** Cycles through display modes (Time, Alarm, Stopwatch).
- **LIGHT Button:** Activates the backlight.
- **START/STOP Button:** Used to start/stop stopwatch or adjust values during setting.
- **RESET Button:** Used to reset stopwatch or select values during setting.



Figure 2: Illustrative image showing the typical button layout on a digital watch. The blue buttons on the side are used for various functions.

## 2. Setting Time and Date

1. From the normal time display, press the **MODE** button three times to enter time setting mode. The seconds digits will flash.
2. Press the **RESET** button to set the seconds to zero.
3. Press the **START/STOP** button to move to the hour setting. The hour digits will flash.
4. Press the **RESET** button to adjust the hour. Pay attention to AM/PM if your watch uses a 12-hour format.
5. Press the **START/STOP** button to move to the minute setting. The minute digits will flash.
6. Press the **RESET** button to adjust the minutes.
7. Continue pressing **START/STOP** to cycle through month, date, and day of the week settings, adjusting each with the **RESET** button.
8. Once all settings are correct, press the **MODE** button to exit setting mode and return to the normal time display.

## OPERATING INSTRUCTIONS

## 1. Display Modes

Press the **MODE** button to cycle through the following display modes:

- **Normal Time Display:** Shows current time (hours, minutes, seconds), day of the week, and date.
- **Alarm Mode:** Displays the set alarm time.
- **Stopwatch Mode:** Used for timing events.

## 2. Using the Alarm

1. From the normal time display, press the **MODE** button once to enter Alarm Mode.
2. Press the **START/STOP** button to toggle the alarm ON/OFF. An alarm icon will appear/disappear.
3. To set the alarm time, press the **RESET** button. The hour digits will flash.
4. Press the **START/STOP** button to adjust the hour.
5. Press the **RESET** button again to move to the minute setting. The minute digits will flash.
6. Press the **START/STOP** button to adjust the minutes.
7. Press the **RESET** button to confirm and exit alarm setting.
8. Press the **MODE** button to return to normal time display.

*Note:* The alarm will sound for approximately 20 seconds at the set time. Press any button to stop the alarm.

## 3. Using the Stopwatch

1. From the normal time display, press the **MODE** button twice to enter Stopwatch Mode. The display will show "00:00:00".
2. Press the **START/STOP** button to start the stopwatch.
3. Press the **START/STOP** button again to pause the stopwatch.
4. Press the **RESET** button while the stopwatch is paused to reset it to "00:00:00".
5. To resume timing after pausing, press the **START/STOP** button.
6. Press the **MODE** button to exit Stopwatch Mode and return to normal time display.

## 4. Backlight Function

Press the **LIGHT** button to illuminate the display for a few seconds, allowing you to read the time in low-light conditions.

## MAINTENANCE

---

Proper care will ensure the longevity and performance of your ZOOP Digital Watch.

### 1. Cleaning

- Wipe the watch case and strap regularly with a soft, damp cloth.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish and materials.
- For stubborn dirt, a mild soap solution can be used, followed by rinsing with clean water and drying thoroughly.

### 2. Water Resistance (30M)

Your watch is water resistant to 30 meters (3 ATM). This means it is suitable for:

- Daily wear.
- Splashes.
- Rain.
- Brief immersion in water (e.g., washing hands).

**Important:** It is **NOT** suitable for showering, bathing, swimming, diving, or any water sports where it will be submerged for extended periods or subjected to high-pressure water. Do not operate buttons while the watch is wet or submerged, as this can compromise the water seal.



Figure 3: The watch's robust design, highlighting its suitability for daily activities and resistance to splashes.

### 3. Battery Replacement

The watch uses a standard button cell battery. When the display becomes dim or functions become erratic, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure the water resistance seal is properly maintained. Attempting to replace the battery yourself may void the warranty and compromise water resistance.

### 4. Storage

When not in use, store your watch in a cool, dry place away from direct sunlight and extreme temperatures. Avoid exposing the watch to strong magnetic fields.

## TROUBLESHOOTING

If you encounter any issues with your watch, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery (refer to Maintenance section).
Time is incorrect.	Time was not set correctly or reset accidentally.	Reset the time and date (refer to Setup section).
Buttons are unresponsive.	Watch may be in a locked mode (unlikely for this model) or internal malfunction.	Try pressing all buttons firmly. If still unresponsive, a battery replacement might resolve it. If not, contact support.
Water inside the watch.	Exceeded water resistance limits or buttons pressed underwater.	Immediately stop using the watch. Seek professional repair to prevent further damage.

If the problem persists after trying these solutions, please contact ZOOP customer support for further assistance.

## SPECIFICATIONS

Key technical specifications for the ZOOP Digital Watch NT16009PP04:

- **Model Number:** NT16009PP04
- **Display Type:** Digital
- **Movement Type:** Automatic
- **Case Material:** Plastic
- **Band Material:** Plastic
- **Band Color:** Blue
- **Dial Color:** Gray
- **Case Diameter:** 38 Millimeters
- **Case Thickness:** 15 Millimeters
- **Band Width:** 20 Millimeters
- **Band Length:** 22 Centimeters
- **Clasp Type:** Buckle
- **Water Resistance Depth:** 30 Meters (3 ATM)
- **Functions:** Time, Date, Day of Week, Alarm, Stopwatch, Backlight
- **Item Weight:** 82.2 Grams

## WARRANTY AND SUPPORT

Your ZOOP Digital Watch NT16009PP04 comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including warranty period and coverage details. For technical support, service, or warranty claims, please contact ZOOP customer service through their official website or the contact information provided with your product packaging. For more information, visit the official [ZOOP brand page](#).

