

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Zoop](#) /
- › [Zoop Kids Digital Watch - 16009PP01 Instruction Manual](#)

Zoop 16009PP01

Zoop Kids Digital Watch

INSTRUCTION MANUAL - MODEL 16009PP01

Product Overview

The Zoop Kids Digital Watch (Model 16009PP01) is designed for children, featuring a clear digital display and a durable silicone strap. It provides essential timekeeping functions including time, date, day, and additional features like an alarm and stopwatch. Its robust construction is suitable for daily wear.



This image displays the Zoop Kids Digital Watch. It features a black silicone strap and a grey digital display with white accents around the bezel. The display shows the time, date, day, and includes indicators for alarm, chime, and 24-hour format. Buttons labeled 'SET/EL', 'MODE', 'ST/STP', and 'RESET' are visible on the sides of the watch case.

Setup

1. Initial Inspection

Upon unboxing, inspect the watch for any visible damage. Ensure all protective films are removed from the display and case back.

2. Battery Installation (if applicable)

This watch requires 1 Lithium Metal battery. If the display is blank or dim, the battery may need to be installed or replaced. Consult a professional for battery replacement to ensure water resistance is maintained.

3. Initial Time and Date Setting

1. Press the **MODE** button repeatedly until the time setting mode is displayed (usually indicated by flashing digits).

2. Use the **RESET** button to cycle through the digits (hours, minutes, seconds).
3. Use the **ST/STP** button to adjust the value of the flashing digit.
4. Once time is set, press **MODE** again to move to date setting (month, day, year). Repeat the adjustment process.
5. Press **MODE** to exit the setting mode and return to normal time display.

Operating Instructions

Button Functions

- **MODE:** Cycles through display modes (Time, Alarm, Stopwatch). Used to enter and exit setting modes.
- **SET/EL:** Activates the backlight for a few seconds. In setting modes, it may be used to confirm settings or select options.
- **ST/STP:** Starts/stops the stopwatch. In setting modes, it adjusts the value of the flashing digit.
- **RESET:** Resets the stopwatch. In setting modes, it cycles through the digits or options to be set.

Using the Stopwatch

1. Press **MODE** until the stopwatch display appears (usually 00:00:00).
2. Press **ST/STP** to start the stopwatch.
3. Press **ST/STP** again to pause the stopwatch.
4. Press **RESET** to clear the stopwatch to zero.
5. Press **MODE** to return to the normal time display.

Setting the Alarm

1. Press **MODE** until the alarm setting mode is displayed (often indicated by 'ALM' or a bell icon).
2. Use **RESET** to select hours or minutes.
3. Use **ST/STP** to adjust the alarm time.
4. Press **MODE** to confirm and exit.
5. To turn the alarm on/off, typically press **ST/STP** while in the alarm display mode. An indicator (e.g., 'ALM' or a bell icon) will show if the alarm is active.

Maintenance

Cleaning

Wipe the watch regularly with a soft, damp cloth. For stubborn dirt, a mild soap solution can be used, followed by rinsing with clean water and drying thoroughly. Avoid harsh chemicals or abrasive materials.

Water Resistance (WR 30M)

This watch is water resistant up to 30 meters (3 ATM). This means it is suitable for everyday use and can withstand splashes or brief immersion in water. It is **not** suitable for swimming, showering, or diving. Do not operate buttons when the watch is wet.

Battery Replacement

When the display becomes dim or the watch stops functioning, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure the watch's water resistance is maintained.

Storage

When not in use for extended periods, store the watch in a cool, dry place away from direct sunlight and extreme temperatures. Avoid storing near strong magnetic fields.

Troubleshooting

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead battery.	Replace the battery.
Buttons are unresponsive.	Watch may be in a locked mode or internal issue.	Try pressing all buttons firmly. If issue persists, consult support.
Time is inaccurate.	Time not set correctly or battery low.	Reset the time. If problem continues, replace battery.
Water inside the display.	Water resistance compromised.	Stop using the watch immediately and seek professional repair.

Specifications

Model Number: 16009PP01

Display Type: Digital

Dial Color: Grey

Band Color: Black

Band Material Type: Silicone

Case Diameter: 43 Millimetres

Case Thickness: 14 Millimetres

Item Weight: 46 Grams

Batteries: 1 Lithium Metal battery required

Water Resistance: 30M (3 ATM)

Manufacturer: Zoop

Date First Available: 9 January 2019

Warranty Information

Warranty terms and conditions for your Zoop Kids Digital Watch are typically provided with your purchase documentation. Please refer to the warranty card or contact your retailer for specific details regarding coverage and duration. An optional 1-year extended warranty may be available for purchase separately.

Customer Support

For further assistance, technical support, or inquiries regarding your Zoop Kids Digital Watch, please contact the retailer where the product was purchased or visit the official Zoop brand website for contact information.



© 2024 Zoop. All rights reserved.