

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Gardena](#) /

> [Gardena SILENO Life Robotic Lawnmower 1000m2 \(Model 15102-26\) Instruction Manual](#)

Gardena 15102-26

Gardena SILENO Life Robotic Lawnmower 1000m2 (Model 15102-26) Instruction Manual

Your guide to setting up, operating, and maintaining your robotic lawnmower.

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your **Gardena SILENO Life Robotic Lawnmower 1000m2**, model **15102-26**. Please read these instructions carefully before installation and operation.



Figure 1: Gardena SILENO Life Robotic Lawnmower 1000m2.

Product Overview

The Gardena SILENO Life robotic lawnmower is designed for automatic lawn maintenance on areas up to 1000 m². It features the SensorCut system for a uniform cut without visible tracks, promoting a thicker, carpet-like lawn. The

EasyPassage function enables the mower to navigate and cut in narrow corridors. Its Silent Drive motors ensure quiet operation.

Key Features

- **Automatic Mowing:** Manages lawn areas up to 1000 m² autonomously.
- **SensorCut System:** Ensures a consistent and track-free cut.
- **EasyPassage Function:** Navigates and mows efficiently through narrow sections.
- **Silent Operation:** Equipped with Silent Drive motors for low noise levels.
- **Slope Capability:** Handles inclines up to 35%.
- **Integrated Display:** User-friendly interface for programming and control.
- **Lithium-Ion Battery:** Provides reliable power and extended lifespan.

2. SETUP AND INSTALLATION

Proper installation is crucial for optimal performance. Follow these steps to set up your robotic lawnmower.

Package Contents

Verify that all components are present in the package:

- 1 x Gardena SILENO Life Robotic Lawnmower
- 1 x Perimeter Cable (200 meters)
- 300 x Pegs for cable fastening
- 4 x Connectors
- 5 x Cable Terminals
- 1 x Charging Station
- 1 x Power Supply Unit

Installation Steps

1. **Position the Charging Station:** Choose a flat area with access to a power outlet, preferably in the shade. Ensure sufficient space around the station for the mower to dock.
2. **Lay the Perimeter Cable:** Define the mowing area by laying the perimeter cable around the edges of your lawn. Use the provided pegs to secure the cable to the ground. Ensure the cable is laid correctly around obstacles and no-go zones.
3. **Connect the Guide Wire:** For complex lawns or narrow passages, install a guide wire from the charging station to a remote part of the lawn. This helps the mower navigate efficiently.
4. **Connect Cables to Charging Station:** Attach the perimeter cable and guide wire to the charging station terminals as indicated in the detailed diagram in the full manual.
5. **Connect Power Supply:** Plug the charging station's power supply into an outdoor power outlet.
6. **Initial Charging:** Place the robotic lawnmower in the charging station. Allow it to fully charge before its first operation. This typically takes approximately 60 minutes.



Figure 2: Robotic lawnmower in operation, demonstrating its ability to mow.

3. OPERATING INSTRUCTIONS

Once installed, operating your Gardena SILENO Life is straightforward.

First Start-up

1. **Power On:** Press the ON/OFF button on the mower's control panel.
2. **Enter PIN Code:** If prompted, enter your personal identification number (PIN).
3. **Initial Settings:** Use the display and keypad to set the date, time, and desired mowing schedule.
4. **Cutting Height Adjustment:** Adjust the cutting height between 20-50 mm using the dedicated knob on the mower.

Scheduling Mowing Times

The robotic lawnmower can be programmed to mow at specific times and days.

- Access the "Schedule" menu on the control panel.
- Set desired start and end times for each day of the week.
- The mower will automatically leave its charging station, mow, and return when finished or when the battery is low.

Manual Operation

For immediate mowing or specific areas:

- Press the "Start" button on the control panel.
- Select a mowing mode (e.g., Spot Mowing for specific areas).
- The mower will begin operation according to the selected mode.

Stopping the Mower

To stop the mower at any time, press the large "STOP" button located on top of the unit. The mower will immediately cease operation.

4. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your robotic lawnmower.

Cleaning

- **Blades:** Regularly check and clean grass clippings from the blades and blade disc. Replace worn or damaged blades.
- **Wheels:** Remove any grass or debris that may accumulate around the wheels.
- **Chassis:** Wipe down the exterior of the mower with a damp cloth. Avoid using high-pressure washers directly on the unit.
- **Charging Contacts:** Keep the charging contacts on both the mower and the charging station clean to ensure proper connection.

Blade Replacement

Blades should be replaced regularly (e.g., every 1-2 months, depending on usage) to maintain a sharp cut.

1. Turn off the mower and wear protective gloves.
2. Carefully flip the mower over.
3. Unscrew the old blades and replace them with new ones. Ensure screws are tightened securely.

Winter Storage

Before winter, clean the mower thoroughly, fully charge the battery, and store it in a dry, frost-free environment. The charging station should also be disconnected and stored indoors.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your Gardena SILENO Life.

Problem	Possible Cause	Solution
Mower does not start.	Battery low or not charged. Main switch off.	Place mower in charging station. Ensure main switch is ON.
Mower stays in charging station.	No schedule set. Perimeter wire signal missing.	Check schedule settings. Verify perimeter wire connection and power supply.
Uneven mowing result.	Dull or damaged blades. Incorrect cutting height.	Replace blades. Adjust cutting height.
Mower gets stuck frequently.	Obstacles in mowing area. Perimeter wire not laid correctly around obstacles.	Remove obstacles. Adjust perimeter wire layout.
Error message on display.	Specific issue indicated by code.	Refer to the full user manual for a complete list of error codes and their solutions.

For more detailed troubleshooting, consult the comprehensive user manual provided with your product or visit the Gardena support website.

6. SPECIFICATIONS

Technical details for the Gardena SILENO Life Robotic Lawnmower 1000m2 (Model 15102-26).

Feature	Detail
Model Number	15102-26
Recommended Mowing Area	Up to 1000 m ²
Battery Type	Lithium-ion (1 included)
Charging Time	Approx. 60 minutes
Mowing Time per Charge	Approx. 65 minutes
Maximum Slope	35%
Cutting Height (Min-Max)	20-50 mm
Cutting Width	22 cm
Product Dimensions (L x W x H)	78.5 x 59 x 33.3 cm
Weight	16.31 kg
Material	Plastic
Operation Mode	Automatic
Country of Origin	Germany

7. WARRANTY AND SUPPORT

Gardena products are known for their quality and reliability.

Warranty Information

Your Gardena SILENO Life Robotic Lawnmower comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Keep your proof of purchase for any warranty claims.

Customer Support

For technical assistance, spare parts, or further inquiries, please contact Gardena customer support. You can find contact information on the official Gardena website or in the documentation provided with your product.

- **Online Support:** Visit the official Gardena website for FAQs, troubleshooting guides, and contact forms.
- **Service Centers:** Locate authorized Gardena service centers for professional repairs and maintenance.

