

[manuals.plus](#) /

› [SEVERIN](#) /

› [Severin FR 2460 Air Fryer 3.5 Liter: Oil-Free Frying with 60-Minute Timer](#)

SEVERIN FR 2460

Severin FR 2460 Air Fryer Instruction Manual

Model: FR 2460

1. INTRODUCTION

Thank you for choosing the Severin FR 2460 Air Fryer. This appliance allows you to prepare a variety of dishes with little to no oil, offering a healthier alternative to traditional deep frying. Please read this manual carefully before first use to ensure safe and optimal operation.



Image 1: Severin FR 2460 Air Fryer with basket containing fries. This image shows the overall design of the air fryer, highlighting its

compact form and the removable basket.

2. IMPORTANT SAFETY INSTRUCTIONS

Always observe the following safety precautions when using electrical appliances to prevent injury or damage.

- Read all instructions before use.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is intended for household use only.
- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not block the air inlet or outlet openings during operation.
- The surfaces may become hot during use. Do not touch hot surfaces directly. Use handles or knobs.

3. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the parts of your Severin FR 2460 Air Fryer.

1. Temperature Control Dial (80-200°C)
2. Timer Dial (up to 60 minutes)
3. Air Inlet
4. Frying Basket with Handle
5. Non-stick Coated Basket Insert
6. Air Outlet (at the back)
7. Power Indicator Light



Image 2: Top view of the control panel. This image highlights the two rotary dials for temperature and timer settings, which are key for operating the appliance.



Image 3: Empty frying basket. This image displays the interior of the removable basket, emphasizing its non-stick ceramic coating and perforated design for optimal air circulation.

4. SETUP AND FIRST USE

Before using your air fryer for the first time, follow these steps:

1. **Unpacking:** Remove all packaging materials and stickers from the appliance.
2. **Cleaning:** Wipe the exterior of the appliance with a damp cloth. Wash the frying basket and basket insert with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely.
3. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface, away from walls or other appliances to allow for proper air circulation. Ensure there is at least 10 cm of free space on the back and sides, and 10 cm above the appliance.
4. **Pre-heating (Optional but Recommended):** For the first use, it is recommended to run the air fryer empty for about 10 minutes at 180°C to burn off any manufacturing residues. A slight odor may be present; this is normal. Ensure good ventilation.

5. OPERATING INSTRUCTIONS

Follow these steps to operate your Severin FR 2460 Air Fryer:

1. **Prepare Food:** Place the food you wish to cook into the frying basket. Do not overfill the basket; ensure there is enough space for air to circulate. For best results with certain foods (e.g., homemade fries), a small amount of oil can be tossed with the food before placing it in the basket.
2. **Insert Basket:** Slide the frying basket back into the appliance until it clicks securely into place.
3. **Connect Power:** Plug the power cord into a grounded wall outlet.
4. **Set Temperature:** Turn the temperature control dial to your desired cooking temperature (80-200°C).
5. **Set Timer:** Turn the timer dial to the required cooking time (up to 60 minutes). The appliance will start operating, and the power indicator light will illuminate.
6. **Cooking Process:** During cooking, you may need to shake the basket halfway through for even cooking, especially for smaller items like fries. To do this, carefully pull out the basket by its handle, shake the contents, and then slide it back in. The appliance will pause when the basket is removed and resume when it's reinserted.
7. **Completion:** When the timer reaches zero, an acoustic signal will sound, and the appliance will automatically switch off.
8. **Remove Food:** Carefully pull out the frying basket. Use heat-resistant tongs to remove the cooked food from the basket. Avoid tipping the basket directly to prevent any residual oil from dripping onto the food.
9. **Switch Off:** Unplug the appliance from the wall outlet after use.

Cooking Tips:

- Smaller ingredients usually require a slightly shorter cooking time than larger ingredients.
- A larger amount of ingredients only requires a slightly longer cooking time.
- Shaking smaller ingredients halfway through the cooking time optimizes the end result and can help prevent unevenly fried ingredients.
- For crispy results, some foods benefit from a light coating of oil.
- You can also use the air fryer to reheat food. Set the temperature to 150°C for approximately 10 minutes.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Before Cleaning:** Always unplug the appliance and allow it to cool down completely before cleaning.
2. **Frying Basket and Insert:** The frying basket and its insert have a ceramic non-stick coating and are easy to clean. Wash them with hot water, dish soap, and a non-abrasive sponge. For stubborn residue, soak them in hot water with

dish soap for about 10 minutes. Do not use metal utensils or abrasive cleaning materials, as this can damage the non-stick coating. **Note:** The basket and insert are not dishwasher safe.

- Appliance Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use harsh abrasive cleaners.
- Interior:** Clean the interior of the appliance with a damp cloth. If necessary, use a soft brush to remove any food residues from the heating element.
- Storage:** Ensure all parts are clean and dry before storing the appliance. Store it in a cool, dry place.

7. TROUBLESHOOTING

If you encounter issues with your air fryer, consult the table below for common problems and solutions.

Problem	Possible Cause	Solution
Air fryer does not turn on.	The appliance is not plugged in. The timer is not set.	Ensure the power cord is securely plugged into a grounded outlet. Turn the timer dial to the desired cooking time.
Food is not cooked evenly.	Basket is overloaded. Food was not shaken.	Do not overload the basket. Cook in smaller batches if necessary. Shake the basket halfway through the cooking time.
Food is not crispy.	Not enough oil (for certain foods). Temperature too low.	Lightly brush or spray food with oil. Increase the temperature.
White smoke comes from the appliance.	Grease residue from previous use. Excess oil on food.	Clean the basket and interior thoroughly. Reduce the amount of oil used.

8. TECHNICAL SPECIFICATIONS

- Model:** FR 2460
- Brand:** SEVERIN
- Capacity:** 3.5 Liters
- Power:** 1300 Watts
- Voltage:** 230 Volts
- Temperature Control:** 80 - 200 °C
- Timer:** Up to 60 minutes with acoustic signal
- Dimensions (L x W x H):** 35.5 x 27 x 33 cm
- Item Weight:** 4.24 kg
- Material (Basket Coating):** Ceramic non-stick
- Color:** Black and grey
- Dishwasher Safe Parts:** No

9. WARRANTY AND SUPPORT


For warranty information, please refer to the warranty card included with your purchase or visit the official Severin website. For technical support or service inquiries, please contact Severin customer service directly.

Manufacturer: SEVERIN Elektrogeräte GmbH

Please retain your proof of purchase for any warranty claims.

Related Documents - FR 2460

 <small>Art.-No. FR 2460</small> <small>DE: Gerät und Zubehör EN: Product and accessories FR: Produit et accessoires NL: Apparatuur en accessoires ES: Producto y accesorios IT: Prodotto e accessori PT: Produto e acessórios DE: Bedienungsanleitung EN: User manual NL: Gebruiksaanwijzing ES: Manual de instrucciones IT: Manuale di istruzione PT: Manual de instruções PL: Instrukcja obsługi DE: Produkt- und Zubehör EN: Product and accessories NL: Product en accessoires ES: Producto y accesorios IT: Prodotto e accessori PT: Produto e acessórios</small>	<p><u>SEVERIN Heißluftfritteuse FR 2460 Bedienungsanleitung & Informationen</u></p> <p>Entdecken Sie die SEVERIN Heißluftfritteuse FR 2460. Diese Anleitung bietet detaillierte Informationen zur sicheren Bedienung, Reinigung und Wartung Ihres Geräts für gesunde und köstliche Mahlzeiten.</p>
 <small>SEVERIN</small>	<p><u>SEVERIN FR2445 Low-Fat Air Fryer XXL User Manual - Instructions and Safety Guide</u></p> <p>Comprehensive user manual for the SEVERIN FR2445 Low-Fat Air Fryer XXL. Includes operating instructions, safety precautions, cleaning guide, and troubleshooting tips.</p>
 <small>Art.-No. FR 2446</small> <small>DE: Heißluftfritteuse EN: Low fat fryer NL: Heißluftfritteuse ES: Freidora sin aceite IT: Frittoforno a aria calda PT: Fritadeira sem óleo DE: Bedienungsanleitung EN: User manual NL: Gebruiksaanwijzing ES: Manual de instrucciones IT: Manuale di istruzione PT: Manual de instruções PL: Instrukcja obsługi DE: Produkt- und Zubehör EN: Product and accessories NL: Product en accessoires ES: Producto y accesorios IT: Prodotto e accessori PT: Produto e acessórios</small>	<p><u>SEVERIN FR 2446 Heißluftfritteuse - Gebrauchsanleitung und Bedienung</u></p> <p>Umfassende Anleitung für die SEVERIN FR 2446 Heißluftfritteuse. Erfahren Sie mehr über Anschluss, Komponenten, Sicherheitshinweise, Zubereitung und Fehlerbehebung für Ihr Küchengerät.</p>
 <small>SEVERIN QUICKSTART GUIDE</small> <small>Art.-No. PG 8575</small> <small>DE: DE FR: NL: ES: IT: DE: SE: PT: PL: GR</small>	<p><u>SEVERIN PG 8575 Quickstart Guide</u></p> <p>A concise guide to setting up and operating the SEVERIN PG 8575 air fryer oven, covering unboxing, cleaning, basic functions, and pizza baking.</p>
 <small>SEVERIN Friends for Life</small> <small>Art.-No. FR 2455</small> <small>DE: Heißluftfritteuse EN: Low fat fryer NL: Heißluftfritteuse ES: Freidora sin aceite IT: Frittoforno a aria calda PT: Fritadeira sem óleo DE: Bedienungsanleitung EN: User manual NL: Gebruiksaanwijzing ES: Manual de instrucciones IT: Manuale di istruzione PT: Manual de instruções PL: Instrukcja obsługi DE: Produkt- und Zubehör EN: Product and accessories NL: Product en accessoires ES: Producto y accesorios IT: Prodotto e accessori PT: Produto e acessórios</small>	<p><u>SEVERIN FR 2455 Kompakt-Heißluftfritteuse Bedienungsanleitung</u></p> <p>Umfassende Bedienungsanleitung für die SEVERIN FR 2455 Kompakt-Heißluftfritteuse. Enthält Sicherheitshinweise, Gebrauchsanweisungen, Reinigungstipps und Garantieinformationen.</p>

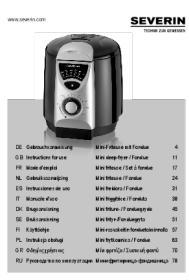

SEVERIN FR 2408 Mini-Friteuse mit Fondué Bedienungsanleitung

Umfassende Bedienungsanleitung für die SEVERIN FR 2408 Mini-Friteuse mit Fondué. Erfahren Sie alles über sichere Handhabung, Zubereitung und Pflege dieses vielseitigen Küchengeräts.