

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Continental Electric](#) /
› [Continental Electric CETT019 2-Slice Toaster Instruction Manual](#)

Continental Electric CETT019

Continental Electric CETT019 2-Slice Toaster Instruction Manual

Model: CETT019 | Brand: Continental Electric

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance and retain for future reference.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not insert metal objects into the toaster slots.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use the appliance for other than intended use.
- Ensure adequate ventilation around the toaster during operation.

PRODUCT OVERVIEW

The Continental Electric CETT019 is a compact 2-slice toaster designed for ease of use and efficiency. It features wide slots, adjustable browning control, and a convenient cancel function.



Image Description: Front view of the black Continental Electric CETT019 2-Slice Toaster, showing the two wide slots, the browning control dial, and the lever.

SETUP

1. **Unpacking:** Remove all packaging materials and promotional labels from the toaster.
2. **Placement:** Place the toaster on a stable, heat-resistant surface away from flammable materials. Ensure adequate ventilation around the appliance.
3. **First Use:** Before first use, operate the toaster without bread on the highest setting (6) for a few minutes to burn off any manufacturing residues. A slight odor or smoke is normal during this process. Allow to cool completely.
4. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet.

OPERATING INSTRUCTIONS

- Insert Bread:** Place up to two slices of bread, bagels, or waffles into the toasting slots. The wide slots accommodate various bread types.
- Select Browning Level:** Turn the browning control dial to your desired setting (1 for light toast, 6 for dark toast).
- Start Toasting:** Push the toast lever down until it locks into place. The toaster will begin toasting.
- Cancel Function:** To stop toasting at any time, press the "CANCEL" button located on the browning control dial. The toast will automatically pop up.
- Remove Toast:** Once toasting is complete, the toast will automatically pop up. Carefully remove the hot toast.



Image Description: Close-up view of the toaster's side, highlighting the browning control dial with settings from 1 to 6 and the cancel button, along with the toast lever.

MAINTENANCE AND CLEANING

- Unplug and Cool:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
- Clean Crumb Tray:** Slide out the crumb tray located at the bottom of the toaster. Empty crumbs into a waste bin. Wipe the tray with a damp cloth and dry thoroughly before reinserting.
- Exterior Cleaning:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads.
- Interior Cleaning:** Do not insert any utensils or objects into the toasting slots for cleaning.



Image Description: Underside view of the toaster, showing the removable crumb tray partially pulled out for cleaning.

TROUBLESHOOTING

Problem	Solution
Toaster does not turn on	Ensure the power cord is securely plugged into a working electrical outlet. Check the circuit breaker.
Toast is unevenly browned	Ensure bread slices are centered in the slots. Adjust browning control to a lower setting if needed.
Smoke or burning smell	Unplug immediately. Check for lodged food particles and clean the crumb tray thoroughly.
Toast does not pop up	Press the cancel button. If the issue persists, unplug and allow to cool, then check for obstructions in the slots.

SPECIFICATIONS


- **Model:** CETT019
- **Brand:** Continental Electric
- **Color:** Black
- **Material:** Alloy Steel, Plastic
- **Product Dimensions:** 9"D x 6"W x 5.5"H
- **Wattage:** 800 watts
- **Number of Slices:** 2
- **Special Feature:** Manual
- **Voltage:** 120 Volts
- **Number of Settings:** 6 (Browning levels)
- **Item Weight:** 1.75 Pounds
- **UPC:** 765167921208

WARRANTY AND SUPPORT

This product comes with a **1-Year Limited Manufacturer Warranty**. For warranty claims or technical support, please refer to the contact information provided in your product packaging or visit the official Continental Electric website.

Continental®

Toaster

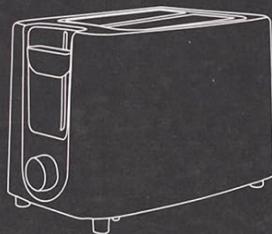

2 Slice Capacity
Adjustable Browning
Cancel Function
Wide Slots
Easy to Clean Crumb Tray

With over 20 years of experience in the home appliance industry, Continental has earned a reputation for value. A customer focused approach guides us to develop reliable and quality products. We stand behind every product we develop and strive for complete consumer satisfaction. Continental blends design, functionality, quality and value into every one of our products. This attention to detail is why Continental is a brand you can depend on.

www.cemglobal.com

Image Description: Product packaging showing the "Continental Electric Toaster" with features like 2-slice capacity, adjustable browning, cancel function, wide slots, easy-to-clean crumb tray, and a "1 YEAR Warranty" badge.

OFFICIAL PRODUCT VIDEO

Watch this video for a detailed overview of the Continental Electric CETT019 2-Slice Toaster.

Your browser does not support the video tag.

Video Description: An official product video showcasing the features and design of the CE North America CETT019 2-Slice Toaster.