

IBELL 10YO

IBELL 10YO Induction Cooktop User Manual

Model: 10YO

1. INTRODUCTION

Thank you for choosing the IBELL 10YO Induction Cooktop. This appliance is designed for efficient and convenient cooking, featuring 2000W power, a crystal glass surface, and multiple safety functions. Please read this manual carefully before operating the cooktop to ensure safe and optimal performance. Keep this manual for future reference.

2. SAFETY INSTRUCTIONS

To prevent injury or damage, always follow basic safety precautions when using electrical appliances. This IBELL 10YO Induction Cooktop is BIS Certified (IS 302-2-6 : 2009).

- **Electrical Safety:** Ensure the power outlet voltage matches the cooktop's requirements (220 Volts). Do not use damaged cords or plugs. Avoid placing the cooktop near water or in damp environments.
- **Placement:** Place the cooktop on a stable, flat, heat-resistant surface. Ensure adequate ventilation around the appliance. Do not block the air vents.
- **Cookware:** Use only induction-compatible cookware. Non-magnetic pots and pans will not heat. The base of the cookware should be flat and cover the induction zone adequately.
- **Heat Warning:** The cooktop surface may remain hot after use. Avoid touching the hot surface immediately. Keep children away from the appliance during and after operation.
- **Overheat Protection:** The cooktop is equipped with overheat protection. If the temperature becomes too high, the unit will automatically shut off.
- **Foreign Objects:** Do not place metal objects like knives, forks, spoons, or lids on the induction surface as they can become hot.
- **Cleaning:** Always unplug the cooktop before cleaning. Allow it to cool completely.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your IBELL 10YO Induction Cooktop:



Image: IBELL 10YO Induction Cooktop with key components labeled.

- **Cook Top:** High-quality crystal tempered glass surface where cookware is placed.
- **Control Panel:** Features touch-sensitive buttons and an LED display for operation.
- **Base:** The main housing of the induction cooktop, providing stability and containing internal components.



ENJOY LIFE IT'S
Delicious

Image: The IBELL 10YO Induction Cooktop with a pan cooking eggs, demonstrating its use.

5.1 Control Panel Overview

The control panel features an LED display and several push buttons:

- **On/Off Button:** Powers the unit on or off.
- **Function Button:** Selects different cooking modes or presets.
- **Up (+) / Down (-) Buttons:** Adjusts temperature, power level, or timer settings.
- **Temp Button:** Activates temperature adjustment mode.
- **Timer Button:** Sets the cooking timer.
- **LED Display:** Shows temperature, power level, or remaining time.

5.2 Basic Operation

1. **Power On:** Place induction-compatible cookware with food on the center of the cooktop. Plug in the appliance. Press the **On/Off** button. The LED display will light up.
2. **Select Function:** Press the **Function** button to choose a desired cooking mode. The cooktop may have preset functions for various dishes.
3. **Adjust Settings:** Use the **Up (+)** or **Down (-)** buttons to adjust the power level or temperature as needed.
4. **Set Timer (Optional):** Press the **Timer** button, then use **Up (+)** or **Down (-)** to set the desired cooking

duration. The cooktop will automatically shut off when the timer expires.

5. **Power Off:** After cooking, press the **On/Off** button to turn off the cooktop. Unplug the appliance from the power outlet when not in use.

5.3 Cookware Compatibility

Only use cookware made of magnetic materials such as cast iron, enameled iron, or stainless steel with a magnetic base. Cookware with a base diameter of 12cm to 26cm is generally suitable. Avoid using glass, ceramic, aluminum, or copper cookware unless specifically designed for induction.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your IBELL 10YO Induction Cooktop.

1. **Before Cleaning:** Always turn off the cooktop, unplug it from the power outlet, and allow it to cool completely before cleaning.
2. **Cooktop Surface:** Wipe the crystal glass surface with a soft, damp cloth and a mild detergent. For stubborn stains, use a non-abrasive cleaner specifically designed for glass cooktops. Do not use abrasive pads, harsh chemicals, or steel wool.
3. **Control Panel:** Wipe the control panel gently with a soft, dry cloth. Avoid excessive moisture.
4. **Vents:** Ensure the air intake and exhaust vents are free from dust and debris to maintain proper airflow and prevent overheating. Use a soft brush or vacuum cleaner to clean the vents.
5. **Storage:** If storing the cooktop for an extended period, ensure it is clean and dry. Store it in a cool, dry place, preferably in its original packaging.

7. TROUBLESHOOTING

If you encounter issues with your IBELL 10YO Induction Cooktop, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply; Power cord not properly plugged in; Main switch off.	Check power outlet and plug connection. Ensure the main power switch is on.
Cookware is not heating.	Cookware is not induction-compatible; Cookware is too small or too large; Cookware not centered.	Use induction-compatible cookware. Ensure cookware base is within recommended size and centered on the cooking zone.
Cooktop shuts off automatically during operation.	Overheat protection activated; No cookware detected for too long; Timer expired.	Allow the unit to cool down. Ensure cookware is present and induction-compatible. Check timer settings.
Unusual noise during operation.	Normal fan operation; Cookware material.	A slight humming sound from the cooling fan is normal. Some cookware may produce a slight buzzing sound due to vibration. This is not a defect.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Detailed technical specifications for the IBELL 10YO Induction Cooktop:

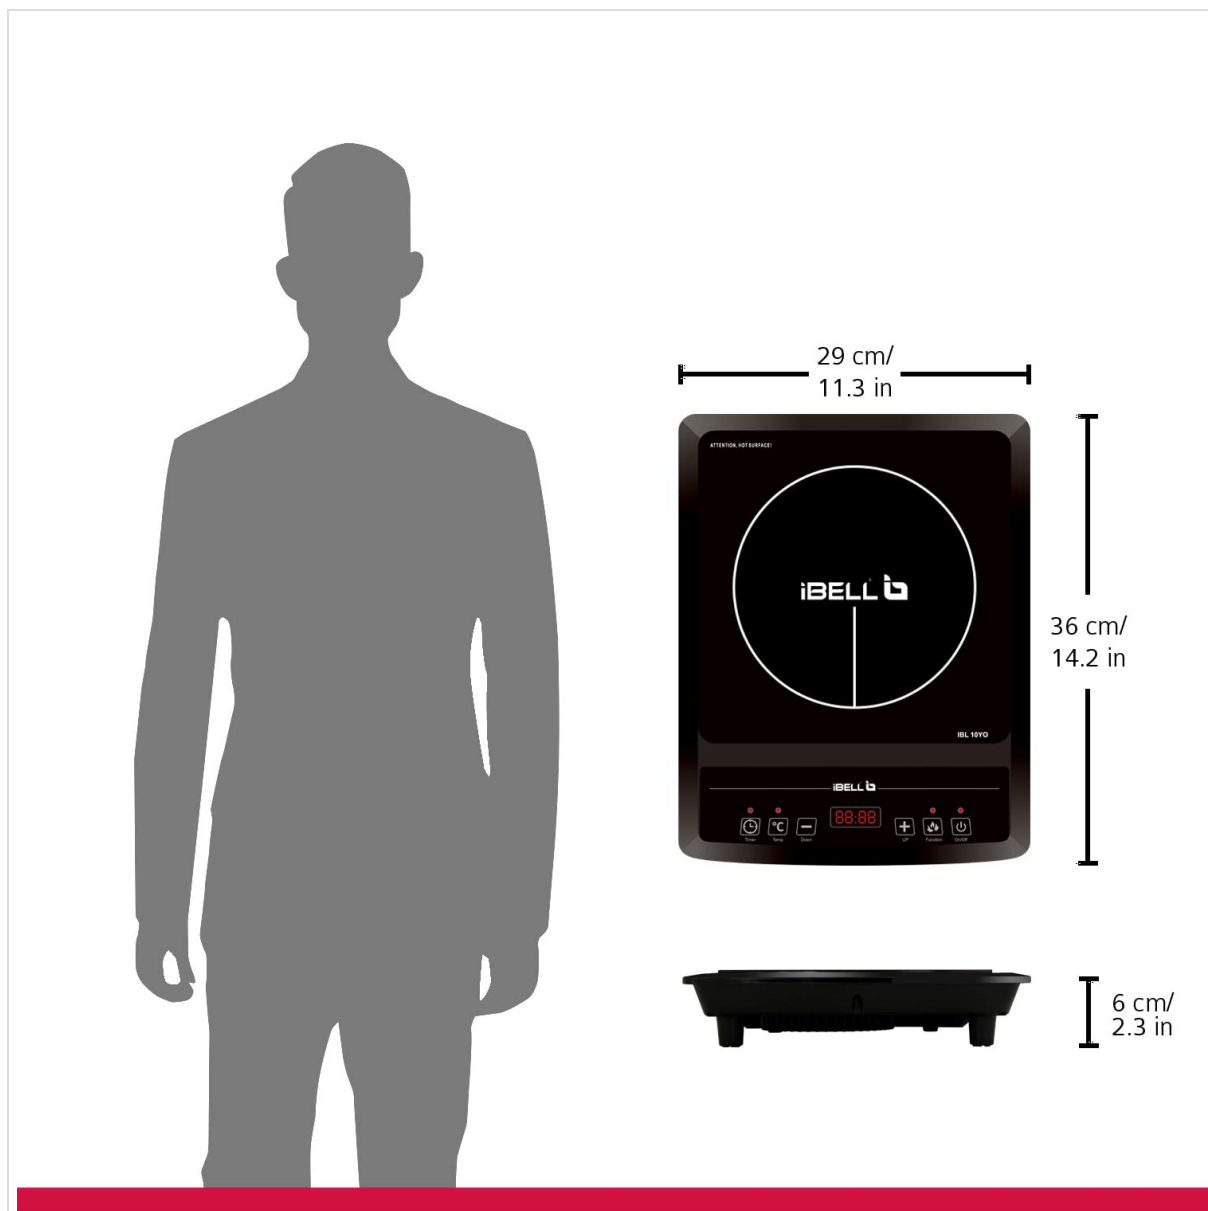


Image: Visual representation of the IBELL 10YO Induction Cooktop's dimensions.

- **Model Number:** 10YO (IBL 10YO)
- **Brand:** IBELL
- **Power:** 2000 Watts
- **Voltage:** 220 Volts
- **Heating Elements:** 1
- **Burner Type:** Induction
- **Control Type:** Push Button
- **Heater Surface Material:** Crystal Glass
- **Installation Type:** Counter-top
- **Color:** Black
- **Item Dimensions (D x W x H):** 36D x 28.7W x 6H Centimeters (approximately 14.2D x 11.3W x 2.3H inches)
- **Special Features:** Auto Shutoff Safety Protection, Overheat Protection, Super Wide Voltage Adaptability
- **Certification:** BIS Certified (IS 302-2-6 : 2009)

9. WARRANTY AND SUPPORT

Your IBELL 10YO Induction Cooktop comes with a comprehensive warranty and dedicated support.



1 Year Standard Warranty + 1 Year Additional Warranty On Free Registration

Image: Warranty information for the IBELL 10YO Induction Cooktop.

- **Warranty Period:** The product includes a 1 Year Standard Warranty. An additional 1 Year Warranty is available upon free registration. Please refer to the warranty card included with your product for full terms and conditions.
- **Registration:** To avail the additional warranty, register your product as per the instructions provided with the appliance or on the IBELL official website.
- **Customer Support:** For any service, repair, or technical assistance, please contact IBELL customer support. Refer to the product packaging or the IBELL website for the most current contact information.