

[Manuals.plus](#) /

- › [Harman Kardon](#) /
- › Harman Kardon Esquire Mini 2 - Portable Bluetooth Speaker - Black User Manual

Harman Kardon HKESQUIREM2BLKAM

Harman Kardon Esquire Mini 2 - Portable Bluetooth Speaker User Manual

Model: HKESQUIREM2BLKAM

1. INTRODUCTION

The Harman Kardon Esquire Mini 2 is an ultra-slim and portable Bluetooth speaker designed for high-fidelity audio and convenient conferencing on the go. Its compact size allows it to fit easily into briefcases or purses, making it an ideal travel companion. Despite its slim profile, it delivers powerful sound through specially tuned acoustics and features a built-in conferencing system with noise cancellation for clear calls. The device also includes a power bank function to charge other mobile devices.



Image: The Harman Kardon Esquire Mini 2, demonstrating its ultra-slim design and portability as it fits into a pocket.

2. WHAT'S IN THE BOX

Upon opening the package, please ensure all the following items are present:

- Harman Kardon Esquire Mini 2 Speaker
- Carrying Pouch
- USB-C Cable
- Quick Start Guide (this manual serves as a detailed guide)



Image: All components included with the Harman Kardon Esquire Mini 2, neatly arranged.

3. PRODUCT FEATURES

- **Wireless Bluetooth Streaming:** Connect wirelessly to your smartphone, tablet, or other Bluetooth-enabled devices for audio playback.
- **High Fidelity Sound:** Experience clear and rich audio quality from the powerful, super-thin speaker drivers and specially tuned acoustics.
- **Conferencing System:** Integrated microphone with noise cancellation ensures crystal-clear conference calls.
- **Extended Playtime:** Enjoy up to 10 hours of continuous audio playback on a single charge.
- **Built-in Power Bank:** Quickly charge your mobile devices via the speaker's USB-A port, ensuring you stay powered on the go.
- **Premium Design:** Crafted with high-quality materials, offering a sleek and sophisticated aesthetic.

4. SETUP GUIDE

4.1. Charging the Speaker

Before first use, fully charge your Harman Kardon Esquire Mini 2. The speaker is powered by a built-in Lithium Polymer battery.

1. Locate the USB-C charging port on the side of the speaker.
2. Connect the provided USB-C cable to the speaker's USB-C port.
3. Connect the other end of the USB-C cable to a compatible USB power adapter (not included) or a computer's USB port.
4. The charging indicator lights will illuminate, showing the charging status. A full charge takes approximately 3 hours.



Image: The side of the Harman Kardon Esquire Mini 2, illustrating the location of the charging port and control buttons.

4.2. Bluetooth Pairing

To connect your device to the Esquire Mini 2 via Bluetooth:

1. Power on the Harman Kardon Esquire Mini 2 by pressing and holding the Power button until the indicator light illuminates.
2. Press the Bluetooth button on the speaker. The Bluetooth indicator light will begin to flash, indicating it is in pairing mode.
3. On your smartphone or tablet, navigate to the Bluetooth settings.
4. Select "Harman Kardon Esquire Mini 2" from the list of available devices.
5. Once connected, the Bluetooth indicator light on the speaker will glow solid. The speaker has a Bluetooth range of approximately 10 meters (33 feet).

5. OPERATING INSTRUCTIONS

5.1. Power On/Off

- To power on, press and hold the **Power** button until the indicator light turns on.
- To power off, press and hold the **Power** button again until the indicator light turns off.

5.2. Audio Playback

- Once paired via Bluetooth, audio from your connected device will automatically play through the Esquire Mini 2.
- Use the volume buttons (+ and -) on the speaker or your connected device to adjust the volume.

- Control playback (play/pause, skip tracks) directly from your connected device.

5.3. Conferencing System

The Esquire Mini 2 features a built-in microphone for hands-free calling.

- When a call comes in, the music will pause. Press the **Phone** button to answer the call.
- To end a call, press the **Phone** button again.
- To reject an incoming call, press and hold the **Phone** button.

5.4. Power Bank Function

The Esquire Mini 2 can be used to charge other USB-powered devices.

1. Locate the USB-A output port on the side of the speaker.
2. Connect your device's charging cable (USB-A end) to the speaker's USB-A port.
3. Connect the other end of your device's charging cable to your smartphone, tablet, or other compatible device.
4. Charging will begin automatically. Note that using the power bank function will reduce the speaker's playtime.

6. MAINTENANCE AND CARE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's surface. Do not use abrasive cleaners or solvents.
- **Water Resistance:** The Harman Kardon Esquire Mini 2 is **NOT waterproof**. Avoid exposing the speaker to water, rain, or excessive moisture.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use for extended periods.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Connect the speaker to a power source using the USB-C cable and allow it to charge for at least 30 minutes before attempting to power on.
No sound from speaker.	Volume is too low or device is not connected.	Increase the volume on both the speaker and your connected device. Ensure the speaker is successfully paired via Bluetooth.
Bluetooth connection is unstable or drops.	Device is out of range or interference.	Move the connected device closer to the speaker (within 10 meters). Avoid obstacles between the devices. Try unpairing and re-pairing the speaker.
Cannot charge external device using power bank.	Speaker battery is low or cable is incompatible.	Ensure the speaker has sufficient battery charge. Use a compatible USB-A to device cable.

8. SPECIFICATIONS

Model Name	Harman Kardon Esquire Mini 2 - Black
------------	--------------------------------------

Speaker Type	Portable Bluetooth Speaker
Dimensions (L x W x H)	7.6 x 2.28 x 4.33 inches (193 x 58 x 110 mm)
Item Weight	8.8 ounces (250 Grams)
Power Source	Battery Powered
Battery Type	1 Lithium Polymer battery (included)
Battery Capacity	2200 mAh
Playtime	Up to 10 hours
Charging Time	Approximately 3 hours
Speaker Maximum Output Power	10 Watts
Wireless Technology	Bluetooth
Bluetooth Range	Up to 10 meters (33 feet)
Control Method	Touch
Microphone	Built-in with noise cancellation
Waterproof	No

9. WARRANTY AND SUPPORT

The Harman Kardon Esquire Mini 2 comes with a **Limited Warranty**. For detailed warranty terms and conditions, please refer to the warranty card included with your product or visit the official Harman Kardon website.

For technical support, troubleshooting assistance beyond this manual, or service inquiries, please visit the official Harman Kardon support website or contact their customer service. You can typically find contact information and support resources at www.harmankardon.com/support.