

## GUESS W1049G7

# GUESS W1049G7 Men's Quartz Analog Watch Instruction Manual

## INTRODUCTION

Thank you for choosing the GUESS W1049G7 Men's Quartz Analog Watch. This manual provides detailed instructions for the proper setup, operation, and maintenance of your new timepiece. Please read this manual thoroughly to ensure optimal performance and longevity of your watch. Keep this manual for future reference.

## IMPORTANT SAFETY INFORMATION

- Do not attempt to open the watch case or remove the back cover. This may damage the watch and void the warranty.
- Avoid exposing the watch to extreme temperatures (hot or cold) or sudden temperature changes.
- Keep the watch away from strong magnetic fields, as this can affect the accuracy of the quartz movement.
- Clean the watch regularly with a soft, dry cloth. Avoid using chemical cleaners.
- While water resistant, avoid operating the crown or pushers when the watch is wet to prevent water ingress.

## PACKAGE CONTENTS

Please check that your package contains the following items:

- GUESS W1049G7 Men's Quartz Analog Watch
- Instruction Manual (this document)
- Warranty Card (if applicable)

## PRODUCT OVERVIEW

The GUESS W1049G7 is a stylish and functional quartz analog watch designed for men. It features a durable stainless steel case, a comfortable silicone strap, and a chronograph function for precise time measurement.



**Figure 1:** Side view of the GUESS W1049G7 watch, highlighting the crown and chronograph pushers.



**Figure 2:** Detail of the blue silicone strap and the buckle mechanism.

## SETUP

### Setting the Time

1. Pull the crown (the knob on the side of the watch) out to the second click position.
2. Rotate the crown to set the hour and minute hands to the correct time.
3. Push the crown back in to the normal position to start the watch.

## Setting the Date (if applicable)

If your watch model includes a date display, follow these steps:

1. Pull the crown out to the first click position.
2. Rotate the crown to set the date. Avoid setting the date between 9 PM and 3 AM, as this may interfere with the automatic date change mechanism.
3. Push the crown back in to the normal position.

## Battery Information

Your GUESS W1049G7 watch is powered by a single LR44 battery, which is pre-installed. The battery life varies depending on usage. When the watch stops or the chronograph functions become erratic, it is time to replace the battery. We recommend having the battery replaced by a qualified watch technician to ensure proper sealing and water resistance.

## OPERATING YOUR WATCH

### Chronograph Function

The chronograph allows you to measure elapsed time independently of the main time display.

1. **Start:** Press the upper pusher (button) to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press the upper pusher again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
3. **Reset:** With the chronograph stopped, press the lower pusher to reset all chronograph hands to their zero positions.

### Water Resistance

Your GUESS W1049G7 watch has a water resistance rating of 100 meters (10 ATM). This means it is suitable for swimming and snorkeling. However, it is **not** suitable for scuba diving. Always ensure the crown is fully pushed in before exposing the watch to water. Do not operate the crown or pushers while the watch is submerged or wet.

## MAINTENANCE

### Cleaning Your Watch

- Wipe the watch case and strap with a soft, dry cloth regularly to remove dust and dirt.
- For the silicone strap, you can use a slightly damp cloth with mild soap and water, then rinse thoroughly and dry completely.
- Avoid using abrasive materials or harsh chemicals, as these can damage the watch's finish.

### Battery Replacement

When the battery needs replacement, it is highly recommended to take your watch to an authorized GUESS service center or a reputable watch repair shop. This ensures that the correct battery type (LR44) is used and that the watch's water resistance is maintained after the case back is opened and resealed.

## TROUBLESHOOTING

- **Watch not running:** Check if the crown is fully pushed in. If it is, the battery may need replacement.
- **Incorrect time:** Reset the time as described in the "Setting the Time" section. If the issue persists, the watch may require servicing.
- **Chronograph hands not resetting to zero:** This may indicate a need for chronograph hand calibration or battery replacement. Consult a professional watch technician.
- **Condensation under the crystal:** This indicates a loss of water resistance. Immediately take the watch to a service center to prevent further damage.

## SPECIFICATIONS

Feature	Detail
Model Number	W1049G7
Movement	Quartz
Display Type	Analog
Case Material	Stainless Steel
Case Diameter	46 mm
Case Thickness	8 mm
Band Material	Silicone
Band Width	22 mm
Dial Window Material	Mineral Glass
Water Resistance Depth	100 Meters (10 ATM)
Special Features	Chronograph, Calendar
Power Source	Battery Powered (1 x LR44, included)
Clasp Type	Lobster Buckle
Product Dimensions	8 x 8.99 x 8.99 cm; 249.48 g

## WARRANTY AND SUPPORT

Your GUESS W1049G7 watch is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details. For technical support, service, or warranty claims, please contact your authorized GUESS retailer or visit the official GUESS website for customer service contact information.

**Online Resources:** For additional information and support, you may visit the official GUESS website.