

Casio WS-1000H-1AVCF

Casio WS-1000H-1AVCF Digital Watch User Manual

Model: WS-1000H-1AVCF

1. INTRODUCTION

This manual provides detailed instructions for the Casio WS-1000H-1AVCF digital watch. This timepiece is designed for active use, featuring a 10-year battery, lap memory, stopwatch, timer, and water resistance up to 100 meters. Please read this manual thoroughly to understand the functions and proper operation of your watch.

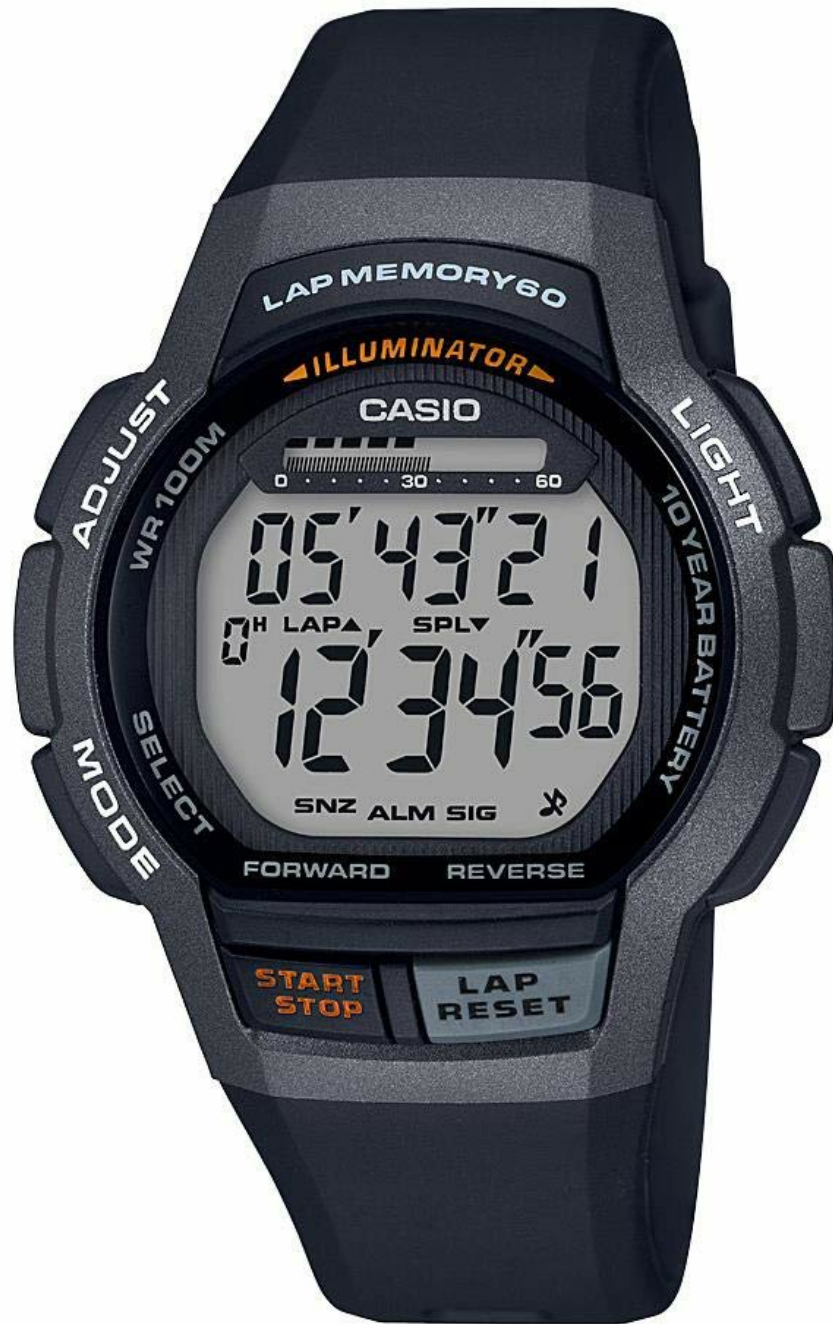


Image 1.1: Casio WS-1000H-1AVCF digital watch worn on a wrist.

Your browser does not support the video tag.

Video 1.1: An official product video showcasing the Casio WS-1000H-1AVCF watch from various angles, highlighting its design and digital display.

2. SETUP

2.1 Button Functions



Image 2.1: Front view of the Casio WS-1000H-1AVCF watch, indicating button labels.

- **ADJUST Button:** Used to enter and exit setting modes, and to confirm selections.
- **MODE Button:** Cycles through different watch modes (Timekeeping, Stopwatch, Timer, Alarm).
- **LIGHT Button:** Activates the LED backlight for illumination.
- **LAP/RESET Button:** Used for lap recording in Stopwatch mode and resetting values in setting modes.
- **FORWARD/REVERSE Buttons:** Used to change values or navigate options in setting modes.

2.2 Setting Time and Date

1. In Timekeeping Mode, press and hold the **ADJUST** button until the city code starts to flash.
2. Use the **FORWARD/REVERSE** buttons to select your desired city code (time zone).
3. Press the **MODE** button to cycle through the settings: DST (Daylight Saving Time), 12/24-hour format, seconds, hour, minute, year, month, day.
4. Use the **FORWARD/REVERSE** buttons to adjust each flashing value.
5. Press the **ADJUST** button to exit the setting mode.

2.3 Band Adjustment

The watch features a resin band with multiple holes for fine size adjustment, ensuring a comfortable and secure fit on the wrist. The curved tip of the band also aids in comfortable wear.

3. OPERATING MODES

Press the **MODE** button to cycle through the following modes:

- **Timekeeping Mode:** Displays the current time, day of the week, and date.
- **Stopwatch Mode:** Measures elapsed time, split times, and lap times.
- **Lap Memory Mode:** Stores up to 60 lap time records.
- **Countdown Timer Mode:** Counts down from a preset time.
- **Alarm Mode:** Sets daily alarms.

3.1 Stopwatch and Lap Memory

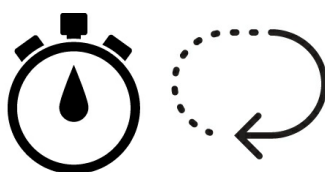


Image 3.1: Icons for Stopwatch and Lap Memory features.

The stopwatch measures elapsed time with 1/100-second accuracy. It can record up to 60 lap times, which are stored in the Lap Memory mode. During elapsed time measurement, both the elapsed time and the

current time of day can be displayed simultaneously.

- To start/stop the stopwatch: Press the **START/STOP** button (usually the lower right button).
- To record a lap: Press the **LAP/RESET** button while the stopwatch is running.
- To reset the stopwatch: Press the **LAP/RESET** button while the stopwatch is stopped.
- To view lap records: Enter Lap Memory mode using the **MODE** button and use **FORWARD/REVERSE** to scroll.

3.2 Countdown Timer

The countdown timer can be set for durations up to 24 hours. An alarm sounds when the countdown reaches zero.

- To set the timer: In Countdown Timer Mode, press and hold **ADJUST**. Use **MODE** to select hours/minutes/seconds and **FORWARD/REVERSE** to adjust. Press **ADJUST** to confirm.
- To start/stop the timer: Press the **START/STOP** button.

3.3 Alarm



Image 3.2: Icon for Alarm feature.

The watch includes a daily alarm function. You can set one daily alarm.

- To set the alarm: In Alarm Mode, press and hold **ADJUST**. Use **MODE** to select hours/minutes and **FORWARD/REVERSE** to adjust. Press **ADJUST** to confirm.
- To turn the alarm on/off: In Alarm Mode, press the **START/STOP** button.

3.4 LED Light

Press the **LIGHT** button to illuminate the display for easy reading in low-light conditions.

4. WATER RESISTANCE



Image 4.1: Icon for 100M Water Resistance.

The Casio WS-1000H-1AVCF watch is rated for 100-meter (10 BAR) water resistance. This means it is suitable for:

- Daily use, such as handwashing and showering.
- Swimming.
- Skin diving (snorkeling).

Important: This watch is **not** suitable for scuba diving or high-impact water sports. Do not operate buttons while the watch is wet or submerged.

5. MAINTENANCE

5.1 Battery

The watch is equipped with a long-life battery, designed to last approximately 10 years under normal usage conditions. When the display becomes dim or the light function weakens, it indicates that the battery needs replacement. Battery replacement should be performed by a qualified technician.

5.2 Cleaning

To maintain the appearance and functionality of your watch:

- Wipe the watch regularly with a soft, dry cloth.
- For stubborn dirt, use a soft cloth dampened with water and a mild soap, then wipe dry.
- Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's resin components.

6. TROUBLESHOOTING

- **Blank Display:** The battery may be depleted. Replace the battery.
- **Incorrect Time/Date:** Re-adjust the time and date settings as described in Section 2.2.
- **Buttons Not Responding:** Ensure the watch is not in a locked mode (if applicable, refer to full manual for advanced features). If the issue persists, a reset may be required (consult a service center).
- **Water Inside Display:** Immediately stop using the watch and take it to an authorized service center. This indicates a breach in water resistance.

7. SPECIFICATIONS

Feature	Detail
Model Number	WS-1000H-1AVCF
Display Type	Digital
Movement Type	Quartz
Case Material	Resin
Band Material	Resin
Water Resistance	100 Meters (10 BAR)
Battery Life	Approx. 10 years
Lap Memory	Up to 60 records
Additional Features	LED Light, Stopwatch, Countdown Timer, Alarm
Case Diameter	42.6 Millimeters
Case Thickness	12.7 Millimeters
Band Width	18.6 Millimeters
Item Weight	0.08 Pounds

8. WARRANTY AND SUPPORT

This Casio watch comes with a manufacturer's warranty. For specific warranty terms, duration, and service procedures, please refer to the warranty card included with your purchase or visit the official Casio website. For technical support or service inquiries, please contact Casio customer service.

Manufacturer: VLC Distribution Co., Inc.

Date First Available: February 7, 2019