

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [JVC](#) /

› [JVC RM-C3184 Original Remote Control User Manual](#)

JVC RM-C3184

JVC RM-C3184 Original Remote Control User Manual

Model: RM-C3184 | Brand: JVC

1. INTRODUCTION

This manual provides essential information for the proper use and maintenance of your JVC RM-C3184 original remote control. Please read these instructions carefully before use to ensure optimal performance and longevity of your device.



Figure 1: JVC RM-C3184 Original Remote Control. This image displays the full layout of the remote control, including all buttons and their respective functions.

2. SETUP AND BATTERY INSTALLATION

The JVC RM-C3184 remote control is designed for immediate use with compatible JVC televisions without requiring any programming. Simply install the batteries to begin operation.

2.1 Battery Requirements

- Requires: 2 x AAA Alkaline batteries (not included).

2.2 Battery Installation Steps

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) and lift to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Important: Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries. Remove batteries if the remote control will not be used for an extended period.

3. OPERATING INSTRUCTIONS

The JVC RM-C3184 remote control provides full functionality for your compatible JVC television. Below is a guide to the main buttons and their functions.

3.1 Button Functions Overview

- **Power Button ()**: Turns the television on or off.
- **Netflix Button**: Direct access to the Netflix application.
- **Number Buttons (0-9)**: Select channels directly or input numbers for menu options.
- **TV Button**: Switches the input source to TV mode.
- **Volume Up/Down (+/-)**: Adjusts the sound volume.
- **Mute Button ()**: Mutes or unmutes the television sound.
- **Channel Up/Down (^/~)**: Changes channels sequentially.
- **Menu Button**: Opens the main menu of the television.
- **Q. Menu Button**: Accesses the Quick Menu for common settings.
- **Navigation Buttons (Up, Down, Left, Right)**: Navigates through menus and options.
- **OK Button**: Confirms selections in menus.
- **Back Button**: Returns to the previous screen or menu.
- **Exit Button**: Exits the current menu or application.
- **Info Button (i)**: Displays information about the current program or input.
- **Source Button ()**: Selects the input source (HDMI, AV, etc.).
- **EPG Button**: Opens the Electronic Program Guide.
- **YouTube Button**: Direct access to the YouTube application.
- **Star/Favorite Button**: Accesses favorite channels or content.
- **Text/Teletext Button**: Activates or deactivates Teletext.
- **LANG. Button**: Changes audio language or subtitle language.
- **SUBT. Button**: Toggles subtitles on or off.
- **Media Control Buttons (Rewind, Play/Pause, Fast Forward, Stop, Record)**: Controls media playback.
- **Colored Buttons (Red, Green, Yellow, Blue)**: Functions vary depending on the current menu or application.

4. MAINTENANCE AND CARE

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning**: Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement**: Replace batteries promptly when the remote control's response becomes sluggish or stops working. Refer to Section 2 for battery installation instructions.
- **Storage**: Store the remote control in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.

- **Avoid Drops:** Protect the remote control from physical impact, as drops can damage internal circuitry.

5. TROUBLESHOOTING

If you experience issues with your JVC RM-C3184 remote control, please refer to the following common troubleshooting steps:

- **Remote Control Not Responding:**

- Check if the batteries are correctly inserted with the correct polarity (+/-).
- Replace the batteries with new ones.
- Ensure there are no obstructions between the remote control and the television's infrared sensor.
- Make sure you are within the effective operating range (approximately 10 meters) and pointing the remote directly at the TV.

- **Specific Buttons Not Working:**

- Clean the remote control surface, especially around the problematic buttons, to remove any dirt or debris that might be interfering.
- If only a few buttons are unresponsive after checking batteries, the remote control might be damaged and may require replacement.

- **No Programming Required:** Remember that this remote control does not require any programming. If it's not working, it's likely a battery or line-of-sight issue, or the remote itself is faulty.

6. SPECIFICATIONS

Model Name:	RM-C3184
Brand:	JVC
Product Type:	Original Remote Control
Connectivity Technology:	Infrared
Compatible Devices:	Television
Power Source:	2 x AAA Batteries (not included)
Special Feature:	No programming required
Maximum Range:	10 meters
Dimensions (L x W x H):	Approximately 24 x 9.6 x 2.5 cm
Item Weight:	Approximately 70 grams

7. WARRANTY AND SUPPORT

For information regarding warranty coverage, please refer to the documentation provided at the time of purchase or contact your retailer. For further technical assistance or support, please visit the official JVC website or contact JVC customer service directly.

JVC Official Website: www.jvc.com

Related Documents - RM-C3184

	<p>JVC RM-C3333 Replacement Remote Control Button Guide</p> <p>A comprehensive guide comparing the buttons of original JVC remote controls with compatible replacement remote controls, detailing functional equivalencies for various models including the RM-C3333.</p>
	<p>JVC RM-RXU7000R Remote Control: Original vs. Substitute Button Guide</p> <p>A comprehensive guide comparing the original buttons on a JVC RM-RXU7000R remote control with their substitute functions, detailing each button's purpose and any modifications for easier user understanding. Includes a comparison of two different remote control models.</p>
	<p>JVC LT-19D200 LCD Television Built-in DVD Player User Guide</p> <p>This user guide provides comprehensive information for the JVC LT-19D200 LCD Television with built-in DVD player, covering setup, features, operation, and troubleshooting for an optimal home entertainment experience.</p>
	<p>JVC RM-SUXG45R Télécommande : Guide d'utilisation et fonctions</p> <p>Découvrez les fonctions et l'utilisation de la télécommande JVC RM-SUXG45R. Ce guide détaille les boutons et leurs correspondances pour une utilisation optimale de votre appareil JVC.</p>
	<p>JVC RM-C1244 Replacement Remote Control Function Comparison</p> <p>A detailed comparison of the original JVC RM-C1244 remote control's button functions with its compatible replacement, highlighting feature mappings for ease of use.</p>
	<p>JVC RM-C1244 Replacement Remote Control Button Guide</p> <p>Detailed comparison of the original JVC RM-C1244 remote control buttons and their corresponding functions on a replacement remote. Includes button mappings, labels, and visual indicators for easy transition.</p>