

- Manuals.plus /
- > USARMT /
- > USARMT 101018E0011 Remote Control Instruction Manual

USARMT 101018E0011

Instruction Manual

USARMT Remote Control Model 101018E0011

INTRODUCTION

This manual provides comprehensive instructions for the USARMT 101018E0011 Remote Control, designed for use with specific Element Roku 4K Ultra Smart TVs. Please read this manual carefully before using your new remote control to ensure proper operation and longevity.

PRODUCT OVERVIEW

The USARMT 101018E0011 is an infrared (IR) remote control specifically designed to be compatible with various Element Roku Smart TV models. It features dedicated buttons for popular streaming services, providing quick access to your favorite content.





Figure 1: Front view of the USARMT 101018E0011 remote control, showing all buttons including the power, navigation, playback, and dedicated streaming service buttons (Netflix, Hulu, Vudu, Starz).





Figure 2: Side view of the USARMT 101018E0011 remote control, highlighting its ergonomic design and slim profile.



Figure 3: Combined front and side views of the USARMT 101018E0011 remote control, illustrating its overall dimensions and button layout.

Button Functions:

- **Power Button** (⏻): Turns the TV on or off.
- **Home Button** (🏠): Returns to the Roku Home screen.
- **Navigation Pad** (Up, Down, Left, Right, OK): Used to navigate menus and select items.

- **Back Button (↶):** Returns to the previous screen or menu.
- **Rewind (⏮), Play/Pause (⏸), Fast Forward (⏭):** Controls media playback.
- **Dedicated Channel Keys (Netflix, Hulu, Vudu, Starz):** Provides direct access to these streaming applications.
- **Volume Up/Down (⏮):** Adjusts the TV volume. (Note: These buttons are typically on the side for Roku remotes, as seen in Figure 2).
- **Mute Button (⏸):** Mutes or unmutes the TV audio. (Typically on the side).

COMPATIBILITY

This remote control is specifically designed to be compatible with the following Element Roku 4K Ultra Smart TV models:

- E4SW5017RKU
- E2SW6518RKU
- E4SW5518RKU

Ensure your TV model matches one of the listed models for proper functionality. This remote operates via infrared (IR) and does not require pairing for compatible models.

SETUP

Installing Batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two (2) AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote control is ready for use with a compatible Element Roku TV. No additional pairing steps are typically required for this IR remote.

OPERATING INSTRUCTIONS

To operate your Element Roku TV with this remote control, point the remote directly at the TV's IR receiver. Ensure there are no obstructions between the remote and the TV.

- **Turning On/Off:** Press the **Power** button once.
- **Navigating Menus:** Use the **Up, Down, Left, Right** arrows to move through options. Press **OK** to select.
- **Accessing Home Screen:** Press the **Home** button.
- **Using Streaming Buttons:** Press the dedicated **Netflix, Hulu, Vudu, or Starz** buttons to launch those applications directly.
- **Adjusting Volume:** Use the **Volume Up** and **Volume Down** buttons on the side of the remote. Press the **Mute** button to silence audio.
- **Media Playback:** Use the **Rewind, Play/Pause, and Fast Forward** buttons for controlling video content.

MAINTENANCE

Battery Replacement:

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning:

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use abrasive cleaners, solvents, or alcohol, as these can damage the remote's surface or internal components.

Storage:

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote is not working.	Batteries are dead or inserted incorrectly. Obstruction between remote and TV. Remote is out of range. TV's IR receiver is blocked or faulty.	Replace batteries with new ones, ensuring correct polarity. Remove any objects blocking the line of sight to the TV. Move closer to the TV. Check TV manual for IR receiver location and ensure it's clear.
Buttons are unresponsive or sticky.	Dirt or debris under buttons. Internal component issue.	Clean the remote as described in the Maintenance section. If cleaning does not resolve the issue, the remote may need replacement.
Dedicated streaming buttons do not work.	TV is not a compatible Roku Smart TV. Application is not installed or updated on the TV.	Verify your TV model against the Compatibility section. Ensure the respective streaming application is installed and up-to-date on your Roku TV.

SPECIFICATIONS

- **Model:** 101018E0011
- **Brand:** USARMT
- **Connectivity Technology:** Infrared (IR)
- **Compatible Devices:** Element Roku 4K Ultra Smart TVs (E4SW5017RKU, E2SW6518RKU, E4SW5518RKU)
- **Power Source:** 2 x AAA Batteries (not included)
- **Special Feature:** Ergonomic design, Dedicated streaming service buttons
- **Max Number of Supported Devices:** 1
- **Package Dimensions:** 5.51 x 2.01 x 0.79 inches
- **Item Weight:** 1.8 ounces

- **Date First Available:** January 23, 2019

WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the product packaging or contact the manufacturer, USARMT, directly through their official channels. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2024 USARMT. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07N1WS33F>

More documents and user manuals: <https://manuals.plus/>