

[Manuals.plus](#) /

› [Ikea](#) /

› IKEA Godmorgon 403.910.11 Resjön Tall Cabinet User Manual

**Ikea 403.910.11**

# IKEA Godmorgon 403.910.11 Resjön Tall Cabinet Instruction Manual

Model: 403.910.11

## 1. PRODUCT OVERVIEW

The IKEA Godmorgon Resjön Tall Cabinet, model 403.910.11, is a versatile storage solution designed for various spaces, particularly bathrooms. This cabinet features adjustable shelves, three of which are made from durable tempered glass, offering high resistance to heat and impact, and a high load capacity. The door can be mounted to open from either the right or the left, providing flexibility for your space. A handle and hinges are included for convenience.

For safety, this furniture must be securely fastened to the wall using the included wall anchoring device. Always use fasteners appropriate for your specific wall materials.



Image 1: The IKEA Godmorgon Resjön Tall Cabinet in white, showcasing its sleek design and single door.

## 2. SETUP AND ASSEMBLY

This product requires assembly. Please follow the detailed instructions provided in the separate assembly guide included with your purchase. Ensure all components are present before beginning assembly.


### 2.1 Wall Anchoring

It is crucial to secure the cabinet to the wall using the provided anchoring device to prevent tipping. Different wall materials require different types of fasteners. Please ensure you use fasteners suitable for the walls in your home. If you are unsure, consult a professional.

### 2.2 Door Installation

The cabinet door can be installed to open from either the right or the left side. Determine your preferred opening direction before attaching the hinges and handle.

### 2.3 Dimensions for Planning

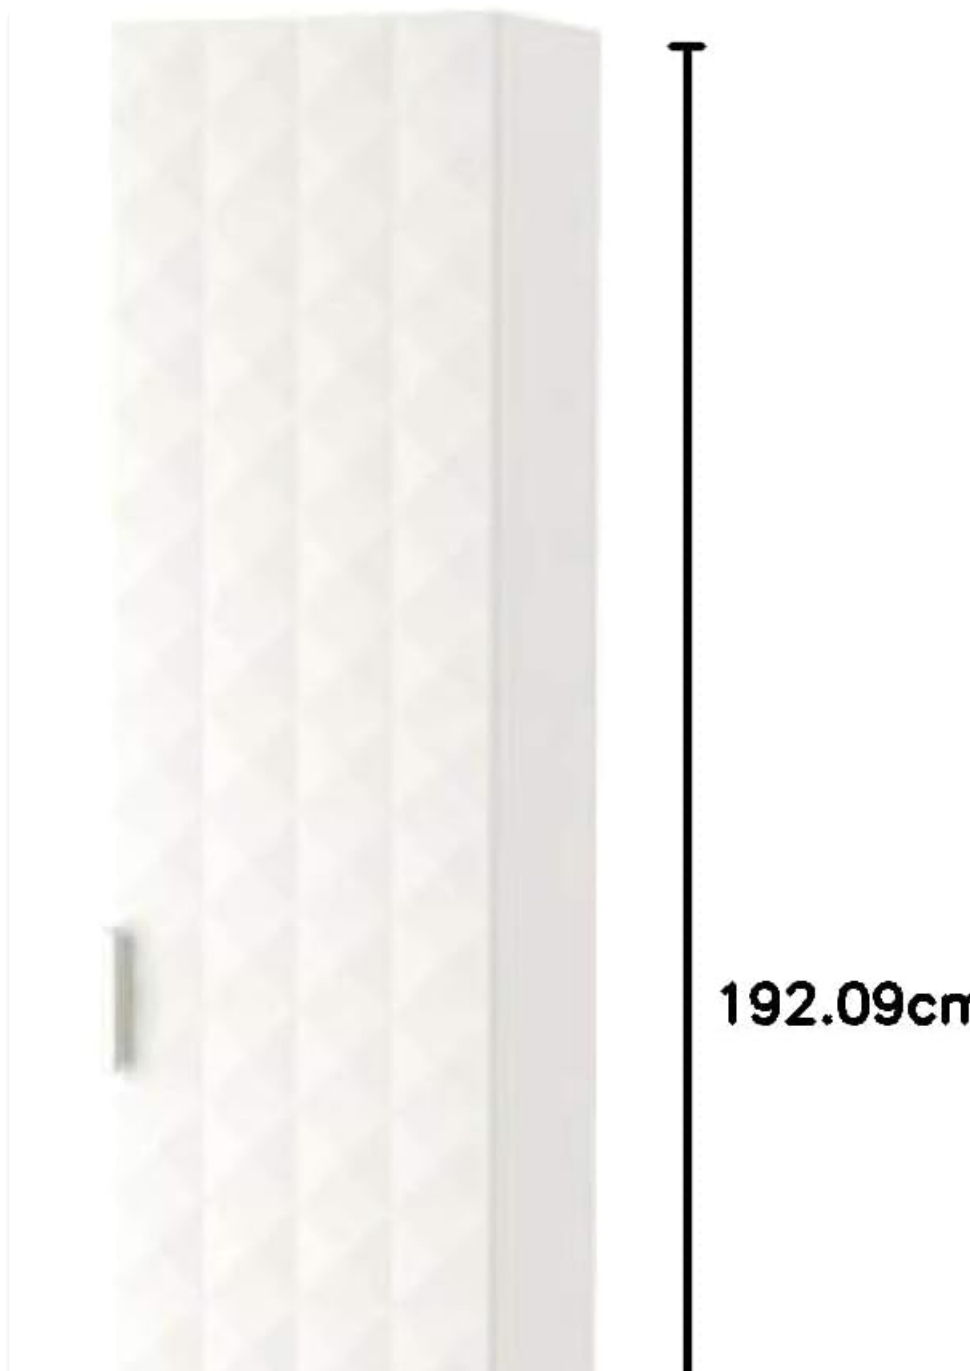

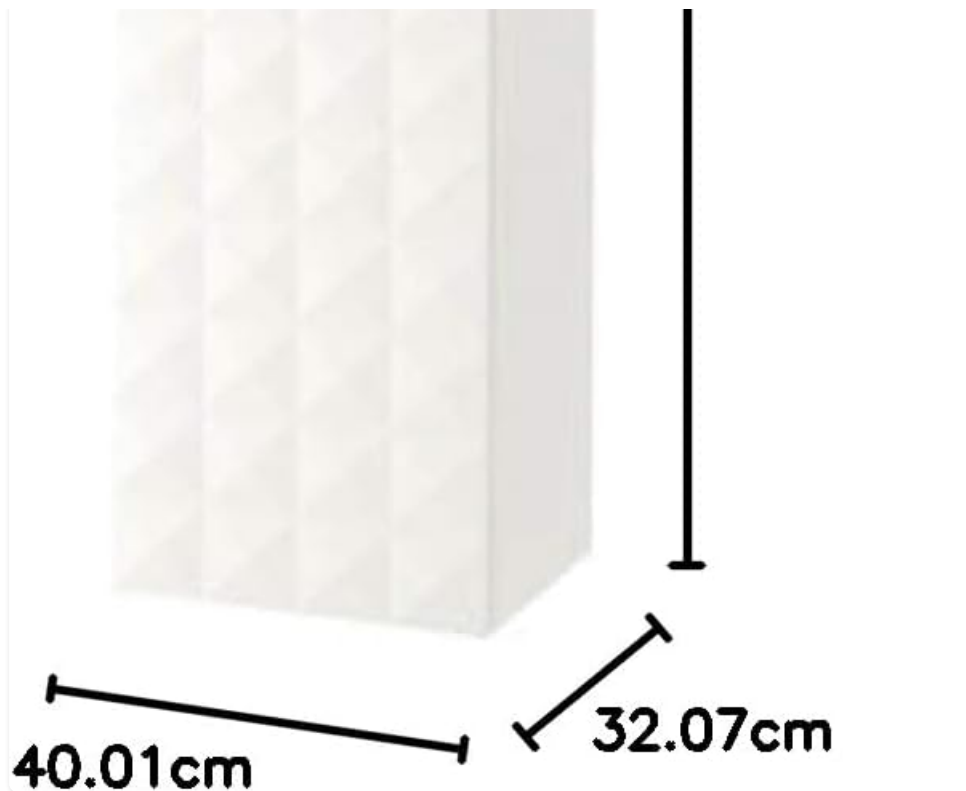


Image 2: Diagram illustrating the dimensions of the IKEA Godmorgon Resjön Tall Cabinet: 40.01 cm (width), 32.07 cm (depth), and 192.09 cm (height).

### 3. OPERATING AND USAGE

---

#### 3.1 Adjusting Shelves

The cabinet includes one fixed shelf and five adjustable shelves (three of which are glass). You can easily move the adjustable shelves to customize the spacing according to your personal storage needs. Simply lift the shelf, reposition the shelf supports to the desired height, and then place the shelf back onto the supports.

#### 3.2 Door Reversal

If you wish to change the door's opening direction after initial assembly, you can reverse its mounting. This typically involves detaching the door and hinges, flipping the door, and reattaching the hinges to the opposite side of the cabinet frame. Refer to the assembly guide for detailed steps.

### 4. MAINTENANCE

---

Proper care will ensure the longevity and appearance of your cabinet.

- **Cleaning:** Wipe clean with a mild soapy solution.
- **Drying:** Dry with a clean cloth immediately after cleaning.
- **Moisture:** Any wet marks should always be wiped dry as soon as possible to prevent moisture penetration and potential damage to the material.

### 5. TROUBLESHOOTING

---

If you encounter any issues with your cabinet, consider the following common solutions:

- **Wobbly Cabinet:** Ensure the wall anchoring device is securely fastened and that all assembly screws are

tightened. Uneven floors can also cause wobbling; consider using furniture glides or shims.

- **Door Misalignment:** Check the hinge adjustments. Most hinges allow for minor adjustments to align the door properly. Refer to the assembly guide for hinge adjustment instructions.
- **Difficulty Adjusting Shelves:** Ensure the shelf supports are fully inserted into the pre-drilled holes. Do not force shelves into place.

For persistent issues, please refer to the IKEA customer support resources.

## 6. SPECIFICATIONS

| Feature                     | Detail                                        |
|-----------------------------|-----------------------------------------------|
| Product Dimensions (Width)  | 15 3/4" (40 cm)                               |
| Product Dimensions (Depth)  | 12 5/8" (32 cm)                               |
| Product Dimensions (Height) | 75 5/8" (192 cm)                              |
| Designer                    | IKEA of Sweden                                |
| Frame Material              | Particleboard, Foil, Laminate                 |
| Back Panel Material         | Fibreboard, Foil                              |
| Door Material               | Fibreboard, Plastic foil, Melamine foil       |
| Shelf Material              | Tempered glass, Particleboard, Foil, Laminate |
| Adjustable Shelves          | 5 (3 of which are glass)                      |
| Fixed Shelves               | 1                                             |

## 7. WARRANTY AND SUPPORT

### 7.1 Limited Warranty

This product comes with a 10-year Limited Warranty. Please refer to the separate warranty brochure provided with your purchase for full terms and conditions, including coverage details and exclusions.

### 7.2 Customer Support

For further assistance, spare parts, or detailed assembly instructions, please visit the official IKEA website or contact IKEA customer service in your region. Have your product model number (403.910.11) and proof of purchase ready when contacting support.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B07N1X6LX2>

More documents and user manuals: <https://manuals.plus/>