

[Manuals.plus](#) /

› [Bewinner](#) /

› Bewinner MF925 4G LTE WiFi Mobile Router User Manual

Bewinner MF925

Bewinner MF925 4G LTE WiFi Mobile Router User Manual

Model: MF925

1. INTRODUCTION

Thank you for choosing the Bewinner MF925 Portable 4G LTE WiFi Mobile Router. This device provides high-speed wireless internet access on the go, supporting multiple users and devices simultaneously. This manual will guide you through the setup, operation, and maintenance of your new router to ensure optimal performance.

2. PACKAGE CONTENTS

- 1 x Bewinner MF925 WiFi Box
- 1 x USB Charging Cable
- 1 x User Manual
- *Note: SIM card and SD card are NOT included.*

3. PRODUCT OVERVIEW

3.1 Physical Components

The Bewinner MF925 router is designed for portability and ease of use. Below are the key physical features of the device.



Image: Front view of the Bewinner MF925 router, showing the power button and LED indicators.

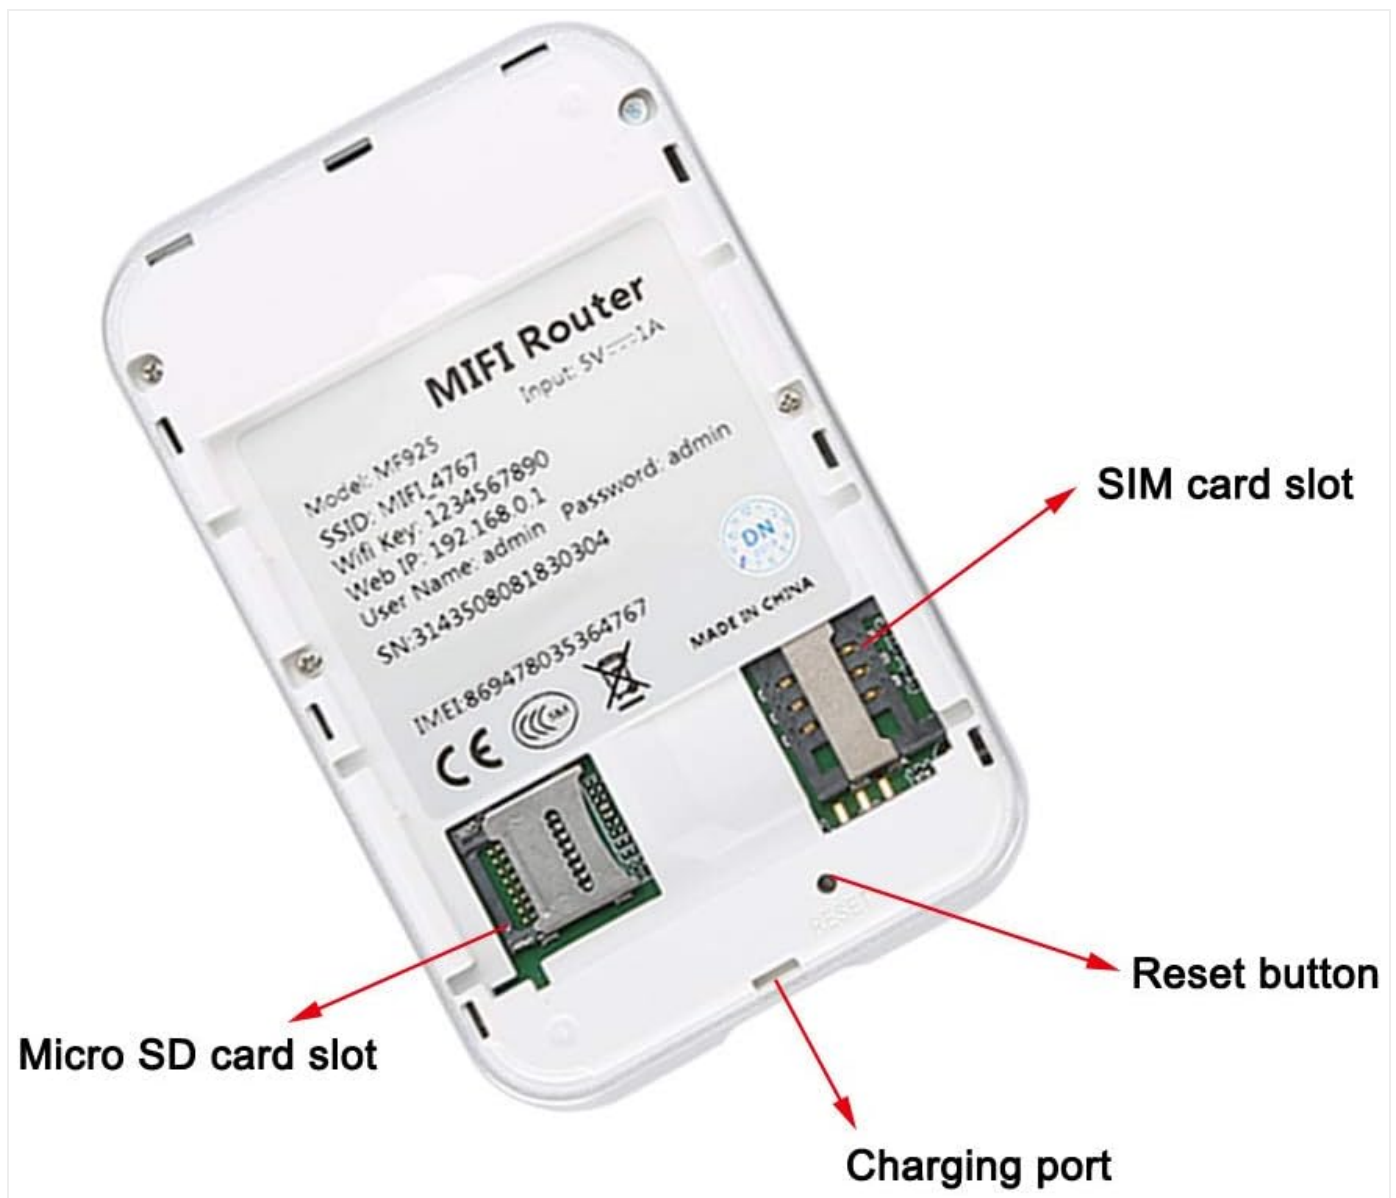


Image: Detailed view of the router's underside, highlighting the SIM card slot, Micro SD card slot, Reset button, and Charging port.

3.2 LED Indicators

The router features LED indicators on its front panel to display device status:

- **Battery Indicator:** Shows the current battery level.
- **WiFi Indicator:** Indicates WiFi network status.
- **Signal Indicator:** Displays the strength of the 4G/LTE signal.

4. SETUP

4.1 Inserting the SIM Card

1. Ensure the router is powered off.
2. Locate the SIM card slot on the underside of the device (refer to Product Overview image).
3. Carefully insert your standard SIM card into the slot until it clicks into place. Ensure the card is oriented correctly.
4. Close the cover if applicable.

Important: This router requires a standard SIM card. A SIM card is not included with the product and must be purchased separately from your local service provider.

4.2 Inserting the Micro SD Card (Optional)

1. Ensure the router is powered off.
2. Locate the Micro SD card slot next to the SIM card slot.
3. Insert a Micro SD card (up to 32GB, not included) into the slot until it clicks.



Image: Internal view of the router showing the SIM card slot, Micro SD card slot, and the removable battery.

4.3 Powering On/Off

- **To Power On:** Press and hold the power button (circular button on the front) for a few seconds until the LED indicators light up.
- **To Power Off:** Press and hold the power button again for a few seconds until the LED indicators turn off.

4.4 Initial Connection

Once powered on, the router will automatically search for a network. You can connect your devices using the default WiFi credentials:

Support to restore the factory settings, you can make this setting when necessary, clear all the data, re-set the router



WiFi name: 4GMIFI_4767
WiFi password: 1234567890
Homepage: 192.168.0.1
Username: admin
Password: admin

Image: Displaying the default WiFi name, password, homepage IP, username, and password for router access.

- **WiFi Name (SSID):** 4GMIFI_4767
- **WiFi Password:** 1234567890
- **Homepage (Router Admin Panel):** 192.168.0.1
- **Username:** admin
- **Password:** admin

It is highly recommended to change the default WiFi password and admin password for security reasons after your first successful connection. Access the homepage (192.168.0.1) from a connected device to manage settings.

5. OPERATING INSTRUCTIONS

5.1 Connecting Devices

The Bewinner MF925 router supports up to 10 users simultaneously.

1. Ensure the router is powered on and has an active internet connection (signal indicator is stable).
2. On your smartphone, tablet, laptop, or other Wi-Fi enabled device, search for available Wi-Fi networks.
3. Select the network named "4GMIFI_4767" (or your custom SSID if changed).
4. Enter the Wi-Fi password (default: 1234567890, or your custom password).
5. Your device should now be connected to the internet.

10 Support multi-user access with stable signal



Image: Illustration showing multiple users and devices connecting to the Bewinner MF925 router for internet access.

4G Wireless Router(150Mbps)

Smartphone, tablet or computer can access the Internet through this device and enjoy a high-speed network



Image: Diagram illustrating the Bewinner MF925 router providing internet connectivity to a laptop, desktop computer, tablet, and smartphone.

5.2 USB Modem Function

The router can also function as a USB modem for Windows PCs.

1. Connect the router to your Windows PC using the provided USB charging cable.
2. The PC should recognize the device and install necessary drivers automatically.
3. Once installed, the router will provide internet access directly to your PC via USB.

5.3 Charging the Device

The Bewinner MF925 has a built-in 3.8V 2100mAh battery, providing approximately 6-7 hours of working time on a full charge.

- Connect the router to a USB power source (e.g., computer, laptop, car charger, power bank, or wall adapter) using the provided USB charging cable.
- The battery indicator LED will show charging status.

USB Charging

Convenient charging method, computer, notebook, car charger, charging treasure, etc. can provide charging for the router



Image: The Bewinner MF925 router connected via USB for charging, with an icon indicating battery level.

6. MAINTENANCE

6.1 Restoring Factory Settings

If you encounter persistent issues or wish to clear all custom settings, you can restore the router to its factory defaults.

1. Ensure the router is powered on.
2. Locate the "Reset" button on the underside of the device (refer to Product Overview image). This is typically a small pinhole.
3. Using a paperclip or a similar pointed object, press and hold the Reset button for approximately 5-10 seconds until the LED indicators flash or the device restarts.
4. Release the button. The router will restart with its default settings (including WiFi name and password).

6.2 General Care

- Keep the device dry and away from moisture.
- Avoid exposing the device to extreme temperatures.

- Do not drop or subject the device to strong impacts.
- Clean the device with a soft, dry cloth. Do not use liquid cleaners.
- Ensure proper ventilation when in use to prevent overheating.

7. TROUBLESHOOTING

If you experience issues with your Bewinner MF925 router, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
No internet connection	No SIM card inserted, SIM card not activated, no signal, incorrect APN settings.	Ensure SIM card is properly inserted and active. Check signal strength. Access router admin panel (192.168.0.1) to verify APN settings.
Cannot connect to WiFi	Incorrect WiFi password, router not powered on, WiFi disabled.	Verify WiFi password. Ensure router is powered on and WiFi indicator is lit. Try restarting the router.
Slow internet speed	Weak signal, too many connected devices, network congestion, data limit reached.	Move to an area with better signal. Disconnect unnecessary devices. Check your data plan with your service provider.
Battery not charging	Faulty USB cable, power source issue, damaged charging port.	Try a different USB cable and power source. Ensure the charging port is clean and undamaged.
Router unresponsive	Software glitch, overheating.	Perform a soft reset (power off/on). If issue persists, perform a factory reset (refer to Section 6.1).

8. TECHNICAL SPECIFICATIONS

Detailed specifications for the Bewinner MF925 Portable 4G LTE WiFi Mobile Router:

Feature	Specification
Model	MF925
Operating Frequency	4G/LTE-FDD: B1/B3/B5 (850/1200/2100MHz); 3G/WCDMA: B1 (2100MHz)
WiFi Standard	2.4G 802.11b/g/n
Transmission Rate	150Mbps (DL), 50Mbps (UL)
Rated Input	5V 1A
Battery	3.8V 2100mAh (Built-in)
Working Hours (Fully Charged)	6-7 hours
Charging Method	USB charging
SD Card Support	Up to 32GB (Micro SD)
SIM Card Type	Standard SIM card
Connected Users	Up to 10

Feature	Specification
Dimensions	95 x 60 x 15 mm (3.7 x 2.4 x 0.6 in)
Weight	Approx. 152g (0.15 Kilograms)
Compatible Devices	Laptop, Personal Computer, Tablet, Smartphone



Image: Diagram showing the dimensions of the Bewinner MF925 router in millimeters and inches.

9. WARRANTY AND SUPPORT

Bewinner aims to provide high-quality products. For any questions or issues regarding your MF925 router, please contact Bewinner customer support. Refer to your purchase documentation for specific warranty terms and contact information. You can also visit the official Bewinner store on Amazon for more information:[Bewinner Store](#).

10. IMPORTANT SAFETY INFORMATION

Please read and follow these safety guidelines to ensure safe operation and proper disposal of the product and its packaging.



1 Warning

Please dispose of the packaging materials properly after use to avoid choking hazard.

2 Warnung

Bitte entsorgen Sie das Verpackungsmaterial nach Gebrauch ordnungsgemäß, um Erstickungsgefahr zu vermeiden.

3 Avertissement

Veuillez jeter les matériaux d'emballage correctement après utilisation pour éviter tout risque d'étouffement.

4 Advertencia

Deseche los materiales de embalaje adecuadamente después de su uso para evitar peligro de asfixia.

5 Ostrzeżenie

Po użyciu należy odpowiednio zutylizować materiały opakowaniowe, aby uniknąć ryzyka zadławienia.

6 Waarschuwing

Gooi de verpakkingsmaterialen na gebruik op de juiste manier weg om verstikkingsgevaar te voorkomen.

7 Varning

Kassera förpackningsmaterialet på rätt sätt efter användning för att undvika kvävningsrisk.

8 Attenzione

Smaltire correttamente i materiali di imballaggio dopo l'uso per evitare rischi di soffocamento.

9 Uyarı

Boğulma tehlikesini önlemek için lütfen kullanımdan sonra ambalaj malzemelerini uygun şekilde atın.

Image: A warning notice in multiple languages advising proper disposal of packaging materials to avoid choking hazards.

- Dispose of packaging materials properly after use to avoid choking hazards, especially for children.
- Do not disassemble, crush, puncture, or short-circuit the battery.
- Do not expose the device or battery to high temperatures or fire.
- Keep the device away from water or other liquids.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07N2JVPM4>

More documents and user manuals: **<https://manuals.plus/>**