

Manuals.plus /

› Takara /

› Takara T-6008 Portable Trolley Speaker Instruction Manual

Takara T-6008

Takara T-6008 Portable Trolley Speaker Instruction Manual

MODEL: T-6008

Introduction

Thank you for choosing the Takara T-6008 Portable Trolley Speaker. This manual provides essential information for the safe and efficient operation of your new PA system. Please read these instructions carefully before use and retain them for future reference.

What's in the Box

Upon unpacking, please ensure all items listed below are present and in good condition:

- Takara T-6008 Speaker Unit (Subwoofer)
- 2 x Cordless Microphones
- Power Adapter
- Remote Control
- User Manual (this document)



Image: The Takara T-6008 speaker unit, two wireless microphones, power adapter, and remote control are shown together.

Key Features

- 8-inch Speaker Trolley System
- Built-in USB MP3 Player
- Audio Recording Function (to USB or SD card)
- Bluetooth Connectivity (Bluetooth V 5.0)
- Inbuilt USB, Memory Card Slot, FM Radio, and AUX Input
- Dual Wireless VHF Microphones and 1 Additional Wired Mic Slot
- Microphone Echo Control & Microphone Volume Control
- 40W RMS Power Output
- Bass and Treble Control
- Built-in Rechargeable Battery (up to 4-5 hours playback)
- Trolley with Handle and Wheels for Portability



Image: The Takara T-6008 speaker with text overlays indicating features such as 'Karaoke Speaker', '2 Wireless Mic', 'Built-in Rechargeable battery', 'Full Function Remote Control', and 'Recording Function'.

Setup

1. **Unpacking:** Carefully remove the speaker and all accessories from the packaging.
2. **Initial Charging:** Before first use, fully charge the speaker's built-in battery. Connect the power adapter to the speaker's charging port and then to a power outlet. The charging indicator will illuminate.
3. **Microphone Setup:** Insert batteries into the wireless microphones. Ensure the microphones are switched on when in use.
4. **Positioning:** Place the speaker on a stable, flat surface. Utilize the trolley handle and wheels for easy transportation.

TAKARA®

Trolley Design

Telescopic handle

Premium Design

Moving Wheels

Easy to carry



Image: A person is shown easily transporting the Takara T-6008 speaker using its extendable handle and integrated wheels, demonstrating its portability.

Operating Instructions

Control Panel Overview

TAKARA®



Multi Connectivity

Bluetooth V 5.0

Wire Mic Port

Mic Volume & Echo

USB/SD/AUX Port

Image: A detailed view of the speaker's rear control panel, indicating ports for USB, TF Card, AUX, wired mic, and knobs for MIC VOL, ECHO, BASS, TREBLE, and master VOLUME.

- **Power Switch:** Located on the rear panel. Toggle to turn the speaker ON or OFF.
- **Mode Button:** Press to switch between Bluetooth, USB/SD, FM Radio, and AUX input modes.
- **Volume Control:** Rotate the 'VOLUME' knob to adjust the master volume.
- **Bass/Treble Control:** Use the 'BASS' and 'TREBLE' knobs to fine-tune audio output.
- **MIC VOL:** Adjusts the volume of the connected microphones.
- **ECHO:** Controls the echo effect for the microphones.
- **USB/SD Card Slot:** Insert a USB drive or SD card for MP3 playback or recording.
- **AUX Input:** Connect external audio devices using a 3.5mm audio cable.
- **Wired Mic Input:** Connect a wired microphone.

Bluetooth Mode

1. Turn on the speaker.
2. Press the 'Mode' button until the display shows 'BLUE' or 'BT'.
3. Enable Bluetooth on your mobile device or computer and search for 'T-6008'.
4. Select 'T-6008' to pair. A confirmation sound will indicate successful pairing.

5. You can now play audio from your device through the speaker.

USB/SD Card Playback

1. Insert a USB drive or SD card (with MP3 files) into the respective slot.
2. The speaker will automatically switch to USB/SD mode and begin playing. If not, press the 'Mode' button.
3. Use the Play/Pause, Next, and Previous buttons on the control panel or remote to navigate tracks.

FM Radio

1. Press the 'Mode' button until 'FM' appears on the display.
2. Press the Play/Pause button once to auto-scan and save available FM stations.
3. Use the Next and Previous buttons to switch between saved stations.

Audio Recording

1. Ensure a USB drive or SD card is inserted.
2. Connect a microphone (wireless or wired).
3. Press the 'REC' button on the control panel or remote to start recording.
4. Press 'REC' again to stop recording. The recorded file will be saved to the USB/SD card.

Karaoke Function

1. Play music via Bluetooth, USB/SD, or AUX.
2. Turn on the wireless microphones or connect a wired microphone.
3. Adjust 'MIC VOL' and 'ECHO' to your preference.
4. To disable 'Voice Priority' mode (if mic volume lowers music), press and hold the third button from the left on the control panel until 'OFF' is displayed.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use for extended periods.
- **Water Exposure:** This speaker is not waterproof. Avoid exposure to water or high humidity.

Troubleshooting

Problem	Possible Cause	Solution
No power	Battery discharged; Power switch off; Power adapter not connected	Charge the battery; Turn on the power switch; Connect the power adapter securely
No sound output	Volume too low; Incorrect mode selected; Device not paired (Bluetooth); Corrupt media file	Increase volume; Select correct input mode; Re-pair Bluetooth device; Try a different media file
Microphone not working	Microphone off; Batteries low/dead; MIC VOL too low; Incorrect mic connection	Turn on microphone; Replace batteries; Increase MIC VOL; Ensure mic is properly connected
Bluetooth pairing failure	Speaker not in Bluetooth mode; Device too far; Interference	Ensure speaker is in Bluetooth mode; Move device closer; Avoid strong interference sources
Recording not working	No USB/SD card inserted; Card full; Card format incompatible	Insert USB/SD card; Delete files to free space; Format card to FAT32 (backup data first)

Specifications

Feature	Detail
Model Number	T-6008
Mounting Type	Floor Standing
Power Source	Battery Powered
Connector Type	Aux, USB
Item Weight	4.8 Kilograms
Number of Channels	3
Audio Input	XLR, 1/4", RCA, Auxiliary, Wireless Mic, Wired Mic, Guitar
Product Dimensions	26 x 30 x 48 cm
Batteries	1 Lithium Ion battery (included)
Hardware Interface	USB
Audio Wattage	40 Watts
Battery Type	Lithium
Voltage	12 Volts
Connectivity Technology	Bluetooth, USB
Colour	Black
Compatible Devices	Guitar, MP3 Player

Warranty and Support

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your purchase receipt as proof of purchase for any warranty claims.

Manufacturer: Takara Imported by HS corp

Importer: Pioneer Distributors