

Manuals.plus /

› Rowenta /

› Rowenta Clean & Steam Multi 2-in-1 Steam Cleaner User Manual

Rowenta RY8544WH

Rowenta Clean & Steam Multi 2-in-1 Steam Cleaner User Manual

Model: RY8544WH

1. INTRODUCTION

The Rowenta Clean & Steam Multi is an innovative 2-in-1 appliance designed to simplify your home cleaning routine. It combines powerful vacuuming with hygienic steam cleaning, allowing you to clean and sanitize various surfaces simultaneously. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your appliance.

2. SAFETY INSTRUCTIONS

Always observe the following safety precautions to reduce the risk of fire, electric shock, or injury:

- Read all instructions before using the appliance.
- Do not leave the appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.

- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust bin and/or filters in place.
- Exercise extreme care when cleaning on stairs.
- Do not use the appliance to clean pet waste.
- Only use tap water in the water tank. Do not add detergents, perfumes, or other chemicals to the water tank.
- Steam is hot. Avoid direct contact with steam.

3. PRODUCT OVERVIEW

The Rowenta Clean & Steam Multi is designed for versatile cleaning, offering both vacuuming and steam cleaning functionalities. It includes a main unit for floor cleaning and a detachable handheld steamer for various surfaces.



Figure 3.1: Main unit of the Rowenta Clean & Steam Multi.

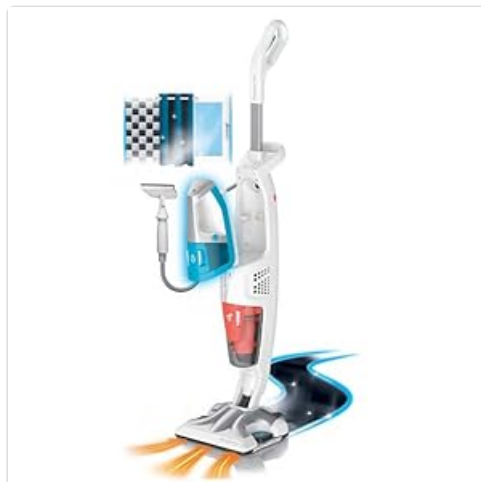


Figure 3.2: The appliance shown with its comprehensive set of accessories, including different brushes, nozzles, and microfiber pads.

Key Components:

- **Main Unit:** Combines vacuum and steam functions for floor cleaning.

- **Detachable Handheld Steamer:** For targeted steam cleaning of various surfaces.
- **Water Tank:** Removable for easy refilling.
- **Dust Bin:** Bagless design for easy emptying.
- **Microfiber Pads:** Washable pads for steam cleaning.
- **Ultra Glider:** Accessory for refreshing carpets and rugs.
- **Various Accessories:** Includes brushes, steam nozzle, and squeegee for handheld use.



The advanced cyclonic technology ensures optimal air and dust separation for consistent and long-lasting suction performance.

4. SETUP

4.1 Assembly

1. Insert the handle into the main body of the appliance until it clicks securely into place.
2. Ensure all components are firmly connected before use.

4.2 Filling the Water Tank

1. Remove the water tank from the appliance.
2. Open the tank cap and fill with clean tap water. Do not exceed the maximum fill line.
3. Close the cap securely and reinsert the water tank into the appliance until it locks.

4.3 Attaching Microfiber Pads

1. Place the microfiber pad flat on the floor.
2. Align the cleaning head of the appliance with the pad and press down firmly to attach it using the hook-and-loop fasteners.

5. OPERATING INSTRUCTIONS

5.1 Floor Cleaning (Vacuum & Steam)

This mode allows you to vacuum and steam clean hard floors simultaneously.

1. Plug the appliance into a suitable power outlet.
2. Press the On/Off button to activate the vacuum function.
3. Wait approximately 30 seconds for the steam function to heat up.
4. Select the desired steam setting (Eco or Max) using the steam control button on the handle.

5. Push the appliance forward to vacuum and steam the floor. For optimal results, push forward to vacuum and pull back to steam.
6. For carpets and rugs, attach the Ultra Glider accessory over the cleaning head. This allows for vacuuming and refreshing carpets with steam.

EFFICACE SUR TOUS LES SOLS



Figure 5.1: Cleaning a carpet with the integrated vacuum and steam function.

NETTOYAGE EN PROFONDEUR



Figure 5.2: Deep cleaning on hard floors, effectively removing debris and sanitizing.

5.2 Handheld Steam Cleaning

For targeted cleaning of various surfaces, detach the handheld steam unit.

1. Press the release button to detach the handheld steam unit from the main body.
2. Attach the desired accessory (e.g., small brush for grout, steam nozzle for tight corners, squeegee for windows).
3. Press and hold the steam trigger on the handheld unit to release steam. Release to stop.
4. Use the handheld steamer to clean sinks, showers, tiles, windows, and other surfaces.

FLEXIBILITÉ MAXIMALE



Figure 5.3: The detachable handheld unit provides maximum flexibility for cleaning various surfaces, including upholstery.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your Rowenta Clean & Steam Multi.

6.1 Emptying and Cleaning the Dust Bin

1. After each use, or when the dust bin is full, detach it from the appliance.
2. Open the dust bin and empty its contents into a waste bin.
3. Rinse the dust bin and filter under running water if necessary. Ensure they are completely dry before reassembling.

6.2 Cleaning Microfiber Pads

1. Remove the microfiber pads from the cleaning head. Avoid touching the hot pad directly after use.
2. The pads are machine washable. Wash them according to the care instructions on the label.
3. Allow pads to air dry completely before reuse or storage.

SERPILLIÈRES LAVABLES



Figure 6.1: Microfiber pads are easily removable and washable for repeated use.



The durable and washable microfiber pads can be reused up to 100 times, offering an eco-friendly cleaning solution.

6.3 Descaling (Anti-Calc Cartridge)

The appliance is equipped with an anti-calc cartridge to prevent limescale buildup. Replace the cartridge regularly as indicated by the appliance or when steam output decreases.

1. Refer to the appliance's specific instructions for locating and replacing the anti-calc cartridge.
2. Always use genuine Rowenta replacement cartridges.



The anti-calc cartridge protects the appliance from limescale damage, ensuring long-term durability and consistent steam performance.

6.4 Storage

Store the appliance in a dry, safe place, away from direct sunlight and extreme temperatures. Ensure the water tank is empty and the dust bin is clean before storage.

7. TROUBLESHOOTING


If you encounter issues with your Rowenta Clean & Steam Multi, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam output	Water tank empty; Appliance not heated up; Anti-calc cartridge needs replacement.	Refill water tank; Wait 30 seconds for heat-up; Replace anti-calc cartridge.
Low suction power	Dust bin full; Filter clogged; Obstruction in nozzle/hose.	Empty dust bin; Clean or replace filter; Remove obstruction.
Water leaks from cleaning head	Microfiber pad not properly attached or saturated; Too much water in tank.	Ensure pad is correctly attached; Do not overfill water tank.
Appliance not turning on	Not plugged in; Power outlet issue.	Check power cord connection; Test outlet with another device.

If the problem persists after attempting these solutions, please contact Rowenta customer support.

8. SPECIFICATIONS

Technical specifications for the Rowenta Clean & Steam Multi (Model RY8544WH):

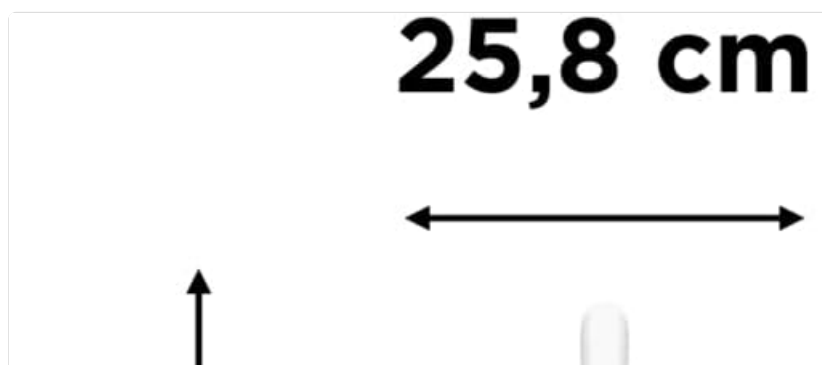

118,9 cm



Figure 8.1: Product dimensions for the Rowenta Clean & Steam Multi.

Feature	Detail
Model Number	RY8544WH
Power	1700 Watts
Voltage	240V
Dimensions (L x W x H)	25.89 x 36.28 x 118.98 cm
Weight	6.5 Kilograms
Heat-up Time	30 seconds
Noise Level	84 dB
Material	Plastic
Special Feature	Vacuum Function
Surface Recommendation	All floor types

9. WARRANTY AND SUPPORT

Rowenta is committed to product durability and reparability. This appliance is designed for a long lifespan, with spare parts available for 15 years after purchase.



Figure 9.1: Rowenta's commitment to providing spare parts for 15 years.

For warranty claims, technical support, or to find authorized service centers, please visit the official Rowenta website or contact their customer service department. Keep your proof of purchase for any warranty-related inquiries.

