

[Manuals.plus](#) /

› [HENDI](#) /

› HENDI Dishwasher Stand K50 (Model 231050) - User Manual

HENDI K50

HENDI Dishwasher Stand K50 (Model 231050) User Manual

Instructions for Assembly, Operation, and Maintenance

1. INTRODUCTION

Thank you for choosing the HENDI Dishwasher Stand K50. This stand is designed to elevate your commercial dishwasher, improving ergonomics and optimizing kitchen space. Constructed from durable stainless steel, it provides a stable and hygienic base for your appliance. Please read this manual thoroughly before assembly and use to ensure proper installation and safe operation.

2. SAFETY INSTRUCTIONS

- Always handle components with care to avoid injury. Edges may be sharp.
- Ensure the installation area is level and capable of supporting the combined weight of the stand and the dishwasher.
- Do not exceed the maximum weight capacity of the stand. Refer to your dishwasher's manual for its weight.
- Keep children and unauthorized personnel away from the assembly area.
- Wear appropriate personal protective equipment (e.g., gloves) during assembly.
- After assembly, verify that all fasteners are securely tightened and the stand is stable before placing the dishwasher on it.

3. PACKAGE CONTENTS

Please check that all components are present and undamaged:

- Stand Frame Components (legs, crossbars, top frame)
- Fasteners (screws, bolts, washers, nuts)
- Adjustable Feet (typically 4 units)
- Assembly Tool (e.g., Allen key, if required)

If any parts are missing or damaged, contact HENDI customer service immediately.

4. SETUP AND ASSEMBLY

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, flat surface.

2. **Assemble Frame:** Attach the legs to the top frame and crossbars using the provided fasteners. Ensure all connections are aligned correctly before tightening.
3. **Install Adjustable Feet:** Screw the adjustable feet into the bottom of each leg. Do not fully tighten yet.
4. **Position the Stand:** Move the assembled stand to its intended location.
5. **Level the Stand:** Adjust the height of each foot by turning it until the stand is perfectly level and stable. Use a spirit level for accuracy. Once level, tighten the locking nuts on the adjustable feet (if present) to secure their position.
6. **Place Dishwasher:** Carefully lift and place your HENDI K50 dishwasher, or compatible unit, onto the stand. Ensure it is centered and stable on the top frame.



Image 1: Front view of the HENDI K50 Dishwasher Stand, illustrating its robust stainless steel frame designed to support a commercial dishwasher.



Image 2: Angled view of the HENDI K50 Dishwasher Stand, showcasing its structural design and adjustable feet for leveling.

5. USAGE

Once assembled and leveled, the HENDI Dishwasher Stand K50 provides a secure base for your dishwasher. Ensure the dishwasher is properly seated and does not overhang the edges of the stand. Regularly check the stability of the stand, especially after moving or cleaning the area.

6. MAINTENANCE AND CLEANING

To maintain the appearance and longevity of your stainless steel stand:

- **Regular Cleaning:** Wipe down the stand regularly with a soft cloth and mild detergent. Rinse with clean water and dry thoroughly to prevent water spots and streaks.
- **Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or steel wool, as these can scratch the stainless steel surface.
- **Chemicals:** Avoid harsh chemicals, acids, or chlorine-based cleaners, which can cause corrosion.
- **Fastener Check:** Periodically inspect all fasteners (screws, bolts) and tighten them if necessary to ensure the stand remains rigid and stable.
- **Damage Inspection:** Check for any signs of damage or wear. If structural damage is observed, discontinue use and contact HENDI customer service.

7. TROUBLESHOOTING

- **Stand is Unstable:**

Solution: Re-check the leveling of the adjustable feet. Ensure all fasteners are securely tightened. Verify the floor surface is even.

- **Corrosion or Rust Spots Appear:**

Solution: This is often due to improper cleaning or exposure to harsh chemicals. Clean with a stainless steel cleaner and polish. Ensure the stand is dried thoroughly after cleaning.

8. SPECIFICATIONS

Model	K50
Model Number	231050
Dimensions (L x W x H)	53 cm x 56.8 cm x 61.4 cm
Weight	5.72 kg
Material	Stainless Steel
Compatibility	Designed for HENDI K50 dishwashers and other units with a base footprint of approximately 500x500 mm.

9. WARRANTY AND SUPPORT

For warranty information, technical support, or to order replacement parts, please contact HENDI customer service. Refer to your purchase documentation or the official HENDI website for contact details specific to your region.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07N38YDQ9>

More documents and user manuals: <https://manuals.plus/>