

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Serounder](#) /

› [Serounder Remote Control Instruction Manual for T95Z Plus, T95U, T95V Set Top Boxes](#)

Serounder bf902bae-b18a-44b9-a71b-f782e0f27d82

Serounder Remote Control Instruction Manual

For T95Z Plus, T95U, and T95V Set Top Boxes

INTRODUCTION

This manual provides detailed instructions for the Serounder replacement remote control, designed for seamless compatibility with T95Z Plus, T95U, and T95V Set Top Boxes. Please read this manual carefully to ensure proper setup and operation of your new remote control.



Image: Front view of the Serounder replacement remote control. This remote features a standard layout with power, navigation, volume, channel, and numeric buttons, designed for intuitive use with compatible Set Top Boxes.

PACKAGE CONTENTS

- 1 x Serounder Remote Control

SPECIFICATIONS

Feature	Detail
Product Dimensions	6.14 x 1.69 x 0.79 inches (156 x 43 x 20 mm)

Item Weight	1.41 ounces
Compatible Devices	T95Z Plus, T95U, T95V Set Top Boxes
Power Source	2 x AAA batteries (not included)
Material	ABS
Special Feature	Ergonomic design

SETUP

Installing Batteries

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or outwards to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into position until it clicks securely.



Image: Rear view of the remote control with the battery compartment open, showing the slots for two AAA batteries. Ensure correct polarity when inserting batteries.

OPERATING INSTRUCTIONS

Basic Functions

The Serounder remote control is pre-programmed for compatible T95Z Plus, T95U, and T95V Set Top Boxes. No additional programming is required. Simply insert batteries and point the remote towards your Set Top Box to begin operation.



Image: Angled view of the remote control highlighting the button layout. Key buttons include power, mute, volume up/down, navigation arrows, and a central OK button.

- **Power Button** (●): Turns the Set Top Box on or off.
- **Mute Button** (X): Mutes or unmutes the audio.
- **Volume Buttons** (- / +): Adjusts the volume level.
- **Navigation Arrows** (▲ ◀ ▼ ▶): Navigates through menus and options.
- **OK Button** (OK): Confirms selections.
- **Numeric Keypad (0-9)**: For direct input of numbers or channel selection.
- **Home Button** (⏠): Returns to the main menu or home screen.

Remote Control Range

The effective operating distance for this remote control is typically greater than 8 meters (approximately 26 feet). Actual range may vary depending on environmental factors, battery level, and obstacles between the remote and the Set Top Box.

The remote control distance is greater than 8M
(the machine model is different and the distance is different).



Image: The remote control positioned near a T95Z Set Top Box, visually representing the effective operating range. The remote functions optimally within a clear line of sight.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and damage. Store in a cool, dry place.
- **Durability:** The remote is made of durable ABS material, designed to resist wear. Avoid dropping the remote or exposing it to extreme temperatures or moisture.

TROUBLESHOOTING

- **Remote not responding:** Ensure batteries are inserted correctly with the correct polarity. Replace old batteries with new ones. Check for any obstructions between the remote and the Set Top Box.
- **Short operating range:** Replace batteries. Ensure there are no strong light sources or electronic devices interfering with the remote's signal.

- **Specific buttons not working:** Check for physical damage or debris under the button. If the issue persists after battery replacement, the remote may require replacement.

WARRANTY AND SUPPORT

This Serounder product is covered by a standard manufacturer's warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the product packaging or contact Serounder customer support.

For technical assistance, troubleshooting, or warranty claims, please contact Serounder customer service through the retailer where the product was purchased or visit the official Serounder website for support contact information.