

Sharper Image SBS1-SI

Sharper Image SBS1-SI USB Fan User Manual

Model: SBS1-SI | Brand: Sharper Image

1. INTRODUCTION

This manual provides instructions for the safe and efficient operation of your Sharper Image SBS1-SI USB Fan. The SBS1-SI is a compact fan featuring a timeless design, modern touch controls, and quiet operation, suitable for various small spaces.

2. KEY FEATURES

- **Mid-Century Design:** Combines a rich mix of materials and finishes with safe, soft-touch blades for a classic aesthetic.
- **Portable Convenience:** With a 5.6-inch height and USB power, it's ideal for on-the-go use, compatible with computers, laptops, portable chargers, and other USB-enabled devices.
- **Quiet Operation:** Provides effective multi-directional airflow for personal comfort without causing disruption.
- **Touch Control:** Features intuitive one-touch button for easy adjustment between two speed settings.
- **Complete Package:** Includes a 6 ft. USB cable and a 5V wall adapter for immediate use.

3. SETUP

Follow these steps to set up your Sharper Image SBS1-SI USB Fan:

1. **Unpack:** Carefully remove the fan and all accessories from the packaging. Ensure all components listed in the "In the Box" section are present.
2. **Placement:** Place the fan on a stable, flat surface. The non-marring slip-resist feet will help keep it in place.
3. **Connect Power:**
 - Insert the USB cable into the USB port on the back of the fan.
 - Connect the other end of the USB cable to a compatible power source:

- A computer or laptop USB port.
- A portable USB charger (power bank).
- The included 5V wall adapter plugged into a standard electrical outlet.

4. **Adjust Angle:** Gently tilt the fan head up or down to direct the airflow as desired. The fan is designed for multi-directional airflow.



Figure 1: Included components and fan dimensions.



Figure 2: Powering the fan via wall outlet or power bank.

4. OPERATION

The Sharper Image SBS1-SI USB Fan features simple touch controls for ease of use.

1. **Power On/Off:** Locate the touch-sensitive power button on the top of the fan's central hub. Tap the button once to turn the fan on. Tap it again to cycle through speed settings or to turn it off.

2. **Speed Settings:** The fan has two speed settings.

- First tap: Activates High speed.
- Second tap: Switches to Low speed.
- Third tap: Turns the fan off.

3. **Adjusting Airflow Direction:** The fan head can be manually tilted up or down to direct the airflow to your preferred angle.



Figure 3: Touch controls for power and speed adjustment.

Your browser does not support the video tag.

Video 1: Demonstration of the Sharper Image SBS1-SI USB Fan's operation, including power, speed settings, and quiet performance.

Your browser does not support the video tag.

Video 2: Review highlighting the low volume and good airflow of the Sharper Image SBS1-SI fan.

5. MAINTENANCE

Regular cleaning will help maintain the performance and longevity of your fan.

- **Cleaning Blades:** The soft foam blades may collect dust over time. To clean, gently wipe the blades with a soft, damp cloth. Ensure the fan is unplugged before cleaning. Keeping the blades clean prevents out-of-balance vibrations and maintains quiet operation.
- **Exterior Cleaning:** Wipe the exterior surfaces of the fan with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place, away from direct sunlight and excessive dust.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	No power or loose connection.	Ensure the USB cable is securely plugged into both the fan and the power source. Try a different USB port or wall outlet.
Fan is noisy or vibrates.	Dust buildup on blades or unstable surface.	Unplug the fan and clean the foam blades with a soft, damp cloth. Ensure the fan is placed on a stable, level surface.
Brief soft beeping noise when turning on.	Connected to an external USB hub.	This is normal behavior when connected to some external USB hubs. If desired, connect directly to a regular USB port to avoid the sound.
Weak airflow.	Fan is on low speed or blades are obstructed.	Tap the touch button to cycle to High speed. Ensure no objects are obstructing the fan blades or airflow path.

7. SPECIFICATIONS

- **Model Name:** SBS1-SI
- **Product Dimensions:** 3.8"D x 5.7"W x 5.7"H
- **Item Weight:** 15.8 ounces
- **Color:** White
- **Power Source:** Corded Electric (USB)
- **Voltage:** 5 Volts
- **Wattage:** 5 watts
- **Number of Blades:** 3
- **Blade Material:** Plastic (Soft Foam)
- **Control Method:** Touch
- **Number of Power Levels:** 2
- **Cable Length:** 6 Feet
- **Manufacturer:** Sharper Image
- **Compliance:** ETL Listed, CE Approved

8. WARRANTY INFORMATION

This Sharper Image SBS1-SI USB Fan comes with a **1-year manufacturer's warranty**. Please retain your proof of purchase for warranty claims. For detailed warranty terms and conditions, refer to the official product documentation or contact Sharper Image customer support.

9. SUPPORT & ADDITIONAL RESOURCES

For further assistance or to download the official User Guide in PDF format, please visit the link below:

[Download User Guide \(PDF\)](#)

For customer service inquiries, please refer to the contact information provided with your product or on the official Sharper Image website.

10. PRODUCT MEDIA

Product Images



Image 1: Front view of the Sharper Image SBS1-SI USB Fan.



Image 2: The fan in a typical desk environment.

SOFT BLADE DESIGN

Stylish and safe to the touch.

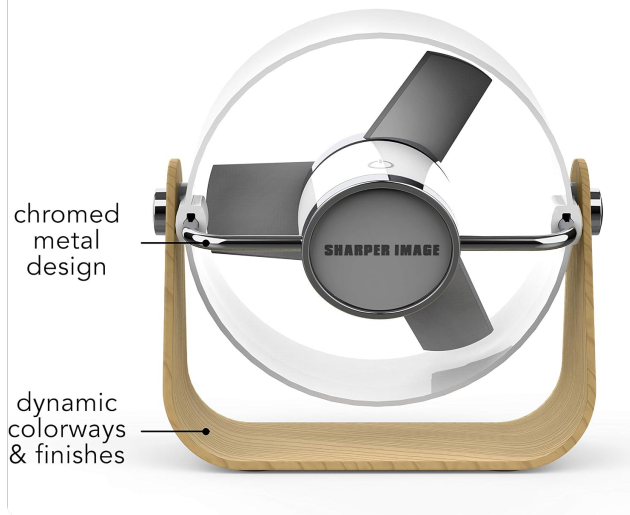


Image 3: Detail of the soft blade design and modern finishes.

Official Product Videos

Your browser does not support the video tag.

Video 4: Demonstration of the Sharper Image SBS1-SI USB Fan's operation, including power, speed settings, and quiet performance.

Your browser does not support the video tag.

Video 5: An overview of the Sharper Image SBS2-SI Personal Fan, demonstrating its design and functionality.

© 2024 Sharper Image. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07N3CJJHT>

More documents and user manuals: <https://manuals.plus/>