

Fastrack NN38035SL05

Fastrack Denim Quartz Analog Digital Watch

Model: NN38035SL05 - User Manual

1. INTRODUCTION

This manual provides detailed instructions for the proper setup, operation, and maintenance of your Fastrack Denim Quartz Analog Digital Watch, Model NN38035SL05. Please read this guide thoroughly to ensure optimal performance and longevity of your timepiece.

2. PRODUCT OVERVIEW



Image 1: Front view of the Fastrack Denim Quartz Analog Digital Watch, Model NN38035SL05. The watch features a blue denim strap, a black dial with both analog hands and a digital display, and multiple function buttons on the side of the case.

2.1. Components

- **Analog Display:** Hour, minute, and second hands.
- **Digital Display:** Shows time, date, day, and other digital functions.
- **Crown:** Used for setting analog time. Located on the right side of the watch case.
- **Buttons:**
 - **RESET (Top Left):** Used for resetting stopwatch, adjusting settings.
 - **ST/STP (Top Right):** Used for starting/stopping stopwatch, selecting settings.
 - **MODE (Bottom Left):** Used for cycling through digital display modes (Time, Stopwatch, Alarm).
 - **LIGHT (Bottom Right):** Activates the backlight for the digital display.
- **Denim Strap:** Durable fabric strap for comfortable wear.
- **Water Resistance Mark:** "WR50M" indicating 50-meter water resistance.

2.2. Key Features

- Dual Time Display: Analog and Digital
- Quartz Movement for precise timekeeping
- Durable Brass Case with Mineral Glass Dial
- Water Resistance up to 50 meters (5 ATM)
- Functions include Time, Date, Day, Stopwatch, and Alarm
- Backlight for digital display visibility in low light

3. SETUP

3.1. Setting Analog Time

1. Pull the crown out to the first position.
2. Rotate the crown to adjust the hour and minute hands to the desired time.
3. Once the time is set, push the crown back into its normal position.

3.2. Setting Digital Time and Date

1. Press the **MODE** button repeatedly until the digital display shows the time setting mode (usually indicated by flashing digits).
2. Press the **RESET** button to select the digit or setting you wish to adjust (e.g., seconds, hour, minute, month, date, day). The selected item will flash.
3. Use the **ST/STP** button to increase the value of the flashing digit. Hold the button to advance rapidly.
4. Repeat steps 2 and 3 until all desired time and date settings are correct.
5. Press the **MODE** button to exit the setting mode and return to the normal time display.

4. OPERATING INSTRUCTIONS

4.1. Switching Modes

Press the **MODE** button to cycle through the available digital functions:

- Normal Time Display (Hour, Minute, Second, Day, Date)
- Stopwatch Mode
- Alarm Mode

4.2. Stopwatch Function

1. Enter Stopwatch Mode by pressing the **MODE** button until "ST" or "STOP" appears on the digital display.
2. Press the **ST/STP** button to start the stopwatch.
3. Press the **ST/STP** button again to pause the stopwatch.
4. Press the **ST/STP** button to resume timing.
5. To reset the stopwatch to zero, press the **RESET** button while the stopwatch is paused.

4.3. Alarm Function

1. Enter Alarm Mode by pressing the **MODE** button until "AL" or "ALARM" appears on the digital display.
2. Press the **RESET** button to select the hour or minute digits for adjustment. The selected digit will flash.
3. Use the **ST/STP** button to set the desired alarm time.

- 4. Press the **MODE** button to confirm and exit alarm setting.
- 5. To activate/deactivate the alarm, press the**ST/STP** button while in Alarm Mode (without flashing digits). An alarm icon will typically appear when activated.

4.4. Backlight

Press the **LIGHT** button (bottom right) to illuminate the digital display for a few seconds, improving visibility in dark conditions.

5. MAINTENANCE

5.1. Cleaning

Wipe the watch case and strap with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish or internal components.

5.2. Water Resistance

This watch is water resistant to 50 meters (5 ATM). This rating means it is suitable for short periods of recreational swimming. It is **not** suitable for diving, snorkeling, or prolonged water activities.**Do not operate any buttons or the crown while the watch is submerged in water or wet**, as this can compromise the water resistance seal.

5.3. Battery Replacement

The watch uses a Lithium Metal battery. When the digital display becomes dim or the watch stops functioning, the battery may need replacement. It is highly recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Digital display is blank or dim.	Low or depleted battery.	Replace the battery (refer to Section 5.3).
Analog hands are not moving.	Crown is pulled out; low battery.	Push the crown back in. If still not moving, replace the battery.
Incorrect time displayed (analog or digital).	Time not set correctly; accidental adjustment.	Reset the analog and/or digital time (refer to Section 3).
Water inside the watch.	Water resistance compromised; buttons operated underwater.	Immediately take the watch to a service center. Avoid further contact with water.

7. SPECIFICATIONS

- **Model Number:** NN38035SL05
- **Movement Type:** Quartz (Analog & Digital)
- **Dial Color:** Black
- **Case Material:** Brass

- **Case Diameter:** 47.3 millimeters
- **Dial Glass Material:** Mineral
- **Band Material:** Fabric (Denim)
- **Band Color:** Blue
- **Water Resistance Depth:** 50 meters (5 ATM)
- **Battery Type:** 1 Lithium Metal battery (included)
- **Item Weight:** 180 grams (0.18 Kilograms)
- **Manufacturer:** Titan
- **Date First Available:** 25 January 2019






8. WARRANTY AND SUPPORT

This Fastrack watch comes with a manufacturer's warranty. For specific warranty terms, duration, and service procedures, please refer to the warranty card included with your purchase or contact Fastrack customer support directly. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance or inquiries, please visit the official Fastrack website or contact their authorized service centers.



Related Documents - NN38035SL05

	<p>OY22E Smart Watch User Manual: Setup, Features, and Safety</p> <p>Comprehensive user manual for the OY22E Smart Watch by Fastrack. Learn how to set up, pair, use features like Bluetooth calls, health tracking, and understand safety guidelines and specifications.</p>
<p>Preview</p> 	<p>Fastrack S06 Smartwatch User Manual</p> <p>Comprehensive user manual for the Fastrack S06 Smartwatch, covering setup, features, maintenance, and safety information.</p>
	<p>Fastrack Reflex Play Smartwatch User Manual: Setup, Features, and Troubleshooting</p> <p>Comprehensive user manual for the Fastrack Reflex Play smartwatch, covering setup, app connection, features like fitness tracking, heart rate monitoring, notifications, and troubleshooting guides.</p>
	<p>Fastrack Reflex Beat+ Smartwatch User Manual: Features, Pairing & Setup</p> <p>Comprehensive user manual for the Fastrack Reflex Beat+ Smartwatch. Learn about its features, app installation, watch pairing, health tracking, and technical specifications.</p>
	<p>Fastrack FPods FT7 Truly Wireless Earpods Quick Start Guide</p> <p>Get started with your Fastrack FPods FT7 Truly Wireless Earpods. This guide covers setup, controls, features like 3C NitroFast Charge, Quad Mic ENC, and low latency gaming mode.</p>



[Fastrack FPods FZ100 Truly Wireless Earbuds Quick Start Guide](#)

Learn how to set up, use, and care for your Fastrack FPods FZ100 Truly Wireless Earbuds. This guide covers pairing, controls, features like gaming mode and voice assistant, charging, and specifications.