

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [cotsoco](#) /

› [cotsoco Bluetooth Vinyl Record Player Model M49 User Manual](#)

cotsoco M49

cotsoco Bluetooth Vinyl Record Player

MODEL: M49

User Manual

1. Introduction

Thank you for purchasing the cotsoco Bluetooth Vinyl Record Player, Model M49. This manual provides essential information for the proper setup, operation, and maintenance of your new record player. Please read this manual thoroughly before use and retain it for future reference.

2. Safety Instructions

- **Power Source:** Use only the provided power adapter. Ensure the voltage matches your local power supply.
- **Water and Moisture:** Do not expose the unit to rain, moisture, or liquids. Do not place objects filled with liquids, such as vases, on the unit.
- **Heat:** Keep the unit away from heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- **Ventilation:** Ensure adequate ventilation around the unit. Do not block any ventilation openings.
- **Cleaning:** Unplug the unit from the power outlet before cleaning. Use a soft, dry cloth only.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Handling Records:** Always handle vinyl records by their edges to avoid fingerprints and damage to the grooves.
- **Stylus Protection:** Be careful when handling the tonearm and stylus. The stylus is delicate and can be easily damaged.

3. Package Contents

Please check that all items listed below are included in your package:

- cotsoco Bluetooth Vinyl Record Player Turntable
- User Manual (this document)
- Power cable
- RCA cable
- Auxiliary cable

- 45 RPM adapter

4. Product Overview

Familiarize yourself with the components and controls of your record player.

VINTAGE LOOKING WITH MODERN TECHNOLOGY

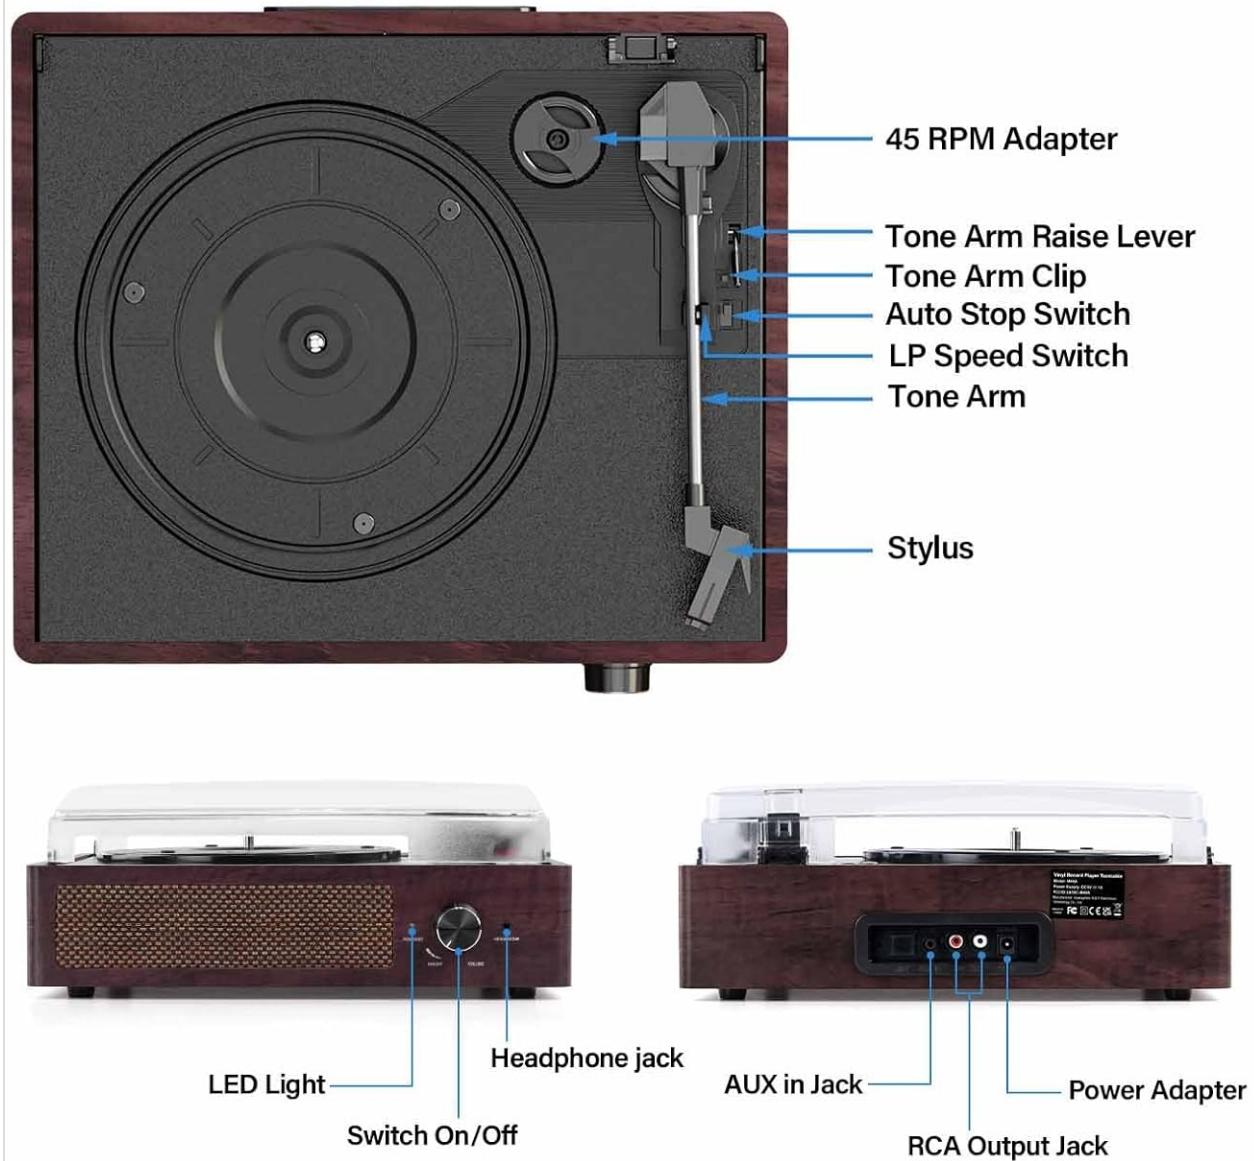


Figure 4.1: Main Components and Connections. This diagram illustrates the key parts of the turntable, including the tonearm, stylus, speed selector, and various input/output ports.

Front Panel Controls:

- **Power On/Off & Volume Knob:** Turns the unit on/off and adjusts the audio output volume.
- **LED Light:** Indicates power status and Bluetooth pairing status.
- **Headphone Jack:** For private listening with headphones.

Top Panel Components:

- **Turntable Platter:** Where the vinyl record is placed.
- **Spindle:** Center post for placing records.
- **45 RPM Adapter:** Used for playing 7-inch records with a large center hole. Stores conveniently on the unit.
- **Tone Arm:** Holds the stylus and tracks the record grooves.
- **Stylus (Needle):** The part that reads the grooves of the record.
- **Tone Arm Raise Lever:** Lifts and lowers the tonearm gently onto the record.
- **Tone Arm Clip:** Secures the tonearm when not in use.
- **LP Speed Switch (33/45/78 RPM):** Selects the playback speed for your vinyl records.
- **Auto Stop Switch:** Enables or disables the automatic stop function at the end of a record.

Rear Panel Connections:

- **AUX In Jack:** Connect external audio devices (e.g., smartphone, tablet) to play through the record player's speakers.
- **RCA Output Jacks (L/R):** Connect the record player to external speakers or an amplifier for enhanced audio output.
- **Power Adapter Jack:** Connects the power cable to the unit.

5. Setup

Follow these steps to set up your record player:

1. **Unpacking:** Carefully remove the record player and all accessories from the packaging. Retain the packaging for future transport or storage.
2. **Placement:** Place the unit on a flat, stable, and level surface to prevent vibrations and ensure proper playback. Avoid placing it near strong magnetic fields or direct sunlight.
3. **Dust Cover:** Place the clear dust cover onto the hinges at the back of the unit. This protects the turntable from dust when not in use.
4. **Power Connection:** Insert the power cable into the Power Adapter Jack on the rear of the unit, then plug the other end into a wall outlet.
5. **Initial Power On:** Turn the Power On/Off & Volume knob clockwise to power on the unit. The LED light will illuminate.

6. Operating

Playing a Vinyl Record:

1. Open the dust cover.
2. Place a vinyl record on the turntable platter.
3. Select the appropriate speed (33, 45, or 78 RPM) using the LP Speed Switch. For 7-inch records with a large center hole, place the 45 RPM adapter on the spindle before placing the record.



33/ 45/ 78 Speed

ENJOY RETRO STYLE MUSIC BY VINYL RECORDS

Three speed Three size record player



Figure 6.1: Three-Speed and Three-Size Record Playback. The turntable supports 33 1/3, 45, and 78 RPM speeds for 7-inch, 10-inch, and 12-inch vinyl records.

4. Release the Tone Arm Clip to free the tonearm.
5. Lift the tonearm using the Tone Arm Raise Lever.
6. Manually move the tonearm over the desired starting track of the record.
7. Gently lower the tonearm onto the record using the Tone Arm Raise Lever. The record will begin playing.
8. Adjust the volume using the Power On/Off & Volume knob.
9. At the end of the record, if the Auto Stop Switch is enabled, the platter will stop spinning automatically. If disabled, the platter will continue to spin. Manually lift the tonearm and return it to the tonearm rest. Secure it with the Tone Arm Clip.

Bluetooth Pairing:

The record player can receive audio wirelessly from Bluetooth-enabled devices.

1. Turn on the record player. The LED light will flash blue, indicating it is in Bluetooth pairing mode.
2. On your Bluetooth-enabled device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Turntable" from the list of devices.
4. Once connected, the LED light on the record player will turn solid blue. You can now play audio from your device through

the record player's built-in speakers.

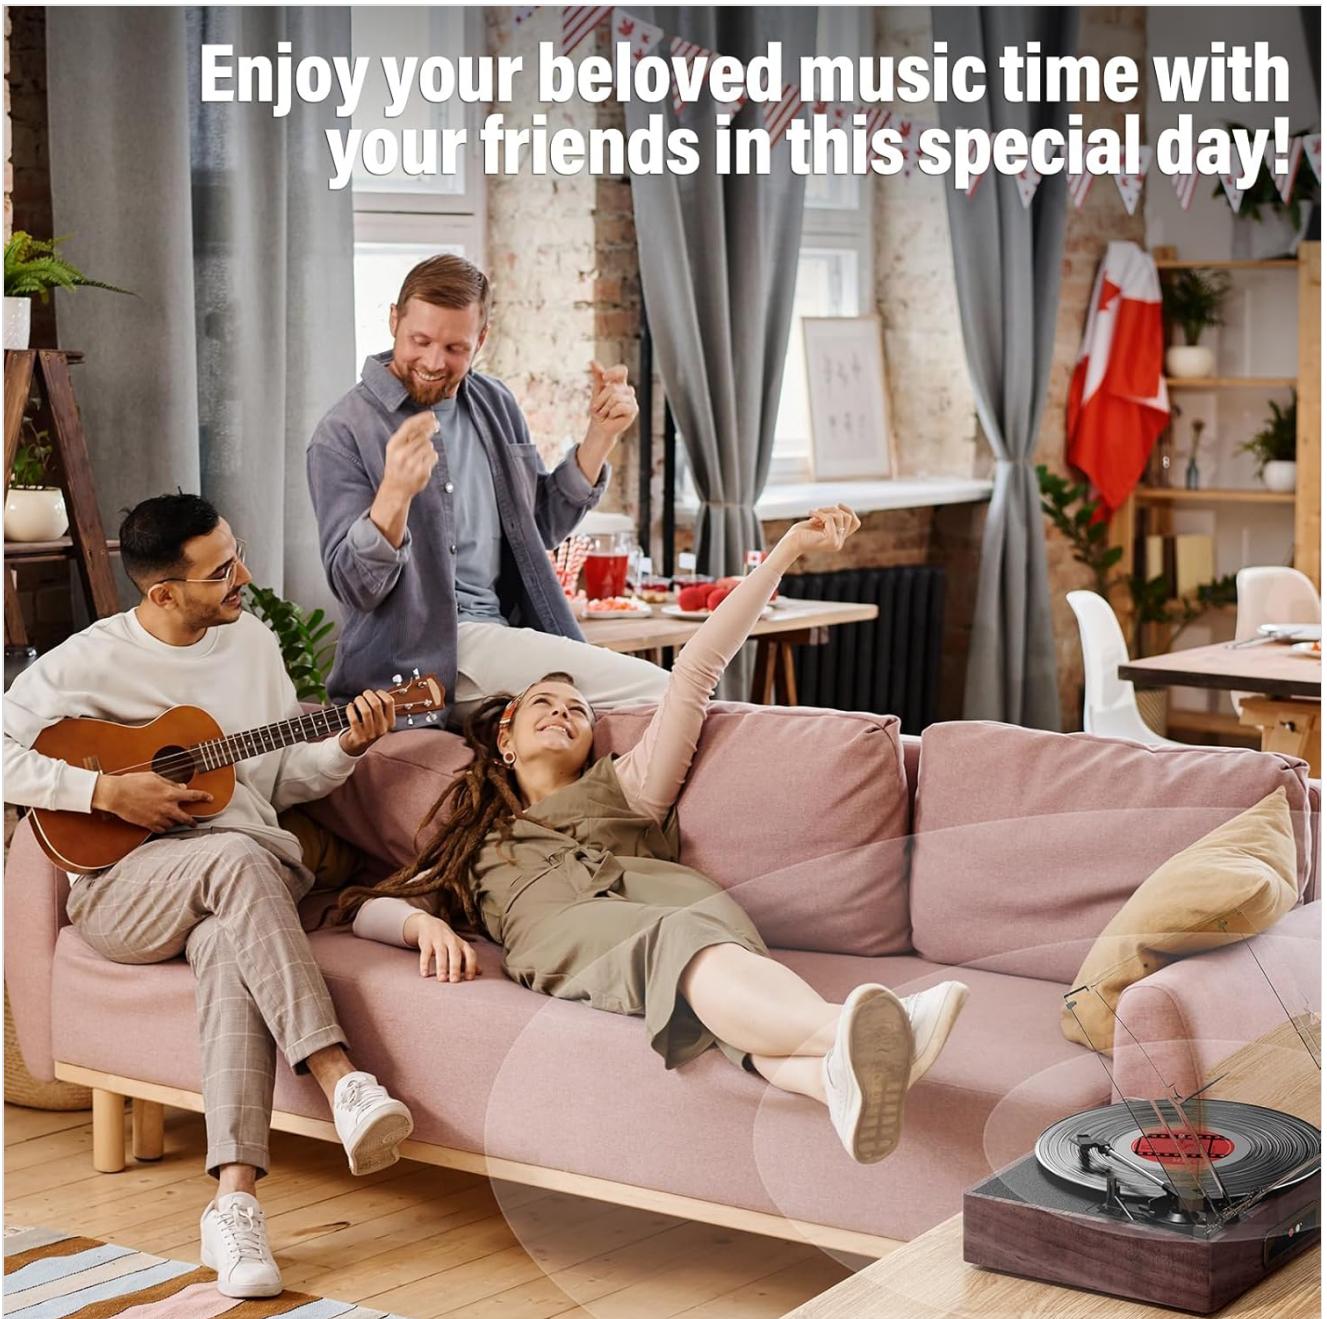


Figure 6.2: Wireless Bluetooth Pairing. Easily connect your smartphone or other Bluetooth devices to stream music through the turntable's integrated speakers.

AUX Input:

Connect external audio sources directly to the record player.

- Use the provided Auxiliary cable to connect the AUX In Jack on the rear of the record player to the headphone jack or audio output of your external device.
- The record player will automatically switch to AUX input mode.
- Adjust the volume using the record player's volume knob and your external device's volume controls.

RCA Line Out:

Connect the record player to external speakers or an amplifier for a different audio experience.

- Use the provided RCA cable to connect the RCA Output Jacks (red for right, white for left) on the rear of the record player to the corresponding audio input jacks on your external amplifier or powered speakers.
- Ensure your external audio system is set to the correct input.

- Adjust the volume using the controls on your external audio system.

Headphone Jack:

For private listening, plug any standard 3.5mm headphones into the Headphone Jack on the front of the unit. The built-in speakers will automatically mute.

7. Maintenance

Cleaning the Unit:

- Always unplug the record player from the power outlet before cleaning.
- Use a soft, dry, lint-free cloth to wipe the exterior surfaces.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

Stylus Care:

- The stylus is a delicate component. Avoid touching it with your fingers.
- Clean the stylus periodically using a soft brush (not included) designed for stylus cleaning, brushing gently from back to front.
- A dirty or worn stylus can cause poor sound quality and damage your records. Replace the stylus if you notice a significant degradation in sound or visible wear.

Dust Cover Care:

- Wipe the dust cover with a soft, damp cloth. Do not use harsh chemicals.
- Close the dust cover when the unit is not in use to prevent dust accumulation on the platter and stylus.

8. Troubleshooting

If you experience issues with your record player, please consult the following table before seeking professional service.

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet not active; Unit not turned on.	Ensure power cable is securely connected. Test the outlet with another device. Turn the Power On/Off & Volume knob clockwise.
No sound from speakers	Volume too low; Headphones connected; External speakers not connected/selected correctly.	Increase volume. Disconnect headphones. If using RCA out, ensure external speakers are powered and selected to the correct input.
Sound is distorted or unclear	Dirty or worn stylus; Dirty record; Incorrect speed selected; Built-in speakers may have limited fidelity.	Clean the stylus and record. Ensure correct speed (33/45/78 RPM) is selected. For improved sound quality, consider connecting to external speakers via RCA output.
Record skipping	Dirty or scratched record; Unit not on a stable surface; Stylus worn or damaged.	Clean the record. Place the unit on a firm, level surface away from vibrations. Inspect and replace stylus if necessary.
Bluetooth not connecting	Record player not in pairing mode; Device Bluetooth off; Device too far.	Ensure record player LED is flashing blue. Turn Bluetooth on/off on your device. Move device closer to the record player.

9. Specifications

Feature	Detail
Model Number	M49
Brand	cotsoco
Product Dimensions	12.6 x 10.67 x 5.71 inches
Item Weight	4.76 pounds
Connectivity Technology	Bluetooth
Maximum Rotational Speed	78 RPM
Material	Wood
Style	Retro
Color	Brown
Included Components	Vinyl Record Player Turntable, User Manual, Power cable, RCA cable, Auxiliary cable.

10. Warranty and Support

Warranty Information: Specific warranty details are typically provided with your product purchase documentation. Please refer to the information included in your product packaging or contact the manufacturer directly for warranty terms and conditions.

Customer Support: For technical assistance, troubleshooting, or any inquiries regarding your cotsoco record player, please contact US-based customer support:

Phone: (626) 420-3418

For additional support and product information, you may also visit the official cotsoco store on Amazon:[cotsoco Store](#)