

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Trexonic](#) /

› [Trexonic 14.1" Portable DVD Player User Manual](#)

Trexonic 14.1" Portable DVD Player

Trexonic 14.1" Portable DVD Player

USER MANUAL - MODEL: 14.1" PORTABLE DVD PLAYER

Introduction

Welcome to the user manual for your new Trexonic 14.1" Portable DVD Player. This device is designed to provide portable entertainment with its large TFT-LCD screen, versatile media playback options (DVD, USB, SD), and long-lasting rechargeable battery. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your player to ensure you get the most out of your device.



An image showing the Trexonic 14.1 inch Portable DVD Player open, displaying its TFT-LCD screen and the control panel on the base. A remote control is visible to the left of the player.

Product Overview

The Trexonic 14.1" Portable DVD Player features a high-resolution TFT-LCD screen that swivels 270° and tilts 180°, allowing for optimal viewing angles. It supports various media formats from DVDs, USB drives, and SD cards. The player includes a rechargeable battery for extended use on the go and comes with a car adaptor for in-vehicle charging.

Key Features:

- 14.1" TFT-LCD Swivel Screen (270° swivel, 180° tilt)
- Supports DVD, CD, USB, and SD card playback
- Built-in rechargeable battery
- Multiple input/output ports: USB, SD, Earphones, AV Input, AV Output, DC Input
- Includes car adaptor for portable charging

Setup

1. Initial Charging:

Before first use, fully charge the player's internal battery. Connect the provided AC power adapter to the DC Input port on the player and plug it into a standard wall outlet. The charging indicator light will typically show red while charging and turn green when fully charged. A full charge may take several hours.

2. Powering On:

Press and hold the **POWER** button on the player or the remote control to turn the unit on.

3. Inserting Media:

- **DVD/CD:** Gently open the disc cover and place the disc onto the spindle with the label side facing up. Close the disc cover securely.
- **USB Drive:** Insert your USB flash drive into the USB port.
- **SD Card:** Insert your SD card into the SD card slot until it clicks into place.

Operating Instructions

1. Basic Playback:

Once media is inserted, the player will typically auto-detect and begin playback. If not, use the **MODE** button on the player or remote to select the desired input source (DVD, USB, SD).

2. Screen Adjustment:

The screen can be swiveled up to 270° and tilted up to 180° for optimal viewing. Carefully rotate the screen from its base to achieve the desired angle. The screen can also be folded flat against the player with the screen facing outwards.

3. Using Controls:

- **Play/Pause:** Press the **PLAY/PAUSE** button to start or pause playback.
- **Stop:** Press the **STOP** button to stop playback.

- **Next/Previous:** Use the **NEXT** and **PREV** buttons to skip tracks/chapters.
- **Fast Forward/Rewind:** Hold the **FWD** or **REV** buttons for fast forward or rewind.
- **Volume:** Use the **VOL+** and **VOL-** buttons to adjust the volume.
- **Setup:** Press the **SETUP** button to access system settings.

4. Connecting to External Devices:

- **AV Output:** Connect the player to a TV or larger display using an AV cable (not included) from the AV OUT port.
- **AV Input:** Connect external video sources (e.g., game console) to the AV IN port to display them on the player's screen.
- **Earphones:** Plug standard 3.5mm headphones into the Earphones jack for private listening.

Maintenance

1. Cleaning the Screen:

Use a soft, lint-free cloth to gently wipe the screen. For stubborn smudges, slightly dampen the cloth with water or a screen-safe cleaning solution. Avoid harsh chemicals or abrasive materials.

2. Cleaning the Disc Tray:

Keep the disc tray free of dust and debris. Use a soft, dry cloth to wipe the area. Do not use liquids inside the disc compartment.

3. Battery Care:

To prolong battery life, avoid fully discharging the battery frequently. If storing the player for an extended period, charge the battery to about 50% and store in a cool, dry place.

4. Storage:

When not in use, store the player in a clean, dry environment away from direct sunlight, extreme temperatures, and excessive humidity.

Troubleshooting

If you encounter issues with your Trexonic Portable DVD Player, refer to the following common problems and their solutions:

- **No Power:**
 - Ensure the AC adapter is securely connected to the player and a working power outlet.
 - Check if the battery is charged. If not, charge the unit for a few hours.
 - Press and hold the POWER button for a few seconds.
- **No Disc Playback:**
 - Ensure the disc is clean and free of scratches.
 - Verify the disc is inserted correctly with the label side facing up.
 - Check if the disc format is supported by the player.
 - Select the correct input mode (DVD) using the MODE button.
- **No Sound/Picture:**
 - Adjust the volume level.

- If using external speakers or TV, ensure connections are secure and the external device is set to the correct input.
- Check if headphones are plugged in, which may mute the internal speakers.

- **Remote Control Not Working:**

- Ensure there are no obstructions between the remote and the player's IR sensor.
- Replace the batteries in the remote control.

Specifications

Feature	Detail
Screen Size	14 Inches (14.1" visible diagonal)
Display Type	TFT-LCD
Connectivity Technology	USB
Media Type Supported	DVD, CD, SD Card, USB Flash Drive
Color	Black
Item Weight	6.3 pounds
Manufacturer	Trexonic
First Available Date	January 25, 2019

Warranty and Support

This Trexonic product is covered by a limited manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

For technical support, service, or further inquiries, please contact Trexonic customer service. Contact information can typically be found on the product packaging or the official Trexonic website.

Note: Warranty terms and support options may vary by region and retailer.

© 2024 Trexonic. All rights reserved.

Related Documents - 14.1" Portable DVD Player

 <p>15.4" PORTABLE DVD PLAYER WITH ATSC DIGITAL TV</p> <p>MODEL #TR-D154</p> <p>USER MANUAL</p>	<p>Trexonic TR-D154 15.4" Portable DVD Player with ATSC Digital TV User Manual</p> <p>User manual for the Trexonic TR-D154 portable DVD player with ATSC digital TV. Includes features, operation instructions for DVD, USB, memory card, and HDMI, as well as troubleshooting and specifications.</p>
 <p>TREXONIC 14" PORTABLE LED TELEVISION</p> <p>USER MANUAL MODEL #TRX-14D</p>	<p>Trexonic 14" Portable LED Television User Manual</p> <p>User manual for the Trexonic 14" Portable LED Television (Model TRX-14D), covering important safeguards, package contents, input/output interface, remote control operation, menu functions (channel, picture, sound, time, options, lock), input source selection, multimedia mode, troubleshooting, and specifications.</p>
	<p>Trexonic TV Auto Scan Guide</p> <p>Instructions for performing an auto scan on a Trexonic TV to find channels, including preparation and step-by-step guidance.</p>
	<p>Trexonic Channel Scan Guide: How to Auto Scan TV Channels</p> <p>Learn how to perform an automatic channel scan on your Trexonic device with this simple guide. Covers selecting AIR/CABLE and initiating the scan for digital and analog channels.</p>
	<p>7"/9" TFT LCD Headrest DVD Player User's Manual</p> <p>User's manual for the 7"/9" TFT LCD Headrest DVD Player, covering installation, operation, features, troubleshooting, and technical specifications. Supports DVD, VCD, CD, MP3, MP4, JPEG, and MPEG5 formats.</p>
 <p>15.4" PORTABLE DVD PLAYER WITH ATSC DIGITAL TV</p> <p>MODEL #TR-D154</p> <p>USER MANUAL</p>	<p>Trexonic TR-D154 15.4" Portable DVD Player with ATSC Digital TV User Manual</p> <p>User manual for the Trexonic TR-D154 portable DVD player with ATSC digital TV. Includes features, operation instructions for DVD, USB, memory card, and HDMI, as well as troubleshooting and specifications.</p>