

[Manuals.plus](#) /

> [GOURMETmaxx](#) /

> GOURMETmaxx Digital Hot Air Fryer XXL - 9L Oven User Manual

## GOURMETmaxx 02095

# GOURMETmaxx Digital Hot Air Fryer XXL - 9L Oven User Manual

Model: 02095 | Brand: GOURMETmaxx

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always place the appliance on a stable, heat-resistant surface, away from walls and other appliances, to ensure proper air circulation.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep the appliance out of reach of children and pets.
- Do not operate the appliance if the cord or plug is damaged, or if the appliance malfunctions or has been damaged in any way.
- Unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool completely before handling.
- Do not block any ventilation openings.
- Use only accessories recommended by the manufacturer.
- Exercise extreme caution when moving an appliance containing hot oil or other hot liquids.
- The appliance operates at high temperatures. Do not touch hot surfaces. Use handles or knobs.
- This appliance is intended for household use only.

## 2. PRODUCT OVERVIEW

Familiarize yourself with the components of your GOURMETmaxx Digital Hot Air Fryer XXL.



Image: The GOURMETmaxx Digital Hot Air Fryer XXL, showcasing its main unit and various included accessories such as the rotisserie spit, rotary basket, and multi-level racks.

## Components:

- Main Unit with Digital Touch Display
- Transparent Viewing Window
- Rotisserie Spit (for whole chicken)
- 10 Shashlik Skewers
- Rotary Basket (for fries, popcorn)
- 3 Baking Grids / Racks
- Drip Tray / Baking Sheet
- Removal Aid Tool

# VOLLE FLEXIBILITÄT MIT NUR EINEM GERÄT



Image: Close-up of the digital touch display, illustrating the various icons for the 8 preset cooking programs and manual temperature/timer controls.

## Control Panel (Digital Touch Display):

- **Temperature Control:** Adjusts cooking temperature (up to 200°C).
- **Timer Control:** Sets cooking time (up to 60 minutes).
- **Preset Programs:** Icons for common dishes like fries, steak, poultry, baked goods, shrimp, dried fruit, skewers, and fish.
- **Rotation Function:** Activates the rotisserie or rotary basket.
- **Light Button:** Turns on/off the interior light.
- **Power Button:** Turns the appliance on/off.

## 3. BEFORE FIRST USE

Before using your GOURMETmaxx Digital Hot Air Fryer for the first time, follow these steps:

1. **Unpacking:** Carefully remove all packaging materials and promotional labels. Keep packaging for future storage or disposal.
2. **Initial Cleaning:** Wash all removable parts (rotisserie spit, skewers, rotary basket, baking grids, drip tray) with warm soapy

water. Rinse thoroughly and dry completely. Wipe the interior and exterior of the main unit with a damp cloth. Do not immerse the main unit in water.

3. **First Run (Burn-in):** To eliminate any manufacturing odors, plug in the appliance and run it empty for approximately 15 minutes at the maximum temperature (200°C). Ensure the area is well-ventilated during this process. A slight odor or smoke is normal during the first use.
4. **Cool Down:** Allow the appliance to cool down completely after the first run.

## 4. SETUP

---

Proper setup ensures safe and efficient operation.

1. Place the appliance on a flat, stable, heat-resistant surface. Ensure there is at least 10 cm of clear space around the back and sides of the appliance for adequate ventilation.
2. Insert the drip tray at the bottom of the cooking chamber to collect any excess oil or food particles.
3. Depending on your cooking needs, insert the desired accessory (baking grids, rotary basket, or rotisserie spit with skewers) into the designated slots within the cooking chamber.
4. Ensure the power cord is securely plugged into a grounded electrical outlet.

## 5. OPERATION

---


This section details how to operate your hot air fryer for various cooking tasks.

### 5.1 Basic Operation

1. Place food inside the cooking chamber on the appropriate accessory. Do not overfill.
2. Close the door securely.
3. Press the Power button to turn on the display.
4. Select a preset program or manually set the desired temperature and time using the touch controls.
5. Press the Power button again to start cooking.
6. The interior light can be turned on/off using the light button to monitor cooking progress.
7. Once cooking is complete, the appliance will beep and automatically shut off. Carefully remove food using heat-resistant gloves and the removal aid tool.

### 5.2 Using Preset Programs

The appliance features 8 convenient preset programs for common dishes:

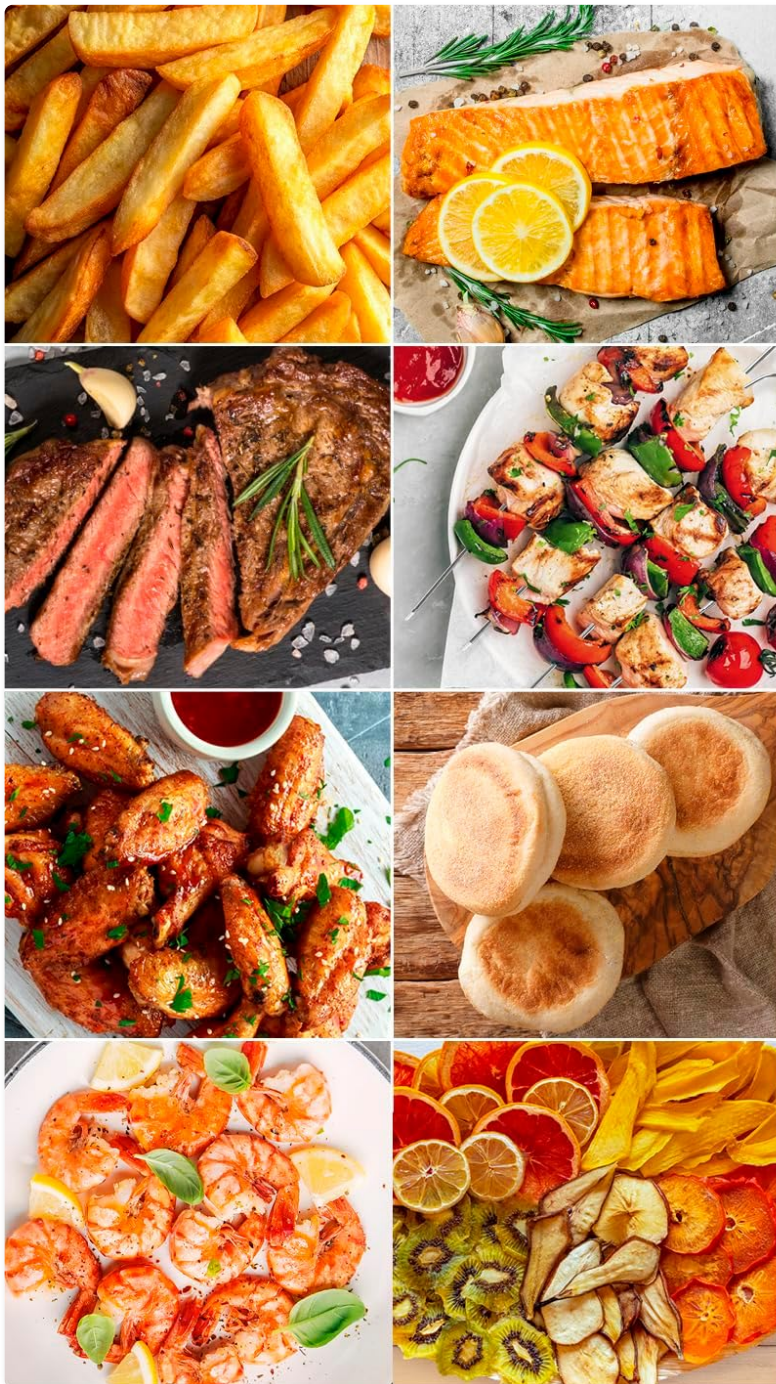

# 8 Programme für einfache & punkt- genaue Zubereitung



Image: A collage showing various food items that can be prepared using the 8 preset programs, including fries, salmon, steak, skewers, chicken wings, muffins, shrimp, and dried fruit.

- Fries
- Steak
- Poultry
- Baked Goods
- Shrimp
- Dried Fruit
- Skewers
- Fish

To use a preset program, simply touch the corresponding icon on the display. The appliance will automatically set the optimal temperature and time. You can adjust these settings manually if desired.

## 5.3 Using Accessories

The GOURMETmaxx Digital Hot Air Fryer XXL comes with a versatile accessory set:

# XXL-ZUBEHÖR FÜR MEHR ABWECHSLUNG



Image: A visual representation of the XXL accessory set, including the grill basket, grill spit, baking grids, and shashlik skewers.

- **Rotisserie Spit:** Ideal for roasting a whole chicken or larger cuts of meat. Secure the food onto the spit and insert it into the rotation mechanism. Activate the rotation function on the control panel.
- **Shashlik Skewers:** Use with the rotisserie spit for cooking kebabs.
- **Rotary Basket:** Perfect for evenly cooking smaller items like French fries, popcorn, or roasted vegetables. Place food inside, close the basket, and insert it into the rotation mechanism.
- **Baking Grids:** Use these multi-level racks for dehydrating fruits, baking, or cooking multiple smaller items simultaneously.
- **Drip Tray:** Always place this at the bottom to catch drips and make cleaning easier.

The 360° Rapid Air Technology ensures even heat distribution for crispy results with minimal oil.

# 360° HEISSLUFT- ZIRKULATION

AUSSEN  
KROSS  
& INNEN  
ZART

 RAPID-AIR-  
TECHNOLOGIE

 FETT- UND  
GERUCHSARME  
ZUBEREITUNG

 MIT TIMER

HIGH-SPEED-  
AUFWÄRMZEIT



Image: An illustration demonstrating the 360-degree hot air circulation technology within the air fryer, highlighting how it ensures even cooking and crispiness.

## 6. CLEANING AND MAINTENANCE

Regular cleaning and maintenance will prolong the life of your appliance.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Removable Parts:** All removable accessories (rotisserie spit, skewers, rotary basket, baking grids, drip tray) are dishwasher-safe for easy cleaning. Alternatively, wash them with warm soapy water, rinse, and dry thoroughly.
3. **Main Unit:** Wipe the exterior of the appliance with a damp cloth. For the interior, use a soft, damp cloth and mild detergent if necessary. Do not use abrasive cleaners or scouring pads, as they can damage the non-stick coating.
4. **Heating Element:** Gently clean the heating element with a soft brush to remove any food residue. Do not use water or liquid cleaners directly on the heating element.
5. **Storage:** Ensure all parts are clean and dry before storing the appliance in a cool, dry place.

## 7. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; appliance malfunction.	Ensure the power cord is securely plugged in. Test the outlet with another appliance. If the problem persists, contact customer support.
Food is not cooked evenly.	Overfilling the basket/rack; incorrect temperature/time; food not rotated.	Do not overfill. Ensure food is in a single layer or use the rotary basket/rotisserie. Adjust temperature/time as needed. Shake or turn food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; cooking fatty foods.	Clean the drip tray and interior thoroughly after each use. For fatty foods, ensure proper ventilation and use the drip tray.
Food is not crispy.	Too much moisture in food; not enough oil (for some foods); temperature too low.	Pat food dry before cooking. Lightly brush or spray with oil for extra crispiness. Increase temperature or cooking time slightly.

## 8. SPECIFICATIONS

Detailed technical specifications for your GOURMETmaxx Digital Hot Air Fryer XXL.

Feature	Detail
Brand	GOURMETmaxx
Model Number	02095
Color	Black
Product Dimensions (L x W x H)	36.5 x 32 x 35 cm
Capacity	9 Liters
Power	1800 Watts
Voltage	240 Volts (AC)
Material	ABS, PC, PP, Stainless Steel
Item Weight	7.2 Kilograms
Automatic Shut-off	No
Special Features	Touch-Display, Timer, 8 preset programs, Versatile accessories

# Welche passt zu Dir?















 
GOURMETmaxx							
 Volumen:		4 Liter	6,5 Liter	2 x 4 Liter	9 Liter	2 x 5 Liter	12 Liter
 Leistung:		1.300 Watt	1.700 Watt	2.600 Watt	1.800 Watt	2.800 Watt	1.700 Watt
 Sichtfenster:		nein	nein	nein	ja	ja	ja
 Programme:		8	11	10	8	12	10
Funktionen		9	9	9	9	9	9
 Shake Reminder:		ja	ja	ja	nein	ja	nein
 Timer:		ja	ja	ja	ja	ja	ja
 Gar-kammern:		1	1	2	1	2	1
 Haushalts-größe:		bis 5 Personen	bis 7 Personen	bis 8 Personen	bis 6 Personen	bis 8 Personen	bis 8 Personen
 Maße in cm (LxBxH):		39,5 x 27,7 x 31	44,4 x 31,3 x 33,5	40 x 42 x 29,8	36,8 x 32 x 39	35,5 x 32,5 x 37	35,8 x 32,5 x 34,5

Image: A comparison table detailing specifications across different GOURMETmaxx air fryer models, including volume, power, functions, and dimensions.

## 9. WARRANTY AND SUPPORT

Your GOURMETmaxx Digital Hot Air Fryer XXL is designed for reliable performance. For warranty information and customer support, please refer to the documentation included with your purchase or visit the official GOURMETmaxx website.

For any technical issues or questions not covered in this manual, please contact GOURMETmaxx customer service.