

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [USARMT](#) /

› USARMT Replacement Remote Control Instruction Manual for RCA SmarTVirtuoso 4K Smart LED TVs (Model RNSMU5536)

USARMT 688934118864

USARMT Replacement Remote Control Instruction Manual

For RCA SmarTVirtuoso 4K Smart LED TVs, including Model RNSMU5536

1. INTRODUCTION

This manual provides instructions for the USARMT Replacement Remote Control, designed for use with RCA SmarTVirtuoso 4K Smart LED Televisions. This remote is compatible with various RCA 4K Smart TV models, including the RCA 55" Class 4K (2160P) Smart LED TV, model RNSMU5536.

The remote control is preprogrammed and generally requires no additional setup or programming. Simply insert batteries to begin operation.



Image 1.1: Front view of the USARMT Replacement Remote Control. This image displays the full layout of the remote, including number keys, navigation pad, volume and channel controls, and dedicated app buttons for YouTube, Vudu, Pandora, and Netflix.

2. SETUP

2.1 Battery Installation

The remote control requires two (2) AA batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

Once batteries are installed, the remote control is ready for use. No additional programming is typically required.



Image 2.1: Angled view of the USARMT Replacement Remote Control. This image provides a slightly different perspective of the remote, highlighting its ergonomic design and the location of the battery compartment on the rear.

3. OPERATING INSTRUCTIONS

The USARMT Replacement Remote Control provides full functionality for your compatible RCA SmartVirtuoso 4K Smart LED TV. Below are the primary functions of the remote's buttons:

- **Power Button ():** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels or input numerical values.
- **Volume Up/Down (VOL +/-):** Adjusts the audio volume.
- **Channel Up/Down (CH +/-):** Changes the television channel.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates through menus and confirms selections.
- **MENU:** Accesses the TV's main menu.
- **SOURCE:** Selects input sources (e.g., HDMI 1, HDMI 2, AV).
- **RETURN / EXIT:** Returns to the previous screen or exits the current menu.
- **Dedicated App Buttons (YouTube, Vudu, Pandora, Netflix)** Provides quick access to these streaming applications.
- **INFO:** Displays information about the current program or input.
- **FREEZE:** Pauses the current video frame.
- **ADD/ERASE:** Function for adding or erasing channels/settings.
- **FAV:** Accesses favorite channels list.
- **V-CHIP:** Accesses V-Chip settings for parental controls.
- **CC (Closed Caption):** Toggles closed captions on or off.
- **MTS (Multi-channel Television Sound):** Selects audio modes (e.g., Stereo, SAP).
- **P.MODE (Picture Mode):** Cycles through picture presets.
- **S.MODE (Sound Mode):** Cycles through sound presets.
- **CH.LIST (Channel List):** Displays the channel list.

Ensure there is a clear line of sight between the remote control and the TV's infrared sensor for optimal performance.

4. MAINTENANCE

4.1 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AA batteries. Do not mix old and new batteries, or different types of batteries.

Remove batteries if the remote control will not be used for an extended period to prevent leakage and potential damage.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with fresh AA batteries.
 - Ensure there is a clear line of sight between the remote control and the TV's infrared sensor.

Obstructions can block the signal.

- Confirm the remote is pointed directly at the TV.

- **Specific buttons not working:**

- This may indicate a dirty contact or a faulty button. Try cleaning the remote as described in the Maintenance section. If the issue persists, the remote may require replacement.

- **Remote works intermittently:**

- This often indicates low battery power. Replace the batteries.
- Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the TV's IR sensor.

- **Remote does not control the TV despite being compatible:**

- While this remote is preprogrammed, in rare cases, a factory reset of the TV or remote might be considered. Consult your TV's original manual for specific instructions.
- Verify that your TV model is indeed an RCA SmarTVirtuoso 4K Smart LED TV, specifically compatible with this replacement remote.

6. SPECIFICATIONS

| | |
|---------------------------|--|
| Product Dimensions | 8 x 2 x 0.5 inches |
| Item Weight | 3.04 ounces |
| Model Number | 688934118864 |
| Batteries Required | 2 AA batteries (not included) |
| Compatible Devices | RCA SmarTVirtuoso 4K Smart LED Televisions (e.g., RNSMU5536) |
| Brand | USARMT |
| Color | Black |

7. WARRANTY AND SUPPORT

This USARMT Replacement Remote Control comes with a 30-day hassle-free return policy. For any issues or support inquiries, please contact the seller directly through your purchase platform.

For specific TV-related issues or advanced troubleshooting not covered here, please refer to your RCA television's original user manual or contact RCA customer support.