

Amazon Basics TM41

User Manual: Amazon Basics Swivel Pedestal Table Top TV Mount

Model: TM41

1. INTRODUCTION

Thank you for choosing the Amazon Basics Swivel Pedestal Table Top TV Mount. This mount is designed to provide a stable and adjustable solution for your television, allowing for optimal viewing angles and flexible placement on various surfaces. Please read this manual thoroughly before installation and use to ensure proper setup and safe operation.



Image 1.1: The Amazon Basics Swivel Pedestal Table Top TV Mount, showcasing its sturdy base and adjustable VESA plate.

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent injury or damage to the product and your television:

- Do not exceed the maximum weight capacity of 55 lbs (25 kg).
- Ensure your TV's VESA pattern is compatible (100x100 mm to 400x400 mm).

- This mount is designed for TVs between 32 inches and 65 inches.
- Always use two or more people to lift and mount the TV to prevent injury.
- Verify that all screws and connections are securely tightened before use.
- Do not modify the product or use it for purposes other than its intended design.
- Keep children and pets away from the assembly area.

3. PACKAGE CONTENTS

Before beginning assembly, ensure all parts are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Main TV Mount Assembly (Base, Support Column, VESA Plate)
- Hardware Kit (various screws, washers, spacers, and tools)
- User Manual (this document)

4. SETUP AND ASSEMBLY

Follow these steps carefully to assemble your TV mount. It is recommended to have a clean, flat surface for assembly.

4.1. Attaching the Base to the Support Column

Place the base on a flat surface. Align the support column with the pre-drilled holes on the base. Secure the column to the base using the provided screws and an Allen wrench. Ensure the connection is firm and stable.



Image 4.1: Front view of the assembled base and support column, ready for the VESA plate attachment.

4.2. Attaching the VESA Plate to the Support Column

Attach the VESA plate to the top of the support column. Use the designated screws to secure it. The VESA plate is the component that will directly connect to the back of your television.



Image 4.2: Side view of the TV mount, showing the VESA plate attached to the support column.

4.3. Mounting the TV to the VESA Plate

Carefully attach the TV to the VESA plate using the appropriate screws from the hardware kit that match your TV's VESA pattern. Ensure the TV is centered and securely fastened. It is highly recommended to have at least two people for this step to prevent damage or injury.



Image 4.3: Angled view of the TV mount, illustrating the VESA plate's connection points for the television.

5. OPERATING INSTRUCTIONS

Once assembled, the TV mount offers several adjustable features for optimal viewing.

5.1. Swivel Function

The mount features a 120° swivel capability (60° left and 60° right). Gently rotate the television to achieve your desired viewing angle. Do not force the swivel beyond its intended range.



Image 5.1: Side view of the TV mount with a television, highlighting its swivel feature and compact design.

5.2. Height Adjustment

The height of the TV can be adjusted from 14.65 inches to 19.37 inches (37.2 cm - 49.2 cm). To adjust the height, loosen the securing screws on the support column, carefully raise or lower the TV to the desired height, and then re-tighten the screws firmly. Always support the TV when adjusting height.



Image 5.2: The TV mount in use, demonstrating its ability to elevate the television for better viewing in a typical home environment.

6. MAINTENANCE

To ensure the longevity and proper function of your TV mount, follow these maintenance guidelines:

- Regularly check all screws and connections to ensure they remain tight. Re-tighten if necessary.
- Clean the mount with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.
- Avoid placing heavy objects on the mount or applying excessive force to the TV while mounted.

7. TROUBLESHOOTING

If you encounter any issues with your TV mount, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
TV is wobbly or unstable.	Screws are loose; TV weight exceeds capacity; incorrect VESA screws.	Check and tighten all assembly screws. Verify TV weight and VESA compatibility. Ensure correct screws are used for TV attachment.
Difficulty swiveling the TV.	Mechanism is stiff; obstruction.	Ensure no cables or objects are obstructing movement. Apply a small amount of silicone lubricant if necessary (avoid oil-based lubricants).
Cannot adjust height.	Securing screws are too tight; mechanism is stuck.	Loosen height adjustment screws sufficiently. If still stuck, gently tap the column while attempting to adjust.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

- **Model Number:** TM41
- **Compatible TV Sizes:** 32" to 65" (81 cm - 165 cm)
- **Maximum Weight Capacity:** 55 lbs (25 kg)
- **VESA Compatibility:** 100x100 mm to 400x400 mm
- **Height Adjustment Range:** 14.65" to 19.37" (37.2 cm - 49.2 cm)
- **Swivel Range:** 120° (60° left / 60° right)
- **Product Dimensions (assembled):** Approximately 19.29" x 11.97" x 23.14" (L x W x H)
- **Item Weight:** 14.13 lbs
- **Material:** Metals, Plastics

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Amazon Basics website or the warranty document included with your product. You can also find the User Manual (PDF) online for additional details.

Online User Manual (PDF): [Download Here](#)

For further assistance, please visit the [Amazon Basics Store](#).