

[manuals.plus](#) /› [AmazonBasics](#) /› **AmazonBasics TV Trolley (Model TC40) User Manual for 32-70 Inch TVs with Swivel Feature**

## AmazonBasics TC40

# AmazonBasics TV Trolley (Model TC40) User Manual

For 32-70 Inch TVs with Swivel Feature

## 1. INTRODUCTION

Welcome to the user manual for your AmazonBasics TV Trolley, Model TC40. This mobile TV stand is designed to securely hold flat panel televisions ranging from 32 to 70 inches, offering flexibility with its swivel feature and convenient mobility. This manual provides essential information for safe assembly, operation, and maintenance of your TV trolley. Please read all instructions carefully before assembly and use.

## 2. IMPORTANT SAFETY INFORMATION

To ensure safe operation and prevent injury or damage, please observe the following safety guidelines:

- Read all instructions carefully before assembly and use.
- Do not exceed the maximum weight capacity of the trolley. Refer to the 'Specifications' section for details.
- Ensure all screws and bolts are securely tightened before placing a TV on the trolley and before moving it.
- Do not allow children to climb on or play with the TV trolley.
- Always move the trolley slowly and carefully, especially on uneven surfaces.
- Lock the wheels when the trolley is in a stationary position to prevent accidental movement.
- Only use the provided hardware or manufacturer-approved replacements.
- If any parts are missing or damaged, contact customer support immediately.

## 3. PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer support.



**Figure 3.1:** Overview of the AmazonBasics TV Trolley. This image displays the complete TV trolley assembly, featuring the vertical support posts, the adjustable TV mounting bracket, the central equipment shelf, and the wheeled base for mobility.

## **Included Hardware and Components**

- Main TV Trolley Frame (Vertical Posts, Base Legs)
- TV Mounting Bracket
- Adjustable Shelf
- Wheels (with locking mechanism)
- Hardware Kit (various screws, washers, nuts, Allen keys, spanners)
- User Manual (this document)



**Figure 3.2:** Close-up of the TV mounting bracket and the top sections of the vertical posts, illustrating the attachment points for the television and the height adjustment mechanism.

## 4. ASSEMBLY INSTRUCTIONS

---

Follow these step-by-step instructions carefully. It is recommended to have a second person assist with mounting the TV for safety and ease.

### Tools Required

- Phillips head screwdriver (not included)
- Allen keys (included)
- Spanners (included)

1. **Step 1: Assemble the Base.** Attach the base legs to the central base connector. Secure with the provided bolts and tighten using the included spanner. Ensure all connections are firm.



Figure 4.1: Illustration of the base assembly, showing the four legs connected to the central hub, ready for wheel attachment.

2. **Step 2: Attach the Wheels.** Insert and secure the wheels into the base legs. Ensure that the two locking wheels are placed on the front legs as indicated in the diagram (if applicable) to prevent accidental movement.
3. **Step 3: Install Vertical Posts.** Connect the vertical support posts to the assembled base. Secure them firmly with the appropriate bolts and Allen key.



**Figure 4.2:** View of the vertical support posts being inserted into the base, highlighting the connection points for stability.

4. **Step 4: Attach the Shelf.** Position the adjustable shelf at the desired height on the vertical posts and secure it using the provided hardware. Ensure it is level and stable.
5. **Step 5: Mount the TV Bracket.** Attach the TV mounting bracket to the top section of the vertical posts. Ensure it is centered and securely fastened.
6. **Step 6: Prepare TV for Mounting.** Attach the TV mounting arms to the back of your television using the

appropriate VESA screws from the hardware kit. Select screws that fit your TV's VESA pattern and do not overtighten. Ensure the arms are level and securely fastened to the TV.

7. **Step 7: Mount the TV.** With assistance, carefully lift the television and hook the mounting arms onto the TV bracket on the trolley. Secure the TV to the bracket using the safety screws or locking mechanisms provided. Double-check all connections for security.



Figure 4.3: Rear perspective of the TV trolley with a television securely mounted, illustrating the VESA bracket attachment and cable management options.

## 5. OPERATING INSTRUCTIONS

### Moving the TV Trolley

- Unlock all wheels by disengaging their locking mechanisms before attempting to move the trolley.
- Push the trolley gently from the base or the lower part of the vertical posts. Avoid pushing directly on the TV screen.
- Lock the wheels once the trolley is in its desired stationary position to prevent accidental movement.

### Adjusting TV Height

The TV height can be adjusted by loosening the securing bolts on the vertical posts, carefully raising or lowering the TV to the desired level, and then re-tightening the bolts firmly. Always ensure the TV is level and secure after adjustment.

### Using the Swivel Feature

The TV mounting bracket allows for horizontal swivel movement. Gently rotate the TV to achieve the desired viewing angle. Avoid excessive force or sudden movements.



**Figure 5.1:** The AmazonBasics TV Trolley positioned in a modern office environment, showcasing its mobility and suitability for various settings.

## 6. MAINTENANCE

### Cleaning

- Wipe surfaces with a soft, damp cloth.
- Avoid abrasive cleaners, harsh chemicals, or solvents, as these may damage the finish.

### Inspection

- Periodically check all screws and bolts for tightness. Re-tighten if necessary to maintain stability.
- Inspect the wheels for smooth operation and ensure the locking mechanisms function correctly.
- Check the TV mounting bracket and all structural components for any signs of wear, damage, or deformation.

## 7. TROUBLESHOOTING

Refer to the table below for common issues and their potential solutions.

Issue	Possible Cause	Solution

Issue	Possible Cause	Solution
TV is wobbly or unstable.	Loose connections; TV weight exceeds capacity.	Check and re-tighten all bolts and screws. Ensure the TV's weight is within the specified limits.
Trolley is difficult to move.	Wheels are locked; Obstruction preventing movement.	Unlock all wheels. Clear any obstructions around the wheels or base.
TV is not level after mounting.	TV mounting arms are unevenly attached to the TV back.	Remove the TV, re-adjust the mounting arms on the TV back to ensure they are level, then re-mount the TV.

## 8. SPECIFICATIONS

Technical details for the AmazonBasics TV Trolley, Model TC40:

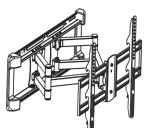
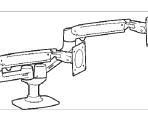
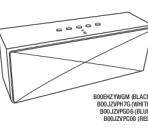
Feature	Detail
Brand	AmazonBasics
Model	TC40
Compatible TV Sizes	32 - 70 inches (81.3 cm - 177.8 cm)
Movement Type	Swivel
Product Dimensions (LxWxH)	84 x 66.3 x 136.7 Centimeters
Item Weight	12.93 kg
Mounting Type	VESA compatible
Color	Black

## 9. WARRANTY AND SUPPORT

For warranty information and customer support regarding your AmazonBasics TV Trolley, please refer to the AmazonBasics official website or contact Amazon customer service directly. It is advisable to keep your purchase receipt as proof of purchase for any warranty claims.

## Related Documents - TC40

	<a href="#"><u>AmazonBasics 10W Qi Wireless Charging Stand: User Guide, Safety &amp; Specifications (B0874YN8B9)</u></a> <p>Get detailed safety instructions, operating procedures, specifications, and disposal information for the AmazonBasics 10W Qi Certified Wireless Charging Stand (Model B0874YN8B9). This guide ensures proper and safe use of your wireless charger.</p>
---	---

 <p>amazonbasics</p> <p>Dual Arm Full Motion TV Mount, 32" to 65" (B07M4K94P9)</p> <p>Comprehensive user guide for the AmazonBasics Dual Arm Full Motion TV Mount, supporting 32-65 inch TVs up to 100 lbs. Includes important safety information, detailed assembly instructions for drywall and concrete walls, hardware identification, and operational adjustments.</p>	<p><a href="#">AmazonBasics Dual Arm Full Motion TV Mount (32-65 Inch) User Manual</a></p> <p>Comprehensive user guide for the AmazonBasics Dual Arm Full Motion TV Mount, supporting 32-65 inch TVs up to 100 lbs. Includes important safety information, detailed assembly instructions for drywall and concrete walls, hardware identification, and operational adjustments.</p>
 <p>amazon basics</p> <p>Dual Monitor Mounting Arm (B07QNY2D3H)</p> <p>AmazonBasics Dual Side-by-Side Monitor Mounting Arm (B07QNY2D3H) User Manual. This manual provides important safety safeguards, assembly instructions, cleaning, and maintenance guidelines for the AmazonBasics Dual Side-by-Side Monitor Display Mounting Arm (B07QNY2D3H). Learn how to install and adjust your monitor arm for optimal viewing.</p>	<p><a href="#">AmazonBasics Dual Side-by-Side Monitor Mounting Arm User Manual</a></p> <p>This user manual provides important safety safeguards, assembly instructions, cleaning, and maintenance guidelines for the AmazonBasics Dual Side-by-Side Monitor Display Mounting Arm (B07QNY2D3H). Learn how to install and adjust your monitor arm for optimal viewing.</p>
 <p>amazonbasics</p> <p>CR2032 Lithium Coin Cell Battery (B07HDCWKM)</p> <p>AmazonBasics CR2032 Lithium Coin Cell Battery (B07HDCWKM) Safety and Disposal Guide. Essential safety instructions, usage guidelines, and disposal information for AmazonBasics CR2032 Lithium Coin Cell Batteries. Learn how to handle and dispose of batteries responsibly.</p>	<p><a href="#">AmazonBasics CR2032 Lithium Coin Cell Battery: Safety and Disposal Guide</a></p> <p>Essential safety instructions, usage guidelines, and disposal information for AmazonBasics CR2032 Lithium Coin Cell Batteries. Learn how to handle and dispose of batteries responsibly.</p>
 <p>amazonbasics</p> <p>Book Safe - Combination Lock (B07HDCWKM)</p> <p>AmazonBasics Book Safe with Combination Lock (B07HDCWKM) Quick Start Guide. Step-by-step instructions for using the AmazonBasics Book Safe with Combination Lock, covering opening, closing, and setting a new combination.</p>	<p><a href="#">AmazonBasics Book Safe with Combination Lock: Quick Start Guide</a></p> <p>Step-by-step instructions for using the AmazonBasics Book Safe with Combination Lock, covering opening, closing, and setting a new combination.</p>
 <p>amazon basics</p> <p>AmazonBasics Portable Bluetooth Speaker (BTV1)</p> <p>AmazonBasics Portable Bluetooth Speaker manual: Learn setup, pairing, music playback, speakerphone use, and troubleshooting for model BTV1. Includes multiple languages.</p>	<p><a href="#">AmazonBasics Portable Bluetooth Speaker Instruction Manual</a></p> <p>AmazonBasics Portable Bluetooth Speaker manual: Learn setup, pairing, music playback, speakerphone use, and troubleshooting for model BTV1. Includes multiple languages.</p>