

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Casio](#) /

› [Casio PX-S1000BK Digital Piano User Manual](#)

Casio PX-S1000BK

Casio PX-S1000BK Digital Piano User Manual

Model: PX-S1000BK

INTRODUCTION

This user manual provides essential information for the safe and effective operation of your Casio PX-S1000BK Digital Piano. Please read this manual thoroughly before using the instrument and keep it for future reference. The Casio PX-S1000BK is an 88-key digital piano designed to offer authentic playability and lifelike sound. It features a sleek, modern design with touch sensor controls and a fully weighted Smart Scaled Hammer Action keyboard, providing a realistic piano touch.

SAFETY PRECAUTIONS

To ensure safe operation and prevent damage to the instrument or injury to yourself and others, please observe the following important precautions:

- **Power Supply:** Use only the specified AC adaptor. Do not use the adaptor if the cord is damaged.
- **Location:** Avoid exposing the instrument to direct sunlight, high temperatures, high humidity, or excessive dust. Place it on a stable, level surface.
- **Handling:** Do not drop or subject the instrument to strong impacts. Do not place heavy objects on the keyboard.
- **Cleaning:** Use a soft, dry cloth for cleaning. Do not use abrasive cleaners or solvents.
- **Water and Moisture:** Keep the instrument away from water and other liquids. Do not operate with wet hands.

SETUP

Follow these steps to set up your Casio PX-S1000BK Digital Piano:

1. **Unpacking:** Carefully remove the digital piano and all accessories from the packaging. Ensure all components are present: digital piano unit, AC adaptor, music stand, and damper pedal.
2. **Placement:** Place the piano on a sturdy, flat surface that can support its weight (approximately 24.7 pounds). Ensure there is adequate space around the instrument for ventilation and comfortable playing.
3. **Attach Music Stand:** Insert the music stand into the slots located on the top rear of the piano.
4. **Connect Damper Pedal:** Plug the included damper pedal into the DAMPER PEDAL jack on the rear panel of

the piano.

5. **Connect Power:** Connect the AC adaptor to the DC 12V jack on the rear panel of the piano. Plug the other end of the AC adaptor into a standard wall outlet.
6. **Battery Installation (Optional):** For portable use, the PX-S1000BK can operate on 6 AA batteries (not included). Open the battery compartment on the underside of the piano and insert the batteries, observing correct polarity.



Figure 1: Top view of the Casio PX-S1000BK Digital Piano, illustrating the 88-key keyboard and the sleek control panel with touch sensors.

OPERATING INSTRUCTIONS

Power On/Off

Press the **POWER** button located on the control panel to turn the piano on. The touch sensor controls will illuminate. Press and hold the **POWER** button again to turn the piano off. The illuminated controls will fade away.

Adjusting Volume

Use the **VOLUME** knob on the control panel to adjust the overall output volume of the piano. Turn clockwise to increase volume, counter-clockwise to decrease.

Selecting Tones

The PX-S1000BK features 18 built-in tones. To select a tone:

1. Press the **FUNCTION** button.
2. Use the **+** and **-** buttons or specific keys (as indicated in the tone list in the full manual) to navigate and select the desired tone.
3. Press **FUNCTION** again or wait a few seconds for the selection to be confirmed.

Note: The primary piano tone is selected by default upon power-on.

Using the Damper Pedal

The included damper pedal allows for sustain effects, similar to an acoustic piano. Press the pedal down to sustain notes, and release to stop the sustain.

Connecting Headphones

For private practice, connect standard stereo headphones to the **PHONES** jack on the rear panel. Connecting headphones will mute the internal speakers.

MAINTENANCE AND CARE

Proper maintenance ensures the longevity and optimal performance of your digital piano:

- **Cleaning the Cabinet:** Wipe the piano's surface with a soft, dry cloth. For stubborn dirt, dampen the cloth slightly with water and a mild, neutral detergent, then wipe dry immediately. Avoid using benzene, alcohol, or paint thinner, as these can damage the finish.
- **Cleaning the Keyboard:** Wipe the keys with a soft cloth dampened with a weak solution of water and neutral detergent. Wipe dry immediately.
- **Storage:** If storing the piano for an extended period, disconnect the AC adaptor and remove any batteries. Store in a cool, dry place away from extreme temperatures and humidity.
- **Avoid Vibrations:** Do not place the piano near sources of strong vibration or shock.

TROUBLESHOOTING

If you encounter issues with your Casio PX-S1000BK, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No sound	Volume is too low; Headphones are connected; AC adaptor not properly connected.	Increase volume; Disconnect headphones; Ensure AC adaptor is securely connected and power outlet is active.
Keys feel loose or noisy	Normal wear and tear; Internal mechanism issue.	Minor key noise can be normal over time. If excessive, contact Casio customer support for inspection.
Power does not turn on	AC adaptor not connected; Batteries are dead or incorrectly inserted.	Check AC adaptor connection; Replace batteries or ensure correct polarity.
Sound is distorted	Volume is too high; External audio device issue.	Lower the volume; Check connections to any external audio devices.

If the problem persists after trying these solutions, please contact Casio customer support.

SPECIFICATIONS

Feature	Detail
Model Name	PX-S1000BK
Number of Keys	88
Keyboard Action	Smart Scaled Hammer Action Keyboard
Polyphony	192-note
Tones	18 built-in tones
Connectivity	USB Type A or USB Type B
Power Source	AC Adaptor (USB) or 6 AA batteries
Item Weight	24.7 pounds
Product Dimensions	52.05 x 9.13 x 4.02 inches

Feature	Detail
Special Feature	Portable

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Casio website or the warranty card included with your product. You can also visit the [Casio Store on Amazon](#) for additional resources.

When contacting support, please have your model number (PX-S1000BK) and UPC (079767362478) readily available.

© 2024 Casio Computer Co., Ltd. All rights reserved.