

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Hamilton Beach](#) /

› [Hamilton Beach Handheld Garment Steamer \(Model 11555\) Instruction Manual](#)

## Hamilton Beach 11555

# Hamilton Beach Handheld Garment Steamer

Model: 11555

Brand: Hamilton Beach

### INTRODUCTION

The Hamilton Beach Handheld Garment Steamer is designed to quickly relax wrinkles and refresh various fabrics. This portable and powerful 1000-watt steamer offers 15 minutes of continuous steam, making it ideal for clothes, bedding, curtains, and more. Its fast heat-up time ensures convenience for daily use or travel.

### IMPORTANT SAFETY INFORMATION

Please read all instructions before using this appliance. Basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Always unplug the steamer from the electrical outlet when filling with water or cleaning.
- Do not immerse the steamer in water or other liquids.
- Use only distilled or purified water to prevent mineral buildup and extend product life.
- Keep the steamer upright during use to avoid hot water spills.
- Do not touch the steam head or hot surfaces while the steamer is operating or cooling down.
- Keep out of reach of children.

### PRODUCT OVERVIEW

Familiarize yourself with the components of your Hamilton Beach Handheld Garment Steamer.

**Hamilton Beach®**



# Handheld Garment Steamer

Figure 1: Hamilton Beach Handheld Garment Steamer showing its dimensions (5.5"L x 3.5"W x 11"H).

# Work steam deep into fibers

With included detachable fabric brush



**Figure 2:** Detachable fabric brush. This attachment helps work steam deeper into fabric fibers and remove lint.

# Ready light

Indicates when steamer is fully heated and ready to use



**Figure 3:** Ready light indicator. This light illuminates when the steamer is fully heated and ready for use.

## SETUP INSTRUCTIONS

1. **Fill the Water Tank:** Ensure the steamer is unplugged. The water tank is detachable for easy filling. Remove the tank and fill it with distilled or purified water up to the 'MAX' line.

# Easy-to-fill water tank

Removes for fast,  
easy filling at the sink



**Figure 4:** The detachable water tank can be easily removed and filled at a sink.

2. **Attach Water Tank:** Securely reattach the filled water tank to the steamer body.
3. **Attach Fabric Brush (Optional):** For deeper steam penetration and lint removal, attach the fabric brush to the steam head.

## OPERATING INSTRUCTIONS

1. **Power On:** Plug the steamer into a standard electrical outlet. The indicator light will illuminate, signaling that the steamer is heating up.
2. **Heat-Up Time:** The steamer will be ready to use in less than 30 seconds. The indicator light will change or stabilize when ready.



# Provides 15 minutes of continuous steaming

Fast heatup — ready to  
steam in just 30 seconds

**Figure 5:** The steamer provides 15 minutes of continuous steam after a fast 30-second heat-up.

- 3. Steaming Technique:** Hold the garment taut with one hand. With the other hand, hold the steamer upright and press the steam trigger button to release steam. Move the steam head slowly over the fabric, allowing the steam to penetrate and relax wrinkles.



## Easy to use

With one-button  
operation and  
pivoting cord  
that provides  
a full range  
of motion

**Figure 6:** The steamer is easy to use with one-button operation and a pivoting cord for full range of motion.

- 4. Continuous Steam:** The steamer provides up to 15 minutes of continuous steam per fill.



**Figure 7:** This powerful 1000-watt steamer is great for clothes, bedding, curtains, and more.

5. **Horizontal Steaming:** The anti-drip design allows for horizontal steaming without water leakage, making it suitable for items like tablecloths or runners.
6. **Finishing:** Once wrinkles are removed, allow the garment to cool and dry before wearing or storing.

## MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your steamer.

1. **Empty Water Tank:** After each use, unplug the steamer and allow it to cool completely. Remove the water tank and empty any remaining water.
2. **Cleaning:** Wipe the exterior of the steamer with a soft, damp cloth. Do not use abrasive cleaners.
3. **Descaling (Monthly or as needed):** If using tap water (not recommended), mineral deposits may build up. To descale, fill the water tank with a mixture of 50% white vinegar and 50% distilled water. Run the steamer until the tank is empty. Repeat with clean distilled water to rinse.
4. **Storage:** Store the steamer in a cool, dry place. Ensure the power cord is neatly wrapped and secured.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam or low steam output	Water tank is empty or low. Steamer not heated sufficiently. Mineral buildup.	Refill water tank. Allow steamer to preheat until indicator light is ready. Descale the steamer.
Water leaking from steam head	Steamer is not held upright. Water tank not securely attached.	Always hold the steamer upright during use. Ensure water tank is firmly in place.
Steamer not turning on	Not properly plugged in. Power outlet issue.	Check power connection. Try a different outlet.

## SPECIFICATIONS

**Brand:** Hamilton Beach

**Model:** 11555

**Color:** White & Blue

**Wattage:** 1000 watts

**Product Dimensions:** 5.5"L x 3.5"W x 11"H

**Item Weight:** 1.98 pounds

**Heat-Up Time:** Less than 30 seconds

**Continuous Steam Time:** 15 minutes

**Included Accessories:** Detachable Fabric Brush

**Manufacturer:** Hamilton Beach

**Date First Available:** January 25, 2019

## WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or visit the official Hamilton Beach website. Keep your purchase receipt for warranty claims.