

Manuals.plus /

- › Aluratek /
- › Aluratek Digital TV Converter Box (ADTB01F) User Manual

Aluratek ADTB01F

Aluratek Digital TV Converter Box with Digital Video Recorder (ADTB01F) User Manual

Model: ADTB01F

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Aluratek Digital TV Converter Box with Digital Video Recorder (ADTB01F). This device allows you to receive digital over-the-air (OTA) television broadcasts and record them for later viewing. Please read this manual thoroughly before using the product.

PRODUCT OVERVIEW

Front Panel and Remote Control

The Aluratek ADTB01F converter box features a clear front display and comes with a multi-functional remote control for easy navigation and operation.



Image: Front view of the Aluratek ADTB01F Digital TV Converter Box with its included remote control. The converter box has a digital display and a USB port on the front. The remote control features various buttons for channel selection, volume, recording, and menu navigation.

Rear Panel Connections

The rear panel provides all necessary ports for connecting the converter box to your television and antenna.



Image: Rear view of the Aluratek ADTB01F Digital TV Converter Box, showing the input and output ports. These include Antenna IN, RF OUT, Coaxial, HDMI OUT, and RCA (Video OUT/Audio OUT) ports, along with the power input.

SETUP GUIDE

- 1. Connect Antenna:** Connect your digital TV antenna to the "Antenna IN" port on the rear of the converter box.
- 2. Connect to TV:** Choose one of the following connection methods to connect the converter box to your television:
 - **HDMI:** For best picture quality, connect an HDMI cable from the "HDMI OUT" port on the converter box to an available HDMI input on your TV.
 - **RCA:** Connect RCA cables (red for right audio, white for left audio, yellow for video) from the "VIDEO OUT/AUDIO OUT" ports on the converter box to the corresponding RCA inputs on your TV.
- 3. Power Connection:** Plug the power adapter into the converter box and then into a standard electrical outlet.
- 4. Power On:** Turn on your television and the Aluratek converter box. Select the correct input source (HDMI or AV) on your TV that corresponds to the connection you made.
- 5. Channel Scan:** Upon first use, the converter box will prompt you to perform an automatic channel scan. Follow the on-screen instructions to scan for available digital channels. This process may take several minutes.

OPERATING INSTRUCTIONS

Basic Operation

- **Channel Selection:** Use the "CH+" / "CH-" buttons on the remote or the number pad to change channels.
- **Volume Control:** Use the "VOL+" / "VOL-" buttons on the remote to adjust the volume.
- **Menu Navigation:** Press the "MENU" button to access the main menu. Use the arrow keys and "OK" button to navigate and select options.

Recording Functionality

The ADTB01F allows you to record digital TV programs to a USB storage device (not included).

- **USB Drive:** Insert a formatted USB flash drive or external hard drive into the USB port on the front panel.
- **Instant Recording:** While watching a program, press the "REC" button on the remote to start recording immediately. Press "STOP" to end the recording.
- **Scheduled Recording:** Access the Electronic Program Guide (EPG) by pressing the "EPG" button. Navigate to the desired program and follow the on-screen prompts to set a scheduled recording.
- **Playback:** Recorded programs can be accessed and played back through the "PVR" or "Media" menu option.

Electronic Program Guide (EPG)

The EPG provides a schedule of upcoming programs. Press the "EPG" button on the remote to view program information and set recording timers.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the converter box. Do not use liquid cleaners or abrasive materials.
- **Ventilation:** Ensure the ventilation openings on the device are not blocked to prevent overheating.
- **Storage:** When not in use for extended periods, disconnect the power adapter and store the device in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No Power	Power cable not connected; Power outlet not working.	Check power cable connection; Try a different outlet.
No Signal / No Picture	Incorrect TV input selected; Antenna not connected or positioned correctly; No channels scanned.	Select correct TV input (HDMI/AV); Check antenna connection and position; Perform a channel scan.
Remote Control Not Working	Batteries are dead or inserted incorrectly; Obstruction between remote and converter box.	Replace batteries; Ensure clear line of sight to the converter box's IR sensor.
Recording Issues	USB drive not connected or formatted; Insufficient storage space.	Ensure USB drive is connected and formatted to FAT32; Check available space on USB drive.

SPECIFICATIONS

Feature	Detail
Model	ADTB01F
Brand	Aluratek
Compatible Devices	Television
Connectivity Technology	HDMI
Connector Type	HDMI
Audio Input	Antenna
Video Input	Antenna
Total USB Ports	1
Item Weight	1.25 Pounds (approx. 567 g)
Parcel Dimensions	27.7 x 18.9 x 6 cm

WARRANTY AND SUPPORT

For information regarding product warranty, technical support, or service, please refer to the official Aluratek website or contact their customer support directly. Keep your purchase receipt for warranty claims.

Manufacturer: Aluratek

Website: www.aluratek.com