



Manuals.plus /

› Videocon /

› Videocon Smart 50-inch LED TV User Manual

Videocon LED50DN4

Videocon Smart 50-inch LED TV User Manual

Model: LED50DN4

INTRODUCTION

This user manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Videocon Smart 50-inch LED TV. Please read this manual thoroughly before operating the television and retain it for future reference.

PRODUCT FEATURES

- **Display Type:** LED
- **Screen Size:** 50 Inches (127 cm visible diagonal)
- **Resolution:** 1080p (1920x1080) Full HD
- **TV Type:** Smart TV
- **Connectivity:** HDMI
- **Supported Internet Services:** Netflix
- **Included Components:** Stand, TV, Remote Control

PACKAGE CONTENTS

Before proceeding with the setup, ensure all items listed below are present in the packaging:

- Videocon 50-inch LED Smart TV
- Remote Control
- TV Stand (2 pieces)
- Screws for Stand Installation
- Power Cord
- User Manual (this document)

SETUP GUIDE

1. Unboxing and Placement

Carefully remove the television from its packaging. It is recommended to have two people for this process due to the size and weight of the unit. Place the TV on a stable, flat surface or prepare for wall mounting.



Image: Front view of the Videocon 50-inch LED Smart TV, showcasing its display and slim bezels.

2. Attaching the Stand

If you are not wall-mounting the TV, attach the included stand pieces. Locate the designated slots at the bottom of the TV. Insert each stand piece into its respective slot and secure them with the provided screws. Ensure the stand is firmly attached before placing the TV upright.

3. Connecting Devices

The Videocon Smart TV supports HDMI connectivity for external devices. Locate the HDMI ports on the back of the TV. Connect your cable box, gaming console, Blu-ray player, or other devices using HDMI cables.



Image: Rear view of the Videocon 50-inch LED Smart TV, highlighting the placement of HDMI and other input/output ports. For internet access, connect an Ethernet cable to the LAN port or configure Wi-Fi settings after initial power-on.

4. Power Connection

Connect the power cord to the TV's power input and then plug the other end into a standard electrical outlet. The TV will enter standby mode.

OPERATING INSTRUCTIONS

1. Powering On/Off

Press the **Power** button on the remote control or on the TV itself to turn the television on or off. A red indicator light typically signifies standby mode, while no light or a blue light indicates the TV is active.

2. Remote Control Functions

The remote control allows you to navigate menus, adjust volume, change channels, select input sources, and access smart TV features. Familiarize yourself with the button layout for optimal use.

3. Initial Setup and Smart Features

Upon first power-on, the TV will guide you through an initial setup process, including language selection, network connection (Wi-Fi or Ethernet), and channel scanning. Once connected to the internet, you can access smart features like Netflix directly from the TV's home screen or dedicated remote buttons.

4. Input Source Selection

To switch between connected devices (e.g., cable box, gaming console), press the **Source** or **Input** button on your

remote control. Select the desired HDMI input from the on-screen menu.

MAINTENANCE AND CARE

- **Cleaning the Screen:** Use a soft, lint-free cloth specifically designed for electronics. Do not use abrasive cleaners or sprays directly on the screen. Lightly dampen the cloth with water if necessary.
- **Cleaning the Cabinet:** Wipe the TV cabinet with a soft, dry cloth. Avoid using harsh chemicals.
- **Ventilation:** Ensure adequate ventilation around the TV. Do not block the ventilation openings on the back or sides of the TV.
- **Power Cord:** Regularly check the power cord for any damage. If damaged, replace it with an approved cord.
- **Storage:** If storing the TV for an extended period, disconnect it from power and store it in a cool, dry place, preferably in its original packaging.

TROUBLESHOOTING

Before contacting customer support, please refer to the following common issues and their solutions:

- **No Power:**
 - Ensure the power cord is securely plugged into both the TV and the electrical outlet.
 - Check if the outlet is functional by plugging in another device.
 - Press the power button on the TV itself, not just the remote.
- **No Picture/Sound:**
 - Verify that the correct input source is selected (e.g., HDMI 1, HDMI 2).
 - Check all cable connections between the TV and external devices.
 - Ensure the volume is not muted or set to zero.
- **Remote Control Not Working:**
 - Replace the batteries in the remote control.
 - Ensure there are no obstructions between the remote and the TV's IR sensor.
- **Smart Features Not Connecting to Internet:**
 - Check your router and internet connection.
 - Go to the TV's network settings and re-enter your Wi-Fi password or reconnect to the network.
 - Restart both the TV and your router.

SPECIFICATIONS

Feature	Detail
Model Number	LED50DN4 (Item model number: 2724712341449)
Screen Size	50 Inches (127 cm)
Display Technology	LED
Resolution	1080p (1920x1080) Full HD
TV Type	Smart TV
Connectivity Technology	HDMI
Supported Internet Services	Netflix
Aspect Ratio	1.77:1
Product Dimensions (W x D x H)	121 x 14 x 80 cm
Weight	12 kg
Included Components	Stand, TV, Remote Control





Image: Side profile of the Videocon 50-inch LED Smart TV, illustrating its slim design and depth.

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Videocon support website. Keep your purchase receipt as proof of purchase for warranty claims.

For common inquiries, you may also find assistance through the retailer's support channels or by searching online for "Videocon support" or "Videocon LED50DN4 support".

