

[Manuals.plus](#) /

› [Deco Gear](#) /

› Deco Gear 5-inch Hard EVA Case and Weighted GPS Dash Mount Bundle Instruction Manual

Deco Gear B07N6JWHXL

Deco Gear 5-inch Hard EVA Case and Weighted GPS Dash Mount Bundle Instruction Manual

Brand: Deco Gear | **Model:** B07N6JWHXL

INTRODUCTION

This manual provides comprehensive instructions for the Deco Gear 5-inch Hard EVA Case designed for tablets and GPS devices, and the Universal Weighted GPS Dash Mount. It covers product components, setup, usage, and maintenance to ensure optimal performance and longevity of your accessories.

PRODUCT COMPONENTS

The Deco Gear bundle includes the following items:

- One (1) 5-inch Hard EVA Case with Zipper for Tablets and GPS
- One (1) Deco Gear Universal Weighted GPS Dash Mount
- One (1) 6 x 6 inch Microfiber Cleaning Cloth



Image 1: Contents of the Deco Gear bundle, showing the hard EVA case, weighted dash mount, and microfiber cleaning cloth.

SETUP AND USAGE

5-inch Hard EVA Case

5" EVA Hard Case



- Compact size for easy storage
- Carbon fiber design pattern
- Strong EVA material protects your Tablet or GPS against scratches, dust, and cracks.

- Universal 5-inch Tablet / GPS Hardshell Case w/ built-in handle.
- Mesh Pockets specially designed for storing accessories such as GPS, E-reader, memory cards, USB charging cable, and more without the risk of losing or damaging them.

decogear



Image 2: The 5-inch hard EVA case, illustrating its compact size, carbon fiber design, strong EVA material, and mesh pockets.

1. **Opening the Case:** Unzip the case completely using the dual zippers.
2. **Inserting Devices:** Place your 5-inch or smaller tablet or GPS unit into the main compartment. The soft internal fabric is designed to protect the screen from scratches and nicks.
3. **Storing Accessories:** Utilize the internal mesh compartment to store smaller accessories such as charging cables, earbuds, or memory cards. This helps keep items organized and prevents them from scratching your main device.
4. **Closing the Case:** Ensure all items are securely placed and then zip the case closed. The hard EVA material provides protection against impacts, dust, and cracks.



Image 3: An open view of the hard EVA case interior, showing the soft lining and the mesh pocket for accessories.

Universal Weighted GPS Dash Mount



Image 4: The universal weighted GPS dash mount, designed to provide a stable base for GPS devices on a vehicle dashboard.

1. **Placement:** Position the weighted dash mount on a flat, clean surface of your vehicle's dashboard. No installation or adhesives are required.
2. **Securing GPS Device:** Attach your GPS unit's suction cup mount directly to the smooth, flat disc located on top of the weighted base.
3. **Stability:** The bean bag body of the mount is designed to conform to uneven or textured dashboard surfaces, providing a stable and secure base for your GPS device.
4. **Repositioning:** The mount can be easily moved and repositioned as needed without leaving any residue.

MAINTENANCE

Microfiber Cleaning Cloth

- Use the microfiber cloth to gently clean delicate surfaces such as device screens, camera lenses, and eyeglasses.
- The cloth effectively absorbs and removes dust, fingerprints, dirt, and oil smudges without scratching.
- To clean the cloth, hand wash with mild soap and water, then air dry. Do not use fabric softener or bleach.

Case and Dash Mount

- Wipe the exterior of the EVA case and the dash mount with a soft, damp cloth as needed to remove dust or light dirt.
- Avoid using harsh chemicals or abrasive cleaners, as these may damage the materials.
- Ensure the case and mount are completely dry before storing or using.

TROUBLESHOOTING

This section addresses common concerns regarding the product bundle.

- Issue:** GPS unit does not stay securely on the dash mount.
Solution: Ensure the dashboard surface is clean and dry. The weighted base should be placed on a relatively flat area. Confirm that the GPS unit's suction cup is properly attached to the smooth disc on the mount.
- Issue:** Case interior appears dusty or dirty.
Solution: Gently wipe the interior fabric with a clean, slightly damp cloth. Allow it to air dry completely before placing devices inside.
- Issue:** Microfiber cloth leaves streaks.
Solution: The cloth may be dirty or have residue from fabric softener. Wash the cloth thoroughly with mild soap and water, rinse well, and air dry without fabric softener.

SPECIFICATIONS

Feature	Detail
Product Type	Hard EVA Case with Weighted GPS Dash Mount Bundle
Case Size	5 inches (compatible with 5" and smaller electronics)
Case Material	Ethylene Vinyl Acetate (EVA), Microfiber (interior lining)
Case Features	Zipper closure, soft internal fabric, mesh internal compartment
Dash Mount Type	Universal Weighted Dash Mount
Dash Mount Features	Bean bag body, no installation required, converts windshield mount to dash mount
Cleaning Cloth Size	6 x 6 inches (15cm x 15cm)
Cleaning Cloth Material	Microfiber
Compatible Devices	Tablets and GPS units (up to 5 inches)

WARRANTY AND SUPPORT

Deco Gear stands behind the quality of its products. This bundle is covered by a**Full 1 Year Manufacturer’s Limited Protection Plan**.
For technical support, warranty claims, or any product-related inquiries, please refer to the contact information provided with your purchase or visit the official Deco Gear website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question