

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Lavor](#) /

› [Lavor PR2657 4-in-1 Modular Wet/Dry/Ash Vacuum Cleaner with Blower, 1200W - Instruction Manual](#)

Lavor PR2657

Lavor PR2657 4-in-1 Modular Wet/Dry/Ash Vacuum Cleaner with Blower

Instruction Manual

1. INTRODUCTION

Thank you for choosing the Lavor PR2657 4-in-1 Modular Vacuum Cleaner. This versatile appliance is designed for efficient cleaning of various materials, including water, dust, and ash, and also features a powerful blower function. With its 1200W motor and 28-liter capacity (2 x 14L containers), it is suitable for a wide range of household and workshop tasks. Please read this manual carefully before operating the appliance to ensure safe and effective use.



Image 1.1: The LAVOR PR2657 4-in-1 Modular Vacuum Cleaner, showcasing its stainless steel body, yellow and black top, and casters.

2. SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions before use.
- Do not leave the appliance unattended when plugged in. Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces unless specifically designed for it (this appliance is designed for wet use, but avoid exposing electrical components to water).
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners.

Do not run appliance over cord. Keep cord away from heated surfaces.

- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not use without filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Store your appliance indoors in a cool, dry area.

3. PACKAGE CONTENTS

Carefully unpack the box and ensure all items are present and undamaged. If any items are missing or damaged, contact your retailer.

- LAVOR PR2657 Vacuum Cleaner Unit
- 1.5 m Plastic Hose with Curved Handle
- 1 m Steel Hose (for ash vacuuming)
- 2 Plastic Extension Tubes
- Floor Nozzle (for dust and water)
- Crevice Tool
- Foam Filter (for wet vacuuming)
- Washable Cartridge Filter (for dry/ash vacuuming)
- Brush Board
- Accessory Holder
- Cable Holder

4. ASSEMBLY AND SETUP

Follow these steps to assemble your LAVOR PR2657 vacuum cleaner.

4.1 Attaching the Casters

1. Turn the main unit upside down.
2. Insert the four casters into the designated slots on the base of the unit until they click securely into place.



Image 4.1: Close-up view of the black casters attached to the base of the vacuum cleaner, providing mobility.

4.2 Filter Installation

The type of filter depends on the cleaning task.

- **For Dry/Ash Vacuuming:** Install the washable cartridge filter. Ensure it is clean and dry before use.
- **For Wet Vacuuming:** Remove the cartridge filter and install the foam filter. Ensure it is properly seated.

4.3 Hose and Accessory Connection

1. Connect the 1.5 m plastic hose to the suction inlet on the front of the vacuum cleaner by pushing it firmly until it locks.
2. Attach the desired extension tubes and nozzle (floor nozzle or crevice tool) to the end of the hose. For ash vacuuming, use the 1 m steel hose with appropriate nozzle.



Image 4.2: Detailed view of the flexible hose connected to the main unit's suction port.

5. OPERATING INSTRUCTIONS

The Lavor PR2657 offers four primary functions: wet vacuuming, dry vacuuming, ash vacuuming, and blowing.

5.1 General Operation

1. Ensure the correct filter is installed for your task.
2. Plug the power cord into a suitable electrical outlet (230V). The 4m cable provides ample reach.
3. Press the power switch located on the top of the unit to turn the vacuum cleaner ON.

5.2 Wet Vacuuming

Use this function to pick up liquids from hard surfaces.

- Install the foam filter. Remove the cartridge filter if present.
- Attach the floor nozzle suitable for liquids.
- Vacuum liquids directly. The vacuum will automatically shut off when the tank is full to prevent overflow.
- Empty the tank immediately after wet vacuuming.



Image 5.1: The vacuum cleaner's floor nozzle effectively collecting spilled water from a tiled floor in a bathroom setting.

5.3 Dry Vacuuming

Ideal for cleaning dust, debris, and general dirt from various surfaces.

- Ensure the washable cartridge filter is installed and the foam filter is removed.
- Attach the appropriate nozzle (floor nozzle for large areas, crevice tool for tight spaces).
- Proceed with vacuuming.



Image 5.2: A person using the LAVOR vacuum cleaner with an extension tube and floor nozzle to clean an outdoor patio area.

5.4 Ash Vacuuming

Designed for safely cleaning cold ashes from fireplaces, stoves, and grills.

- **IMPORTANT: Only vacuum COLD ashes. Hot ashes can cause fire and damage the appliance.**
- Ensure the washable cartridge filter is installed.
- Use the 1 m steel hose for ash collection.
- Vacuum ashes carefully.



Image 5.3: A person using the Lavor vacuum cleaner with its specialized steel hose to remove cold ashes from inside a fireplace.

5.5 Blower Function

The vacuum cleaner can also be used as a blower for clearing leaves or debris.

- Disconnect the hose from the suction inlet.
- Connect the hose to the blower outlet located on the top of the unit.
- Turn on the vacuum cleaner to activate the blower function.



Image 5.4: Detailed view of the blower port, a circular opening on the top section of the vacuum cleaner, where the hose can be attached for blowing functionality.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your appliance.

6.1 Emptying the Tank

Empty the tank after each use, especially after wet vacuuming.

1. Unplug the vacuum cleaner from the power outlet.
2. Release the latches on the sides of the unit and carefully lift off the motor head.
3. Pour out the collected debris or liquid.
4. Clean the inside of the tank with water and mild detergent if necessary, then dry thoroughly.
5. Replace the motor head and secure the latches.

6.2 Filter Cleaning

Clean filters regularly to maintain suction power.

- **Washable Cartridge Filter:** Remove the filter from the motor head. Tap it gently to dislodge dust. For thorough cleaning, rinse under running water. Allow it to air dry completely before re-installing.
- **Foam Filter:** Rinse under running water and allow to air dry completely before re-installing.

6.3 Filter Shaker System

The Lavor PR2657 features a filter shaker system to easily clean the cartridge filter during dry vacuuming.

1. While the vacuum is running (or briefly after turning it off), press the red 'FILTER SHAKER' button located on the top of the unit.
2. This action vibrates the filter, dislodging accumulated dust into the tank.
3. Repeat as needed to maintain optimal suction.



Image 6.1: Close-up of the red button labeled 'FILTER SHAKER' on the yellow and black top of the vacuum cleaner, used for filter cleaning.

7. TROUBLESHOOTING

If you encounter problems with your vacuum cleaner, refer to the following table for common issues and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on	No power supply; Damaged power cord/plug; Faulty switch	Check power outlet; Inspect cord/plug for damage; Contact service center if switch is faulty.
Low suction power	Clogged filter; Full tank; Blocked hose/nozzle	Clean or replace filter; Empty tank; Clear any blockages from hose or nozzle.

Problem	Possible Cause	Solution
Water leaks during wet vacuuming	Foam filter not installed correctly; Tank is overfilled	Ensure foam filter is properly seated; Empty tank before it reaches maximum capacity.
Unusual noise or vibration	Foreign object in impeller; Motor issue	Turn off and unplug, inspect for foreign objects; If problem persists, contact service center.

8. SPECIFICATIONS

Model Number	PR2657
Power	1200 W
Voltage	230 V
Frequency	50 Hz
Capacity	28 Liters (2 x 14 L containers)
Suction Power	18 mbar
Cable Length	4 m
Item Weight	9 kg
Dimensions (L x W x H)	37 x 37 x 60 cm
Filter Type	Washable Cartridge Filter, Foam Filter

9. WARRANTY AND SUPPORT

This Lavor PR2657 vacuum cleaner comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and material faults under normal use. It does not cover damage caused by misuse, neglect, accident, alteration, or unauthorized repair.

For warranty claims, technical support, or to purchase replacement parts, please contact your retailer or the official Lavor service center. Keep your proof of purchase for warranty validation.