



Manuals.plus /

› Geepas /

› Geepas 16-inch Pedestal Fan Instruction Manual

Geepas 2724318929522

Geepas 16-inch Pedestal Fan Instruction Manual

Model: 2724318929522

INTRODUCTION

Thank you for purchasing the Geepas 16-inch Pedestal Fan. This manual provides important information regarding the safe operation, assembly, maintenance, and troubleshooting of your new fan. Please read this manual thoroughly before use and retain it for future reference.



Image: Geepas 16-inch Pedestal Fan, black, with its stand, positioned in a modern living room next to a sofa and a small table.

SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Ensure the power supply voltage matches the rating label on the fan.
- Do not operate the fan with a damaged cord or plug. If damaged, contact qualified service personnel.
- Keep fingers, pencils, or any other objects out of the fan grille when it is operating.
- Unplug the fan from the outlet when not in use, when moving it from one location to another, and before cleaning.
- Do not use the fan in wet locations such as bathrooms or laundry areas.
- Place the fan on a stable, level surface to prevent it from tipping over.
- Do not cover the fan or restrict airflow during operation.

PACKAGE CONTENTS

Verify that all components are present before assembly:

- Fan Motor Unit with Blades and Grilles
- Adjustable Stand Pole
- Round Base
- Mounting Hardware (screws, nuts)
- Instruction Manual

SETUP AND ASSEMBLY

Follow these steps to assemble your Geepas Pedestal Fan:

1. **Attach the Base:** Place the stand pole into the round base and secure it using the provided screws and nuts from underneath the base. Ensure it is stable.
2. **Mount the Motor Unit:** Carefully attach the fan motor unit to the top of the stand pole. Secure it firmly with the designated locking mechanism or screw.
3. **Assemble Grilles and Blades:** Remove the front grille. Attach the fan blades to the motor shaft, ensuring they are properly aligned and secured. Then, reattach the front grille, making sure it is securely fastened to prevent accidental contact with the blades.
4. **Adjust Height:** The fan features an adjustable height pole. Loosen the height adjustment knob on the stand, extend or retract the pole to your desired height, and then tighten the knob securely.



Adjustable Height

Providing comfort and versatility for different settings and preferences.

Image: Close-up view of the adjustable height mechanism on the fan's stand, showing how the inner pole can be raised or lowered.

OPERATING INSTRUCTIONS

Your Geepas Pedestal Fan offers various settings for optimal comfort:

- **Power On/Off:** Plug the fan into a suitable 220-240V AC, 50/60Hz power outlet. Use the power switch on the control panel to turn the fan on or off.
- **Speed Settings:** Select from 3 available speed options (Low, Medium, High) using the speed control buttons or dial on the fan's control panel.
- **Oscillation:** To activate the oscillation feature, press down the oscillation knob located on top of the motor housing. To stop oscillation, pull the knob up. This provides widespread air circulation.



Image: The Geepas Pedestal Fan oscillating, showing the fan head moving from side to side to distribute air.

- **Tilt Adjustment:** The fan head can be tilted vertically to direct airflow precisely where needed. Loosen the tilt adjustment knob, adjust the head angle, and then tighten the knob.



Vertically Tilting Head

Enables directional airflow adjustment, optimizing cooling and circulation for personalized comfort and efficiency.

Image: The Geepas Pedestal Fan head tilted upwards, illustrating its vertical adjustment capability.

- **Timer Function:** The fan is equipped with a 60-minute timer. Turn the timer dial to set the desired operating duration. The fan will automatically turn off once the set time has elapsed.



2 Hours Timer

Convenience of setting a specific operating duration

Image: A hand adjusting the timer dial on the fan's control panel, which is marked with time increments.

MAINTENANCE

Regular cleaning and maintenance will ensure optimal performance and longevity of your fan:

- **Cleaning:** Always unplug the fan before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents. For the fan blades, carefully remove the front grille and wipe the blades with a damp cloth. Ensure all parts are dry before reassembling and operating.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place, preferably in its original packaging, to protect it from dust and damage.

TROUBLESHOOTING

If you encounter issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on	Not plugged in; Power outlet fault; Fan switch off	Ensure plug is fully inserted; Test outlet with another device; Turn fan switch to ON position.
Weak airflow	Fan speed set too low; Grilles are blocked by dust	Increase fan speed; Clean the fan grilles and blades.
Fan makes unusual noise	Loose parts; Fan not on a level surface	Check for loose screws or components and tighten; Place fan on a stable, level surface.
Oscillation not working	Oscillation knob not engaged	Press down the oscillation knob firmly.

SPECIFICATIONS

Feature	Detail
Brand	Geepas
Model Number	2724318929522
Color	Black
Product Dimensions	13D x 57W x 51.8H cm
Power / Wattage	60 Watts
Voltage	220-240 Volts (AC)
Material	ABS (Acrylonitrile Butadiene Styrene)
Number of Speeds	3
Special Features	Oscillating, Adjustable Height, Tilt-back Head, 60-minute Timer
Item Weight	3.86 Kilograms
Electric Fan Design	Pedestal Fan
Power Source	Corded Electric
Recommended Uses	Cooling
Mounting Type	Freestanding

WARRANTY

This Geepas Pedestal Fan comes with a **2-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects and does not cover damage caused by misuse, accident, unauthorized modification, or normal wear and tear.

SUPPORT

For technical assistance, spare parts, or warranty inquiries, please contact Geepas customer service. Refer to the Geepas

official website or your purchase documentation for contact details specific to your region.