

[Manuals.plus](#) /

› [ICON](#) /

› ICON IK1607ER 16-Inch Stand Fan with Remote Control User Manual

ICON IK1607ER

ICON IK1607ER 16-Inch Stand Fan User Manual

Model: IK1607ER | Brand: ICON

1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using this fan. Keep this manual for future reference.

- Always unplug the fan before cleaning or performing any maintenance.
- Do not use the fan near water or in damp environments.
- Ensure the power cord is not damaged. If damaged, it must be replaced by the manufacturer or a qualified service agent.
- Keep fingers and other objects away from the fan blades and grille when the fan is operating.
- Do not operate the fan if it has been dropped or damaged.
- Place the fan on a stable, level surface to prevent it from tipping over.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2. PACKAGE CONTENTS

Verify that all components are present in the package:

- Fan Head Assembly (Motor, Blades, Grilles)
- Adjustable Stand Pole
- Round Base
- Remote Control
- Power Cord (integrated)
- User Manual (this document)







Image 1: Complete ICON IK1607ER 16-inch stand fan assembly.

3. ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your stand fan:

1. **Attach the Base:** Place the adjustable stand pole into the round base. Secure it firmly using the provided screw or locking mechanism from underneath the base.
2. **Mount the Fan Head:** Carefully attach the fan head assembly onto the top of the stand pole. Ensure it clicks into place or is secured with the designated fastener.
3. **Adjust Height:** Loosen the height adjustment knob on the stand pole, extend the pole to your desired height, and then tighten the knob securely.
4. **Connect Power:** Plug the power cord into a suitable electrical outlet.



Image 2: Detail of the fan's control panel and adjustable stand mechanism.

4. OPERATING INSTRUCTIONS

Your ICON IK1607ER fan can be operated using the control panel on the fan body or the included remote control.

4.1 Control Panel

- **Power Button:** Press to turn the fan ON or OFF.
- **Speed Button:** Press repeatedly to cycle through the 3 speed settings (Low, Medium, High).
- **Oscillation Button:** Press to start or stop the fan's oscillation (side-to-side movement).
- **Timer Button:** Press to set the optional 2-hour timer. The fan will automatically turn off after the set time.

4.2 Remote Control

The remote control duplicates the functions of the control panel for convenient operation from a distance.

- Ensure batteries are correctly inserted into the remote control.
- Point the remote control towards the fan's receiver when operating.

5. MAINTENANCE

Regular cleaning will help maintain the fan's performance and extend its lifespan.

- **Cleaning:**
 - Always unplug the fan before cleaning.
 - Use a soft, damp cloth to wipe the exterior surfaces of the fan.
 - Do not use abrasive cleaners or solvents.
 - To clean the fan blades, carefully remove the front grille (refer to assembly steps in reverse if needed) and wipe the blades with a damp cloth. Ensure all parts are dry before reassembling and operating.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place, preferably in its original packaging to protect it from dust.

6. TROUBLESHOOTING

If you encounter issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	Not plugged in; power outlet not working; power button not pressed.	Ensure fan is plugged in; check power outlet with another device; press the power button.
Weak airflow.	Low speed setting; dirty blades/grille.	Increase speed setting; clean fan blades and grilles.
Fan is noisy.	Loose parts; fan not on a level surface.	Check for loose screws or components; place fan on a stable, level surface.
Remote control not working.	Dead batteries; remote not pointed at receiver; obstruction.	Replace batteries; ensure clear line of sight to fan; remove obstructions.

7. SPECIFICATIONS

Brand	ICON
Model Number	IK1607ER
Type	Stand Fan (Pedestal Fan)
Color	Black
Power Source	Corded Electric
Number of Speeds	3
Power Consumption	75 Watt

Number of Blades	5
Control Type	Remote Control
Installation Type	Freestanding
Recommended Use	Cooling, Air Circulation (Indoor)
Material	Plastic
Included Components	Remote Control, Power Cord

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact ICON customer service. Keep your purchase receipt as proof of purchase.

Note: Specific warranty terms may vary by region.