

Wster ws-1806

WSTER WS-1806 Bluetooth Speaker User Manual

Model: WS-1806

INTRODUCTION

Thank you for purchasing the WSTER WS-1806 Bluetooth Speaker. This manual provides essential information for the safe and efficient operation of your device. Please read this manual thoroughly before using the speaker and retain it for future reference.

The WS-1806 is a portable cylindrical Bluetooth speaker designed for versatile audio playback, featuring both wired and wireless connectivity options, subwoofer capabilities, and integrated lighting effects.

SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the speaker to strong impacts.
- Do not disassemble, repair, or modify the device yourself. Refer all servicing to qualified personnel.
- Keep the speaker away from water and other liquids.
- Use only the specified charging cable and power adapter.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.

PACKAGE CONTENTS

Please check the package for the following items:

- WSTER WS-1806 Bluetooth Speaker (1 unit)
- USB Charging Cable (1 unit)
- Audio Cable (AUX) (1 unit)
- User Manual (this document)

PRODUCT OVERVIEW



Figure 1: Front view of the WSTER WS-1806 Bluetooth Speaker.

This image displays the WSTER WS-1806 Bluetooth speaker, which is cylindrical and predominantly red with black accents. The front features a mesh grille behind which colorful LED lights are visible, illuminating in various hues. At the base of the speaker, there are several control buttons, including a microphone input, an LED mode button, play/pause, call answer/end, and volume/track control buttons. The speaker rests on a clear, circular base.

Controls and Ports

- 1. MIC Input:** For connecting an external microphone.
- 2. M/LED Button:** Press to switch between modes (Bluetooth, FM, AUX, USB, TF Card). Long press to toggle LED lights on/off.
- 3. Play/Pause Button:** Press to play or pause audio. In FM mode, long press to auto-scan stations.
- 4. Call Button:** Press to answer or end a call. Long press to reject a call. Double press to redial the last number.
- 5. Previous Track / Volume Down (K/V-):** Short press for previous track. Long press to decrease volume.
- 6. Next Track / Volume Up (M/V+):** Short press for next track. Long press to increase volume.
- 7. USB Port:** For USB flash drive playback.
- 8. TF Card Slot:** For TF (MicroSD) card playback.
- 9. AUX Input:** For wired audio connection via 3.5mm audio cable.
- 10. DC 5V Charging Port:** For charging the speaker.

SETUP

Charging the Speaker

1. Connect the small end of the USB charging cable to the DC 5V charging port on the speaker.
2. Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate during charging and turn off when fully charged.

4. Allow approximately 2-3 hours for a full charge.

Powering On/Off

- To power on, locate the power switch (usually at the back or bottom) and slide it to the "ON" position. A voice prompt will indicate the speaker is on.
- To power off, slide the power switch to the "OFF" position.

OPERATING INSTRUCTIONS

Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode. If not, press the **M/LED** button to cycle modes until you hear the Bluetooth pairing prompt.
2. Enable Bluetooth on your mobile device (smartphone, tablet, computer).
3. Search for available Bluetooth devices. The speaker will appear as "**WS-1806**" or "WSTER".
4. Select "**WS-1806**" to pair. Once successfully paired, you will hear a confirmation sound.
5. You can now play audio from your device through the speaker.

Audio Playback

- **Play/Pause:** Press the **Play/Pause** button.
- **Next Track:** Short press the **M/V+** button.
- **Previous Track:** Short press the **K/V-** button.
- **Volume Up:** Long press the **M/V+** button.
- **Volume Down:** Long press the **K/V-** button.

Hands-Free Calling

- **Answer Call:** Press the **Call** button once.
- **End Call:** Press the **Call** button once during a call.
- **Reject Call:** Long press the **Call** button.
- **Redial Last Number:** Double press the **Call** button.

Mode Switching

Press the **M/LED** button to cycle through available modes:

- Bluetooth Mode
- FM Radio Mode (if supported by model)
- AUX Input Mode (when 3.5mm cable is connected)
- USB Playback Mode (when USB drive is inserted)
- TF Card Playback Mode (when TF card is inserted)

LED Light Control

Long press the **M/LED** button to toggle the colorful LED lights on or off.

MAINTENANCE

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the speaker's exterior. Do not use liquid cleaners, aerosols, or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is low or dead.	Charge the speaker fully.
No sound from speaker.	Volume is too low. Device not paired. Incorrect mode.	Increase speaker and device volume. Re-pair Bluetooth. Ensure correct mode (Bluetooth, AUX, etc.).
Bluetooth pairing fails.	Speaker is too far from device. Speaker not in pairing mode. Interference.	Move speaker closer to device. Ensure speaker is in Bluetooth pairing mode. Turn off other Bluetooth devices.
Sound distortion.	Volume too high. Low battery.	Decrease volume. Charge the speaker.

SPECIFICATIONS

Model Number	WS-1806
Brand	Wster
Connectivity Technology	Bluetooth, Wired/Wireless
Speaker Type	Subwoofers
Audio Output Mode	Stereo
Speaker Maximum Output Power	20 Watts
Product Weight	250g
Shape	Cylinder
Mounting Type	Tabletop

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your purchase or contact the retailer where the product was acquired. Keep your proof of purchase for any warranty claims.

For further assistance, you may also visit the official Wster website or contact their customer service department.

© 2024 Wster. All rights reserved.

This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How is it possible for the Wster WS-1806 speaker to make a phone call, and does it contain a SIM card?

The Wster WS-1806 does not contain a SIM card. It is a Bluetooth speaker that functions as a hands-free device for a connected smartphone.The reason the device was able to place or receive a...

[Read full answer](#)