

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Mabe](#) /

> [Mabe Aqua Saver Green 20 kg Automatic Washing Machine LMA70214VBAB0 User Manual](#)

Mabe LMA70214VBAB0

Mabe Aqua Saver Green 20 kg Automatic Washing Machine LMA70214VBAB0 User Manual

Model: LMA70214VBAB0

1. INTRODUCTION

Thank you for choosing the Mabe Aqua Saver Green 20 kg Automatic Washing Machine, model LMA70214VBAB0. This manual provides essential information for the safe and efficient operation, installation, maintenance, and troubleshooting of your new appliance. Please read all instructions carefully before using the washing machine to ensure optimal performance and longevity.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using this appliance to reduce the risk of fire, electric shock, or injury to persons.

- Read all instructions before using the washing machine.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they emit vapors that could ignite or explode.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Do not reach into the appliance if the tub or agitator is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in this manual or in published user-repair instructions that you understand and have the skills to carry out.
- Always disconnect the appliance from the power supply before attempting any service.
- Ensure proper grounding of the appliance.

3. PRODUCT OVERVIEW

The Mabe Aqua Saver Green washing machine is designed for efficient and thorough cleaning with a 20 kg capacity. It features a top-load design, an advanced agitator for garment care, and various wash cycles including a sanitization option.

Figure 3.1: Front view of the Mabe Aqua Saver Green 20 kg Automatic Washing Machine LMA70214VBAB0. This image displays the overall design of the washing machine, including the control panel and the top-loading lid.



Figure 3.2: Control panel of the Mabe Aqua Saver Green washing machine. This image highlights the various dials and buttons for cycle selection, temperature, and load level.

Key Features:

- **Aqua Saver Green Technology:** Designed to optimize water usage, contributing to water savings.
- **New Agitator Design:** Provides maximum cleaning performance while ensuring gentle care for garments.
- **20 kg Capacity:** Large capacity suitable for washing bulky items and large loads.
- **Sanitization Feature:** Offers a specialized cycle for enhanced hygiene.
- **Express Wash:** A quick wash cycle that completes laundry in approximately 20 minutes.
- **End of Cycle Signal:** Notifies you when the wash cycle is complete.

4. SETUP

4.1 Unpacking

Carefully remove all packaging materials, including the base packaging. Inspect the washing machine for any damage. Keep packaging materials until you are satisfied with the product.

4.2 Location Requirements

Choose a location that is:

- A level, solid floor capable of supporting the machine's weight (51.6 kg dry, plus water and laundry).
- Away from direct sunlight or heat sources.
- Equipped with hot and cold water faucets within 1 meter of the machine.
- Near a suitable drain for the discharge hose.
- Within reach of a grounded 120 Volt electrical outlet.

4.3 Connecting Water Hoses

Connect the provided hot and cold water inlet hoses to the corresponding faucets and to the inlet valves on the back of the washing machine. Ensure connections are tight to prevent leaks. Use new hoses; do not reuse old ones.

4.4 Drain Hose Installation

Securely place the drain hose into a standpipe or over the edge of a utility sink. Ensure the hose is properly secured to prevent it from dislodging during the drain cycle, which could cause flooding.

4.5 Leveling the Machine

Use a level to ensure the machine is perfectly balanced. Adjust the leveling feet at the bottom of the machine as needed. A properly leveled machine reduces vibration and noise during operation.

4.6 Power Connection

Plug the washing machine's power cord into a grounded 120 Volt electrical outlet. Do not use extension cords or adapters.

5. OPERATING INSTRUCTIONS

5.1 Loading Laundry

Open the lid and load clothes loosely into the tub. Do not overload the machine; ensure there is enough space for clothes to move freely for effective cleaning. For best results, mix large and small items.

5.2 Adding Detergent and Softener

Add the recommended amount of high-efficiency (HE) detergent to the dispenser. If using fabric softener, add it to the designated softener dispenser. Do not overfill.

5.3 Selecting a Wash Cycle

Turn the cycle selector knob to choose the appropriate wash cycle for your laundry type. Available cycles include:

- **Normal:** For everyday cottons and mixed fabrics.
- **Heavy Duty:** For heavily soiled, durable items.
- **Delicate:** For fragile items requiring gentle care.
- **Quick Wash (Express Wash):** For lightly soiled items that need a fast wash (approx. 20 minutes).
- **Sanitization:** For items requiring a higher level of hygiene.

5.4 Selecting Water Temperature

Select the desired water temperature (Hot, Warm, Cold) based on your fabric care labels and the chosen wash cycle.

5.5 Selecting Load Size / Water Level

The machine may automatically detect the load size. If manual selection is available, choose the appropriate water level to match your laundry load for optimal water and energy efficiency (Aqua Saver Green technology).

5.6 Starting the Wash

Close the lid and press the Start/Pause button to begin the wash cycle. The machine will fill with water, agitate, drain, rinse, and spin according to the selected cycle. An end of cycle signal will sound when the wash is complete.

6. MAINTENANCE

Regular maintenance ensures the longevity and efficient operation of your washing machine.

6.1 Cleaning the Dispenser

Periodically remove and clean the detergent and fabric softener dispensers to prevent residue buildup. Rinse with warm water and a soft brush.

6.2 Cleaning the Tub

Run a 'Tub Clean' or 'Sanitize' cycle (if available) monthly, or run an empty cycle with hot water and a washing machine cleaner or a cup of white vinegar to remove detergent residue and odors.

6.3 Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

6.4 Water Inlet Filters

Check the screens in the water inlet valves periodically for clogs. Turn off the water supply, disconnect the hoses, and clean the screens with a brush if necessary.

7. TROUBLESHOOTING

Before contacting service, review these common issues and solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Lid not closed; Circuit breaker tripped.	Ensure power cord is securely plugged in; Close lid completely; Reset circuit breaker.
No water fill	Water faucets off; Water inlet hoses kinked; Inlet screens clogged.	Turn on water faucets; Straighten hoses; Clean inlet screens.
Water not draining	Drain hose kinked or clogged; Drain pump filter clogged.	Straighten or clear drain hose; Refer to manual for drain pump filter cleaning (if applicable).
Excessive vibration/noise	Machine not level; Load unbalanced; Shipping bolts not removed.	Level the machine; Redistribute laundry evenly; Ensure all shipping bolts are removed during installation.
Poor cleaning results	Overloading; Incorrect detergent amount; Wrong cycle selection.	Reduce load size; Use correct amount of HE detergent; Select appropriate wash cycle.

8. SPECIFICATIONS

Technical specifications for the Mabe Aqua Saver Green 20 kg Automatic Washing Machine LMA70214VBAB0.



Figure 8.1: Mabe Aqua Saver Green washing machine with key dimensions. This image illustrates the height, width, and depth of the appliance for installation planning.

Feature	Specification
Model Number	LMA70214VBAB0
Brand	Mabe
Color	White

Feature	Specification
Capacity	20 Kilograms
Dimensions (W x D x H)	67.8 x 68 x 111.63 cm
Weight	51.6 Kilograms
Voltage	120 Volts
Material (Tub)	Stainless Steel
Access Type	Top Load
Special Features	Aqua Saver Green Technology, Sanitization, Express Wash, End of Cycle Signal
Cycle Options	Normal, Heavy Duty, Delicate, Quick Wash

9. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or contact Mabe customer service. Keep your purchase receipt as proof of purchase for warranty claims.

Customer Support:

For installation, repair, maintenance, or any technical assistance, please contact Mabe Service:

- **Telephone:** 461 471 7000
- **WhatsApp:** 55 41635939

Mabe offers official service for your products, including warranty extension policies for washing and drying appliances. These policies typically include no additional charges, national coverage, unlimited revisions, and new, original spare parts.