

UpStart Components 14" Single Rivet Chainsaw Guide Bar

UpStart Components Replacement 14" Single Rivet Chainsaw Guide Bar User Manual

For Yardworks 11A Electric Chainsaw

1. INTRODUCTION

This manual provides instructions for the installation, operation, and maintenance of the UpStart Components Replacement 14" Single Rivet Chainsaw Guide Bar. This guide bar is designed for compatibility with the Yardworks 11A Electric Chainsaw. Please read these instructions carefully before use to ensure proper function and safety.

2. PRODUCT OVERVIEW

The UpStart Components Replacement 14" Single Rivet Chainsaw Guide Bar is engineered to provide reliable performance as a direct replacement part. It features a 14-inch length, 3/8-inch pitch, 0.050-inch gauge, 52 drive links, and a 7-sprocket nose tooth. This design aims to offer improved control and reduced kickback, contributing to safer chainsaw operation. The guide bar is constructed from durable, lightweight materials to ensure high performance with minimal vibration, effectively extending the lifespan of your chainsaw by replacing damaged guide rails.



Image 1: The UpStart Components 14" Single Rivet Chainsaw Guide Bar, showing its full length and design.

Key Features:

- Replacement for Yardworks 11A Electric Chainsaw Guide Bar.
- Designed for better control and reduced kickback, enhancing safety.

- Constructed from durable, lightweight materials for high performance and minimal vibration.
- Easily replaces damaged guide rails to extend the life of your chainsaw.

3. SETUP AND INSTALLATION

Proper installation of the guide bar is crucial for safe and effective chainsaw operation. Always refer to your chainsaw's original manufacturer manual for specific installation procedures and safety warnings.

Installation Steps:

1. **Safety First:** Ensure the chainsaw is turned off, unplugged from its power source (for electric models), or has its battery removed (for cordless models) before beginning any installation or maintenance. Engage the chain brake.
2. **Remove Old Bar and Chain:** Loosen the bar nuts and remove the clutch cover. Carefully remove the old guide bar and chain. Dispose of worn or damaged parts responsibly.
3. **Clean Mounting Area:** Clean any sawdust, debris, or oil residue from the chainsaw's mounting area, especially around the oil port and bar groove.
4. **Install New Guide Bar:** Place the new UpStart Components guide bar onto the chainsaw's mounting studs. Ensure the guide bar's slot aligns correctly with the studs and the chain tensioning pin.
5. **Install Chain:** Loop the chainsaw chain around the drive sprocket and into the guide bar groove, ensuring the cutting edges face the correct direction.
6. **Replace Clutch Cover:** Reinstall the clutch cover and hand-tighten the bar nuts.
7. **Adjust Chain Tension:** Adjust the chain tension according to your chainsaw manufacturer's specifications. The chain should be snug against the bottom of the guide bar but still able to be pulled freely by hand. A common test is to lift the chain in the middle of the bar; it should lift slightly but not expose the drive links.
8. **Tighten Bar Nuts:** Once tension is set, fully tighten the bar nuts securely.



Image 2: Close-up view of the guide bar's mounting holes, which align with the chainsaw's studs.

4. OPERATING GUIDELINES

The guide bar is an integral part of the chainsaw's cutting system. While this guide bar is designed for better control and reduced kickback, safe operation depends on the user's adherence to proper chainsaw operating procedures.

- Always ensure the guide bar is correctly installed and the chain is properly tensioned before each use.
- Regularly check the oil level in your chainsaw's bar and chain oil reservoir to ensure adequate lubrication of the guide bar and chain.
- Avoid striking the guide bar against hard objects, as this can cause damage and affect cutting performance.
- Always follow the operating instructions and safety guidelines provided by your chainsaw's manufacturer.

5. MAINTENANCE

Regular maintenance of your guide bar will extend its lifespan and ensure optimal cutting performance.

Maintenance Tips:

- **Clean the Guide Bar Groove:** After each use, remove the guide bar and clean the groove to remove accumulated sawdust and debris. This ensures proper chain movement and lubrication.
- **Check for Burrs:** Inspect the guide bar rails for burrs, especially along the top and bottom edges. Use a flat file to carefully remove any burrs, filing from the outside edge towards the center.
- **Inspect Sprocket Nose:** If your guide bar has a sprocket nose, ensure it rotates freely. Lubricate the sprocket nose bearing if recommended by your chainsaw's manual.
- **Check for Wear:** Regularly inspect the guide bar for signs of uneven wear, bending, or cracking. Replace the guide bar if significant wear or damage is observed. Uneven wear can lead to poor cutting and increased chain wear.
- **Flip the Bar:** To promote even wear, it is recommended to flip the guide bar periodically (e.g., every time you sharpen the chain or replace it).



Image 3: Close-up of the guide bar's sprocket nose, which should be inspected for free rotation and wear.

6. TROUBLESHOOTING

This section addresses common issues related to the guide bar.

Problem	Possible Cause	Solution
Chain frequently comes off the guide bar	Incorrect chain tension; Worn guide bar; Improperly installed guide bar	Adjust chain tension; Inspect and replace worn guide bar; Reinstall guide bar correctly
Uneven cutting or chain wear	Uneven guide bar wear; Incorrect chain tension; Dull chain	Flip or replace guide bar; Adjust chain tension; Sharpen or replace chain
Guide bar overheating	Lack of lubrication; Incorrect chain tension; Clogged oil port	Check bar oil level and oiler function; Adjust chain tension; Clean oil port and guide bar groove

7. SPECIFICATIONS

- **Product Type:** Replacement Chainsaw Guide Bar
- **Brand:** UpStart Components
- **Length:** 14 inches
- **Pitch:** 3/8 inch
- **Gauge:** 0.050 inch
- **Drive Links:** 52
- **Sprocket Nose Tooth Count:** 7
- **Compatibility:** Yardworks 11A Electric Chainsaw

8. WARRANTY AND SUPPORT

This UpStart Components replacement part is covered by warranties offered solely by UpStart Components. It is important to note that this product is not an Original Equipment Manufacturer (OEM) product and is not affiliated with any brands other than UpStart Components. Therefore, it is not covered under any warranties offered by the original manufacturers of the chainsaw it is compatible with.

For any questions regarding warranty claims, product support, or technical assistance, please contact UpStart Components directly through their official support channels. Please have your product information and purchase details available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question