

[Manuals.plus](#) /

> [JAKKS Pacific](#) /

> JAKKS Pacific Disney Princess Rapunzel Doll (Model 84632) Instruction Manual

JAKKS Pacific 84632

JAKKS Pacific Disney Princess Rapunzel Doll

INSTRUCTION MANUAL

Model: 84632

[Introduction](#) [Setup](#) [Operating](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#)
[Warranty & Support](#)

1. Introduction

Thank you for purchasing the JAKKS Pacific Disney Princess Rapunzel Doll. This 7.5 cm figurine is part of a collectible series of Disney characters, designed for imaginative play and display.

Safety Information

WARNING: Not suitable for children under 3 years due to small parts. Choking Hazard.

What's in the Box

- 1 x Disney Princess Rapunzel Doll





Figure 1.1: Rapunzel doll in its packaging.

2. Setup

Unboxing and Initial Inspection

1. Carefully remove the doll from its packaging. Retain packaging for future reference if desired.
2. Inspect the doll for any visible damage or manufacturing defects.
3. Ensure all small parts, if any, are securely attached.





Figure 2.1: Rapunzel doll out of its packaging, ready for play.

3. Operating

Playing with Your Rapunzel Doll

This Rapunzel doll is designed for imaginative play. The doll features a mini 7.5 cm format and is decorated with great detail, including her classic dress and a golden crown.

- The doll's legs may be slightly posable, allowing for minor adjustments in stance.
- Encourage creative storytelling and role-playing with Rapunzel and other Disney Princess figures.
- No batteries or assembly are required for operation.



Figure 3.1: Rapunzel doll in a typical play pose.

4. Maintenance

Cleaning Instructions

- To clean the doll, gently wipe with a soft, damp cloth.
- Avoid using harsh chemicals or abrasive cleaners, as these may damage the doll's finish or paint.
- Do not submerge the doll in water.

Storage

Store the doll in a clean, dry place away from direct sunlight and extreme temperatures to prevent fading or material degradation.

5. Troubleshooting

This doll is a simple toy with minimal moving parts. Most issues can be resolved with basic care.

Problem	Possible Cause	Solution
Doll does not stand upright	Uneven surface; slight imbalance in pose.	Place on a flat, stable surface. Adjust leg position slightly for balance.
Minor scuffs or marks on doll	Normal wear and tear from play.	Gently wipe with a damp cloth. For stubborn marks, a very mild soap solution can be used sparingly, then wipe clean with water.

6. Specifications

Feature	Detail
Brand	JAKKS Pacific
Model Number	84632
Character	Rapunzel
Toy Figure Type	Doll
Size	7.5 cm (approximately 3 inches)
Material Type	Plastic

Feature	Detail
Age Range Description	3+ years
Assembly Required	No
Batteries Required	No
Color	Multicoloured

7. Warranty & Support

Warranty Information

Specific warranty details for JAKKS Pacific products are typically provided by the retailer at the time of purchase or can be found on the official JAKKS Pacific website. Please refer to your purchase documentation or the manufacturer's official resources for the most accurate and up-to-date warranty information.

Customer Support

For further assistance, questions, or to report any issues with your Disney Princess Rapunzel Doll, please contact JAKKS Pacific customer service. You can typically find contact information, including phone numbers and email addresses, on the official JAKKS Pacific website:

[Visit JAKKS Pacific Official Website](#)