

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [PolarPro](#) /

› [PolarPro DJI Osmo Pocket WiFi Adapter for Tripod User Manual](#)

PolarPro PP-PCKT-WFI-TRP

PolarPro DJI Osmo Pocket WiFi Adapter for Tripod User Manual

Model: PP-PCKT-WFI-TRP

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your PolarPro DJI Osmo Pocket WiFi Adapter for Tripod. This adapter is designed to enhance the functionality of your DJI Osmo Pocket WiFi Base by providing secure mounting options for tripods and other accessories, while maintaining access to essential ports.

SETUP INSTRUCTIONS

The PolarPro WiFi Adapter for Tripod is designed for easy and secure attachment to the DJI Osmo Pocket WiFi Base. Ensure you have the DJI Osmo Pocket WiFi Base (sold separately) before proceeding.

- 1. Prepare the DJI Osmo Pocket WiFi Base:** Ensure your DJI Osmo Pocket WiFi Base is clean and free of debris.
- 2. Attach the PolarPro Adapter:** Align the PolarPro WiFi Adapter for Tripod with the DJI Osmo Pocket WiFi Base. The adapter features a pressure-fit design. Gently slide the WiFi Base into the adapter until it is securely seated. The design ensures a snug fit without interfering with the WiFi signal.
- 3. Verify Secure Connection:** Once attached, gently tug on the adapter to ensure it is firmly connected to the WiFi Base. It should not wobble or detach easily.
- 4. Mount to a Tripod (Optional):**
 - **Using the 1/4-20 Thread:** Locate the 1/4-20 threaded hole on the bottom of the PolarPro adapter. Screw the adapter onto any standard tripod or monopod with a 1/4-20 screw.
 - **Using the Arca-Swiss Plate:** The adapter also features an integrated Arca-Swiss compatible plate. Slide the adapter directly into an Arca-Swiss compatible quick release clamp on your tripod head until it locks into place.
- 5. Access USB-C Port:** The adapter is designed with a cutout to allow full access to the USB-C port on the DJI Osmo Pocket WiFi Base, enabling charging or external power supply during use.



Image: The PolarPro DJI Osmo Pocket WiFi Adapter for Tripod, showing its pressure-fit design and mounting options. This adapter provides a stable base for the DJI Osmo Pocket WiFi module, allowing it to be mounted on tripods or other accessories.

OPERATING INSTRUCTIONS

Once the PolarPro WiFi Adapter is securely attached to your DJI Osmo Pocket WiFi Base and mounted, you can operate your DJI Osmo Pocket as usual, benefiting from the added stability and positioning flexibility.

- **Wireless Control:** The adapter does not interfere with the WiFi signal of the DJI Osmo Pocket WiFi Base, allowing seamless wireless control of your Osmo Pocket via your smartphone or tablet.
- **Extended Power:** Utilize the accessible USB-C port to connect an external power bank for extended recording sessions without needing to remove the adapter.
- **Stable Footage:** The secure tripod mounting options provided by the adapter enable stable, hands-free recording, ideal for time-lapses, static shots, or remote monitoring.

MAINTENANCE

To ensure the longevity and optimal performance of your PolarPro DJI Osmo Pocket WiFi Adapter for Tripod, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the adapter with a soft, dry, lint-free cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure the adapter is completely dry before reattaching the WiFi Base. Avoid harsh chemicals or abrasive cleaners.
- **Storage:** Store the adapter in a cool, dry place away from direct sunlight and extreme temperatures. If not in use for extended periods, detach it from the DJI Osmo Pocket WiFi Base.
- **Inspection:** Periodically inspect the adapter for any signs of wear, cracks, or damage. Ensure the $\frac{1}{4}$ -20 thread and Arca-Swiss grooves are clear of debris.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Adapter feels loose on WiFi Base.	Improper seating or debris.	Remove the adapter, clean both the adapter and the WiFi Base, then re-attach ensuring a firm pressure fit.
Cannot screw adapter onto tripod.	Thread obstruction or misalignment.	Check the 1/4-20 thread for debris. Ensure the tripod screw is correctly aligned before turning. Do not force.
USB-C port not accessible or charging.	WiFi Base not fully seated or cable issue.	Ensure the WiFi Base is fully inserted into the adapter. Try a different USB-C cable to rule out cable malfunction.

SPECIFICATIONS

- **Model Number:** PP-PCKT-WFI-TRP
- **Product Dimensions:** 0.79 x 0.79 x 0.51 inches (2.0 x 2.0 x 1.3 cm)
- **Item Weight:** 0.635 ounces (18 grams)
- **Material:** Durable Polymer (designed not to interfere with WiFi signal)
- **Mounting Options:** 1/4-20 Thread, Integrated Arca-Swiss Plate
- **Compatibility:** DJI Osmo Pocket WiFi Base
- **Features:** USB-C Port Access, Pressure Fit Design
- **Color:** Black

WARRANTY AND SUPPORT

PolarPro products are designed for durability and performance. For information regarding warranty coverage, product registration, or technical support, please visit the official PolarPro website or contact their customer service directly.

PolarPro Official Website: www.polarprofilters.com

Please retain your proof of purchase for warranty claims.