

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Jocel](#) /

> [Jocel JPK4GV200143 Oven and Hob Pack Instruction Manual](#)

Jocel JPK4GV200143

Jocel JPK4GV200143 Oven and Hob Pack Instruction Manual

Comprehensive guide for safe and efficient use of your Jocel built-in oven and gas hob.

[Safety Information](#) [Setup &](#)

[Installation](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. IMPORTANT SAFETY INFORMATION

Please read these instructions carefully before installing or using your appliance. Keep this manual for future reference. Incorrect installation, adjustment, alteration, service, or maintenance can cause injury or property damage. Refer to this manual. For assistance or additional information, consult a qualified installer, service agency, or the gas supplier.

- **Gas Safety:** Ensure proper ventilation. Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- **Electrical Safety:** This appliance must be properly grounded. Do not operate the appliance with a damaged power cord or plug.
- **Children Safety:** Keep children away from the appliance during operation. The surfaces can become very hot.
- **Hot Surfaces:** The oven and hob surfaces become hot during use. Use oven mitts and avoid direct contact.
- **Professional Installation:** Installation and service must be performed by a qualified installer, service agency, or the gas supplier.

2. SETUP AND INSTALLATION

This section provides guidelines for the installation of your Jocel JPK4GV200143 oven and hob pack. It is crucial that installation is carried out by a qualified professional in accordance with local regulations and safety standards.

2.1 Unpacking

Carefully remove all packaging materials. Inspect the appliance for any damage incurred during transit. Report any damage immediately to your supplier.

2.2 Installation Dimensions

Ensure the cabinet opening dimensions are suitable for the appliance. The oven dimensions are approximately 595mm (Width) x 595mm (Height) x 530mm (Depth). The hob dimensions are approximately 600mm (Width) x 40mm (Height) x 510mm (Depth).



Figure 1: Image showing the Jocel JPK4GV200143 oven and hob pack. This image illustrates the combined unit, providing a visual reference for the product's appearance and general dimensions for installation planning.

2.3 Electrical Connection (Oven)

The oven requires a 220-240V, 50Hz electrical supply. The total power consumption is 2900W. A dedicated circuit with appropriate fusing is recommended. The appliance must be properly grounded.

2.4 Gas Connection (Hob)

The hob is designed for use with GN(G20)/20mbar (Natural Gas) or GPL(G30/31)28-30/37mbar (LPG). Ensure the gas supply type matches the appliance configuration. A qualified gas technician must perform the connection, checking for leaks and ensuring proper ventilation.

3. OPERATION

3.1 Gas Hob Operation

Your hob features 4 gas burners with automatic ignition and thermocouple safety devices.

1. Burner Types:

- 1 x Triple Burner: 3.5 KW
- 2 x Semi-rapid Burners: 1.75 KW each
- 1 x Auxiliary Burner: 1.0 KW

2. **Ignition:** Push and turn the corresponding control knob counter-clockwise to the maximum flame position. The automatic ignition will spark. Hold the knob for a few seconds after ignition to allow the thermocouple to activate. Release the knob; if the flame extinguishes, repeat the process.
3. **Flame Adjustment:** Once ignited, turn the knob to adjust the flame size from maximum to minimum.
4. **Turning Off:** Turn the knob clockwise to the "off" position.

3.2 Electric Oven Operation

The 58L electric oven offers various functions for cooking.

1. **Temperature Control:** Use the thermostat knob to select the desired temperature between 50°C and 250°C.
2. **Timer:** The mechanical timer can be set from 0 to 120 minutes. Turn the timer knob to the desired cooking duration. The oven will switch off automatically when the timer reaches zero.
3. **Functions:** The oven includes a cooling fan and an interior light (25W). Specific function selection (e.g., top heat, bottom heat, fan-assisted) is typically controlled by a separate function selector knob (refer to appliance markings).
4. **Accessories:** The oven comes with 1 baking tray and 1 wire grid. Position them on the appropriate runners inside the oven cavity.

4. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your appliance. Always ensure the appliance is cool and disconnected from the power supply before cleaning.

4.1 Gas Hob Cleaning

- **Glass Surface:** Clean the tempered glass surface with a soft cloth and a non-abrasive cleaner specifically designed for glass hobs. Avoid harsh chemicals or abrasive pads.
- **Cast Iron Grates and Burner Caps:** These can be removed for cleaning. Wash them with warm soapy water, rinse thoroughly, and dry completely before replacing.
- **Burner Heads:** Ensure the burner ports are clear of food debris. Use a small brush if necessary.

4.2 Electric Oven Cleaning

- **Interior Cavity:** The oven features an enamel interior. Clean with warm soapy water and a soft cloth. For stubborn stains, use an oven cleaner suitable for enamel surfaces, following the product instructions carefully.
- **Removable Door:** The oven door is designed to be removable for easier cleaning. Consult the installation section or a service professional for instructions on safe removal and reattachment. The double glass panes can be separated for cleaning between them.
- **Exterior:** Clean the exterior glass and control panel with a soft, damp cloth.

5. TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their potential solutions.

Problem	Possible Cause	Solution
Gas burner does not ignite.	No gas supply, ignition electrode dirty, burner cap not correctly placed, thermocouple not activated.	Check gas supply. Clean ignition electrode. Ensure burner cap is seated correctly. Hold knob longer after ignition.
Oven does not heat.	No electrical supply, thermostat not set, timer not set.	Check power connection and circuit breaker. Set thermostat to desired temperature. Ensure timer is set for a duration or to manual mode.
Oven light not working.	Bulb faulty.	Replace the oven light bulb (ensure oven is cool and disconnected from power).
Uneven cooking in oven.	Incorrect rack position, overloaded oven, door not sealing properly.	Adjust rack position. Avoid overloading. Check door seal for damage.

If the problem persists after attempting these solutions, please contact a qualified service technician.

6. TECHNICAL SPECIFICATIONS

6.1 Gas Hob Specifications

- **Model:** JPK4GV200143 (Part of pack)
- **Type:** 4 Gas Burner Hob
- **Surface Material:** Tempered Glass
- **Grates Material:** Cast Iron
- **Dimensions (WxHxD):** 600mm x 40mm x 510mm
- **Voltage & Frequency:** 220-240V~ 50/60Hz (for ignition)
- **Gas Type & Pressure:** GN(G20)/20mbar, GPL(G30/31)28-30/37mbar
- **Burner Power:**
 - Triple Burner: 3.5 KW
 - Semi-rapid Burners (x2): 1.75 KW each
 - Auxiliary Burner: 1.0 KW
- **Safety Features:** Thermocouple, Automatic Ignition
- **Net Weight:** 10.4 Kg

6.2 Electric Oven Specifications

- **Model:** JPK4GV200143 (Part of pack)
- **Type:** Built-in Electric Oven
- **Capacity:** 58 Liters
- **Dimensions (WxHxD):** 595mm x 595mm x 530mm

- **Voltage & Frequency:** 220-240V~ 50Hz
- **Total Power:** 2900W
- **Temperature Range:** 50-250°C (Adjustable Thermostat)
- **Timer:** 0-120 minutes (Mechanical)
- **Interior:** Enamel Cavity, 25W Oven Light
- **Door:** Double Glass, Removable
- **Features:** Cooling Fan, Mechanical Controls
- **Accessories:** 1 Tray, 1 Grid
- **Energy Class:** A
- **Net Weight:** 27.5 Kg

7. WARRANTY AND CUSTOMER SUPPORT

Jocel appliances are manufactured to high-quality standards. This product is covered by a manufacturer's warranty, subject to the terms and conditions valid in your country of purchase. Please retain your proof of purchase for any warranty claims. For technical assistance, spare parts, or warranty service, please contact your retailer or the authorized Jocel service center in your region. Contact details can typically be found on the Jocel official website or on your purchase documentation.

Note: Any repairs or interventions on the appliance must be carried out by qualified personnel using original spare parts.