

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Craftsman](#) /

› Craftsman 57939 Wireless Garage Door Keypad User Manual

## Craftsman 57939

# Craftsman 57939 Wireless Garage Door Keypad User Manual

Model: 57939 | Compatible with Craftsman 100 Series Openers (e.g., 200.57933)

## INTRODUCTION

---

The Craftsman 57939 Wireless Garage Door Keypad provides convenient, keyless access to your garage. Designed for compatibility with Sears Craftsman 100 series garage door openers, including model 200-77933, this keypad allows you to program a personal identification number (PIN) for secure entry. Its durable design includes a flip-up cover to protect the keys and back illumination for easy nighttime use.



Image: The Craftsman 57939 Wireless Garage Door Keypad with its protective cover open, revealing the numeric keypad and a diagram for programming instructions.

## PRODUCT FEATURES

---

- **Multi-Opener Activation:** Capable of activating multiple garage door openers using different PIN codes.
- **Multiple PIN Codes:** Supports multiple 1 to 6 digit PIN codes for a single opener, allowing up to 20 keypad codes or remote controls to be programmed.
- **Easy Programming:** Simple programming process by putting the opener into learn mode, entering a PIN, and pressing ENTER.
- **Backlit Keypad:** Keys are backlit for improved visibility and ease of use in low-light conditions.

- **Easy Installation:** Designed for straightforward installation with two included screws.
- **Protective Cover:** Features a flip-up cover to shield the keys when not in use.
- **Direction Control:** After activating the opener, pressing ENTER within 30 seconds can stop or reverse the door's direction.

## PRODUCT SPECIFICATIONS

---

Specification	Detail
Power Source	3V, using two AA Alkaline batteries (included)
Code Type	Multiple 1 to 6 digit PIN codes
Dimensions (H x W x D)	6.25 x 2.50 x 1.00 inches (approximately)
Compatibility	Sears Craftsman 100 series garage door openers (e.g., Model 200-77933)
Manufacturer Part Number	57939

## SETUP AND INSTALLATION

---

### 1. Unpacking and Contents

Your Craftsman 57939 Wireless Garage Door Keypad comes new in blister packaging. Please verify that the package contains the keypad unit, two AA Alkaline batteries, and mounting screws.



*Image: The Craftsman 57939 Wireless Keyless Entry Pad in its original retail blister packaging, clearly showing the keypad unit, two AA batteries, and mounting hardware.*

## 2. Battery Installation

The keypad requires two AA Alkaline batteries for operation. These are typically pre-installed or included in the packaging. Ensure they are correctly inserted according to the polarity markings inside the battery compartment.

## 3. Mounting the Keypad

Select a convenient location outside your garage, within range of your garage door opener. The keypad is designed for easy installation using the two included screws. Mark the desired mounting points, drill pilot holes if necessary, and secure the keypad firmly to the surface.



*Image: The rear view of the Craftsman 57939 Keypad, displaying the screw mounting points for installation and the model number "303KP" and FCC ID.*

## OPERATING INSTRUCTIONS

---

### 1. Programming Your Personal Identification Number (PIN)

To program your keypad, you will need to access the "LEARN" button on your garage door opener. The programming steps are typically found on a label under the keypad's flip-up cover.

1. Locate and press the "LEARN" button on the rear control panel of your garage door opener. The LED light on the opener will illuminate, indicating it is in learn mode.
2. Within 30 seconds, enter your desired 1 to 6 digit PIN code on the keypad.

3. Press the "ENTER" key on the keypad. The opener's light will flash once or twice, and the unit will beep, confirming that the PIN has been successfully stored in memory.
4. Test the new PIN by entering it and pressing "ENTER". Your garage door should activate.



Image: The Craftsman 57939 Keypad with its cover fully open, clearly displaying the "Programming Keyless Entry" instructions and diagrams printed on the inside of the cover.

## 2. Activating the Garage Door

To open or close your garage door, simply enter your programmed PIN code and press the "ENTER" key. The keypad's backlight will assist with visibility in the dark.



*Image: A direct front view of the Craftsman 57939 Keypad with its protective cover closed, highlighting the numeric buttons and the "CRAFTSMAN" logo.*

### **3. Stopping or Reversing Door Movement**

Similar to a remote control, if the garage door is in motion after activation, you can stop its movement by pressing the "ENTER" key again within 30 seconds. Pressing "ENTER" a third time within the same timeframe can reverse the door's direction.

### **4. Erasing PIN Codes**

To erase existing PIN codes from the keypad, you must clear the memory of your garage door opener. Refer to your garage door opener's manual for specific instructions on how to clear its memory. After clearing, all remote controls and PIN codes will need to be reprogrammed.

## MAINTENANCE

---

### 1. Battery Replacement

When the keypad's backlight dims or the unit becomes unresponsive, it is likely time to replace the batteries. The keypad uses two AA Alkaline batteries. To replace them, open the battery compartment (usually located on the back or bottom of the unit), remove the old batteries, and insert new ones, ensuring correct polarity. Dispose of old batteries responsibly.

### 2. Cleaning

To clean the keypad, use a soft, damp cloth. Avoid using abrasive cleaners or solvents, as these can damage the keypad's surface or electronic components. Ensure the keypad is dry before closing the cover.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Keypad does not respond.	Dead or low batteries.	Replace the two AA Alkaline batteries.
Keypad does not activate opener.	Incorrect PIN entered; Keypad not programmed to opener; Opener memory full or cleared.	Verify PIN; Reprogram keypad to opener (see Operating Instructions); Clear opener memory and reprogram all devices if necessary.
Backlight is dim or not working.	Low batteries.	Replace the two AA Alkaline batteries.
Keypad cover is stiff or damaged.	Dirt/debris; Physical damage.	Clean around the hinge area; If damaged, consider replacement.

## WARRANTY AND SUPPORT

---

### Manufacturer's Warranty

This Craftsman 57939 Wireless Garage Door Keypad comes with a One-Year manufacturer's warranty from the date of sale, covering defects in material or workmanship. Proof of sale is required for warranty claims. This warranty is void if the product has been used while providing commercial services or if related to another person.

For full warranty details and terms, please refer to the information provided with your product packaging or visit the official Craftsman website.



Image: The back of the Craftsman 57939 Keypad's blister packaging, detailing compatibility with Craftsman Series 100 garage door openers and outlining the Craftsman Limited Warranty.

## Compatibility and Further Information

This entry pad is exclusively compatible with the Craftsman Series 100 garage door opener. For a comprehensive list of compatible models and to explore the full line of Craftsman products, please visit the official Craftsman website: [craftsman.com](https://craftsman.com).

