

[Manuals.plus](#) /

› [Brondi](#) /

› Brondi Bravo Bright Cordless Phone User Manual (Model 10276031)

Brondi 10276031

Brondi Bravo Bright Cordless Phone User Manual

Model: 10276031

INTRODUCTION

Thank you for choosing the Brondi Bravo Bright Cordless Phone. This manual provides essential information for setting up, operating, and maintaining your new phone. Please read these instructions carefully before use to ensure optimal performance and longevity of your device.

PACKAGE CONTENTS

Before you begin, please check that all items are present in the package:

- Brondi Bravo Bright Handset
- Charging Base
- Telephone Line Cord
- Power Adapter
- Rechargeable Batteries (usually pre-installed or included)



Image: Front view of the Brondi Bravo Bright Cordless Phone in white, showing the large display and keypad.

SETUP

1. Connecting the Base Station

1. Connect the telephone line cord to the **LINE** socket on the base station and to your telephone wall socket.
2. Connect the power adapter to the **POWER** socket on the base station and then plug it into a mains power outlet.
3. Place the base station on a flat, stable surface, away from heat sources and direct sunlight.

2. Battery Installation and Charging

1. Open the battery compartment cover on the back of the handset.
2. Insert the supplied rechargeable batteries, observing the correct polarity (+/-).
3. Close the battery compartment cover.
4. Place the handset on the charging base. The display will indicate charging.
5. Allow the handset to charge for at least **12-15 hours** before initial use to ensure full battery capacity.





Image: Side view of the Brondi Bravo Bright Cordless Phone handset resting on its charging base.

3. Handset Registration (for additional handsets or re-registration)

Your Brondi Bravo Bright supports ECO DECT GAP, allowing up to 5 handsets to be registered to one base station.

1. On the base station, press and hold the **PAGE/LOCATE** button for approximately 5 seconds until the registration indicator on the base starts flashing.
2. On the handset, navigate to the **MENU**, then select **REGISTRATION** or **ADD HANDSET**.
3. Enter the system PIN (default is usually **0000** or **1234**). Refer to the display for confirmation.
4. Once registered, the handset will display its assigned number (e.g., Handset 1).

OPERATING INSTRUCTIONS

Making a Call

1. Lift the handset from the base or press the **CALL** button (green receiver icon).
2. Dial the desired phone number.
3. Press the **CALL** button again if you pre-dialed the number.

Receiving a Call

When the phone rings, lift the handset from the base or press the **CALL** button (green receiver icon) to answer.

Using the Speakerphone (Hands-Free)

During a call, press the **SPEAKERPHONE** button (usually indicated by a speaker icon) to activate hands-free mode. Press it again to return to handset mode.

Adjusting Volume

Use the **UP/DOWN** navigation buttons on the side of the handset to adjust the earpiece or speakerphone volume during a call. The phone features high ring and listening volume.

BOOST Function

For amplified listening, press the dedicated **BOOST** button during a call. This increases the audio volume for clearer conversations, especially useful for users with hearing difficulties.

Backlit Display

The large backlit display provides clear visibility of caller ID, menu options, and other information, even in low-light conditions.

Phonebook

To store a contact:

1. Press the **MENU** button.
2. Navigate to **PHONEBOOK** or **CONTACTS** and select **ADD NEW ENTRY**.
3. Enter the name and phone number using the keypad.
4. Press **SAVE** or **OK** to store the entry.

To dial from the phonebook:

1. Press the **PHONEBOOK** button (often a dedicated button or accessible via **MENU**).
2. Scroll through the entries using the **UP/DOWN** navigation buttons.
3. Press the **CALL** button to dial the selected contact.

MAINTENANCE

Cleaning

- Wipe the handset and base station with a soft, damp cloth.
- Do not use abrasive cleaners or solvents, as these can damage the surface.
- Ensure the device is unplugged from the power outlet before cleaning.

Battery Care

- Use only the specified rechargeable batteries.
- If the phone will not be used for an extended period, remove the batteries to prevent leakage.
- Dispose of old batteries responsibly according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No dial tone	Telephone line cord not connected or faulty.	Check the telephone line cord connection. Try another phone in the same socket.
Handset not charging	Handset not correctly placed on base; power adapter not connected.	Ensure the handset is properly seated. Check power adapter connection to base and mains.
Poor sound quality	Handset too far from base; interference.	Move closer to the base station. Avoid placing the base near other electronic devices.

Problem	Possible Cause	Solution
Handset displays "Not Registered"	Handset has lost registration with the base.	Follow the "Handset Registration" steps in the Setup section.

SPECIFICATIONS

Brand: Brondi

Model Number: 10276031

Color: White

Phone Type: Cordless

Material: Acrylonitrile Butadiene Styrene (ABS)

Power Source: Battery Powered

Item Dimensions (LxWxH): 15 x 10 x 20 cm (5.9 x 3.9 x 7.9 inches)

Compatible Devices: DECT GAP devices

Multi-line Operation: Single Line

Standby Time: 100 hours

Talk Time: 10 hours

Caller ID: Yes

Answering System Type: Digital

WARRANTY AND SUPPORT

Warranty Information

This Brondi Bravo Bright Cordless Phone comes with a **2-year manufacturer's warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

Customer Support

For technical assistance, troubleshooting, or warranty service, please contact Brondi customer support. Refer to the official Brondi website or product packaging for the most up-to-date contact information.

[Visit the Brondi Store on Amazon](#) for more information and products.

