

[manuals.plus](#) /

› [Brondi](#) /

› **Brondi PRESIDENT Mobile Phone User Manual**

Brondi PRESIDENT

Brondi PRESIDENT Mobile Phone User Manual

Model: PRESIDENT

INTRODUCTION

Welcome to the user manual for your Brondi PRESIDENT mobile phone. This device is an ultra-slim dual SIM GSM mobile phone featuring an active flip design and a large 3-inch full-color display, designed for ease of use and clear visibility.

Please read this manual carefully to understand the functions and operation of your new phone. Keep it for future reference.



Image: Brondi PRESIDENT mobile phone in its closed state. The front panel displays illuminated icons for incoming calls (phone icon), new messages (envelope icon), and battery status (battery icon), indicating active notifications.

WHAT'S IN THE Box

Upon opening the package, ensure all items are present:

- Brondi PRESIDENT Mobile Phone
- Charger for mobile phone
- Earphones with microphone
- Li-ion 800 mAh Battery

SETUP

1. Installing the SIM Card(s) and Micro SD Card

1. Carefully open the back cover of the phone.
2. Insert your SIM card(s) into the designated SIM slots. This phone supports Dual SIM functionality.
3. If desired, insert a Micro SD card (up to 32GB) into the Micro SD slot for additional storage.
4. Close the back cover securely.

2. Installing the Battery

1. After installing the SIM/Micro SD cards, place the Li-ion 800 mAh battery into its compartment, ensuring the contacts align correctly.
2. Replace the back cover firmly until it clicks into place.

3. Charging the Phone

1. Connect the charger to the phone's charging port (Micro USB).
2. Plug the charger into a power outlet.
3. Allow the phone to charge completely before first use. The battery indicator on the screen will show charging status.

OPERATING INSTRUCTIONS

1. Power On/Off

- **To Power On:** Press and hold the Power/End Call button until the screen lights up.
- **To Power Off:** Press and hold the Power/End Call button, then confirm power off on the screen.

2. Making and Receiving Calls



Image: Brondi PRESIDENT mobile phone in its open position, revealing the 3-inch color display at the top and the numeric keypad below. The screen shows network status, SIM card information, time, and date, while the keypad features clearly labeled buttons for dialing and navigation.

- **Making a Call:** Open the flip. Dial the number using the keypad and press the Call button (green receiver icon).

- **Receiving a Call (Active Flip):** Simply open the flip to answer an incoming call.
- **Ending a Call (Active Flip):** Close the flip to end an active call, or press the End Call button (red receiver icon).

3. Messaging (SMS)

To send and receive text messages, navigate to the "Messages" menu. You can compose new messages using the keypad.

4. Camera

The phone is equipped with a 1.3 Megapixel camera. Access the camera from the main menu to take photos.

5. FM Radio

To listen to FM radio, connect the included earphones (which act as an antenna) and select the "FM Radio" option from the menu.

6. Audio Player

The phone includes an audio player that supports WAV and JPG files. You can store media on a Micro SD card.

7. Phonebook

Store up to 300 alphanumeric contacts in the phonebook. Access it from the main menu to add, edit, or delete contacts.

8. Bluetooth

Enable Bluetooth from the settings menu to connect to compatible devices such as headsets or other phones for file transfer.

MAINTENANCE

1. Cleaning Your Phone

- Use a soft, dry cloth to clean the phone's exterior.
- Avoid using liquid cleaners or aerosols, as they may damage the device.

2. Battery Care

- To prolong battery life, avoid exposing the phone to extreme temperatures.
- Charge the battery regularly, but avoid overcharging for extended periods.

TROUBLESHOOTING

If you encounter issues with your Brondi PRESIDENT phone, try the following steps:

- **Phone does not turn on:** Ensure the battery is correctly installed and charged.
- **Cannot make/receive calls:** Check if the SIM card is properly inserted and if you have network coverage.
- **Poor audio quality:** Ensure the volume is adjusted correctly. Check if the earphones are properly connected if using them.

- **Phone freezes:** Remove and reinsert the battery to perform a soft reset.

For persistent issues, please contact customer support.

SPECIFICATIONS

Feature	Description
Model Name	PRESIDENT
Item Model Number	10275070
Operating System	Proprietary
Product Type	Flip Phone
Display	3-inch Full Color (240 x 320 resolution)
SIM Support	Dual SIM
Cellular Technology	GSM (850/900/1800/1900 MHz)
Camera	1.3 Megapixels
External Memory	Micro SD slot (up to 32 GB)
Connectivity	Bluetooth, Micro USB 2.0
Audio Jack	3.5 mm Headphone Output
Battery	Li-ion 800 mAh
Talk Time	Up to 240 minutes
Standby Time	Up to 178 hours
Dimensions (Closed)	112 x 59 x 14 mm
Special Features	Active Flip (answer/end calls by opening/closing), FM Radio, Audio Player (WAV, JPG, Video), 300 Phonebook Memories, Vibracall, Earphones with microphone included

WARRANTY AND SUPPORT

Your Brondi PRESIDENT mobile phone comes with a standard manufacturer's warranty. Please refer to

the warranty card included in your product packaging for specific terms and conditions.

For technical support, service, or warranty claims, please contact your retailer or visit the official Brondi website for contact information.

© 2024 Brondi. All rights reserved.